JVC

SERVICE MANUAL

25" COLOUR TV

AV-25F1EK

BASIC CHASSIS
JX

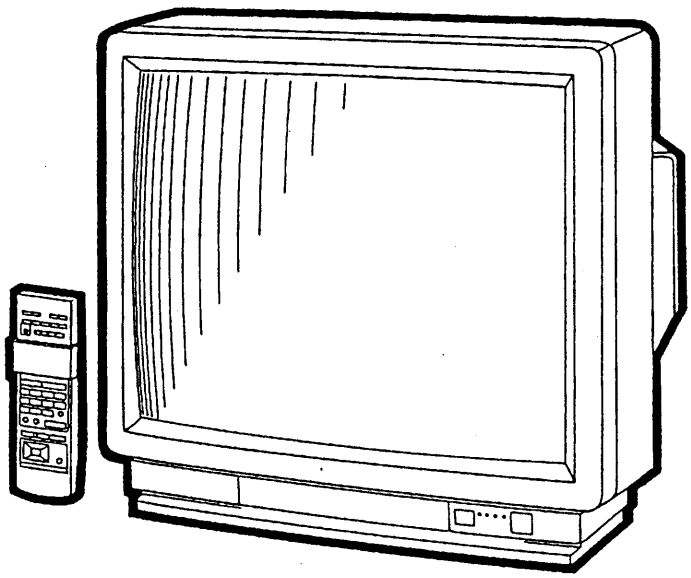

CONTENTS

- SPECIFICATIONS 2
- SAFETY PRECAUTIONS 3
- OPERATING INSTRUCTIONS (APPENDED)
- MAIN PARTS LOCATION 5
- SPECIFIC SERVICE INSTRUCTIONS 6
- SERVICE ADJUSTMENTS 9
- SCHEMATIC DIAGRAM (APPENDED)
- PARTS LIST 17

COPYRIGHT © 1990 VICTOR COMPANY OF JAPAN,LTD.

No.50383
June.1990

SPECIFICATIONS

Item	Content
Type	Colour Television
TV RF System	CCIR I
Color System	PAL
Stereo System	NICAM (I system)
TEXT System	FLOF (United Kingdom system)
Number of Program Channel	00(AV), 01～99
Recieving Channel and Frequency	Channel = UHF 21～69ch
	Frequency = 470MHz～862MHz
Intermediate Frequency	V.IF = 39.5MHz
	S.IF = 33.5MHz
Colour Sub Carrier	4.43MHz
Aerial Input Impoedance	75Ω,Unbalanced
Power Input	AC 240V,50Hz
Power Consumption	120W
Size of Picture Tube	59cm
	diagonally measured; black-line picture tube
Audio Power Output	
Peak Music Power	20W + 20W
Music Power	10W + 10W
Speaker	10cm Round ×2
	3cm Round ×2
Conection Terminal	
EXT 1	21pin Euroconnector (SCART)
EXT 2	21pin Euroconnector (SCART)
	Accepts Y/C separated signals,
EXT 3	Y/C separate video input connector
	Audio input connector(RCA)
	Bridge connection(front/rear)
Variable Audio Outout	RCA
Sperker Terminal	External Speaker
	Impedance = 8～16Ω
Dimensions (W×H×D)	575×512×448mm
Weight	29.7kg
Accessories	Remote control unit (RM-C861)×1
	R6 size dry cell battery ×2

Design & specification subject to change without notice.

SAFETY PRECAUTIONS

1. The design of this product contains special hardware and many circuits and components specially for safety purposes. For continued protection, no changes should be made to the original design unless authorized in writing by the manufacturer. Replacement parts must be identical to those used in the original circuits. Service should be performed by qualified personnel only.
2. Alterations of the design or circuitry of the product should not be made. Any design alterations or additions will void the manufacturer's warranty and will further relieve the manufacturer of responsibility for personal injury or property damage resulting therefrom.
3. Many electrical and mechanical parts in the product have special safety-related characteristics. These characteristics are often not evident from visual inspection nor can the protection afforded by them necessarily be obtained by using replace ment components rated for higher voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in the Parts List of Service Manual. Electrical components having such features are identified by shading on the schematics and by (⚠) on the Parts List in the Service Manual. The use of a substitute replacement which does not have the same safety characteristics as the recommended replacement part shown in the Parts List of Service Manual may create shock, fire, or other hazards.
4. The leads in the products are routed and dressed with ties, clamps, tubings, barriers and the like to be separated from live parts, high temperature parts, moving parts and/or sharp edges for the prevention of electric shock and fire hazard. When service is required, the original lead routing and dress should be observed, and it should be confirmed that they have been returned to normal, after re-assembling.

WARNING

1. This equipment has been designed and manufactured to meet international safety standards.
2. It is the legal responsibility of the repairer to ensure that these safety standards are maintained.
3. Repairs must be made in accordance with the relevant safety standards.
4. It is essential that safety critical components are replaced by approved parts.
5. If mains voltage selector is provided, check setting for local voltage.

OPERATING INSTRUCTIONS

INFORMATION

Refer to the explanation leaflet inserted between Page 4 and 5 of Service Manual for details of handing.

For Service Manuals
MAURITRON SERVICES
8 Cherry Tree Road, Chinnor
Oxfordshire, OX9 4QY.
Tel (01844) 351694
Fax (01844) 352554
email:- mauritron@dial.pipex.com

MAIN PARTS LOCATIONS

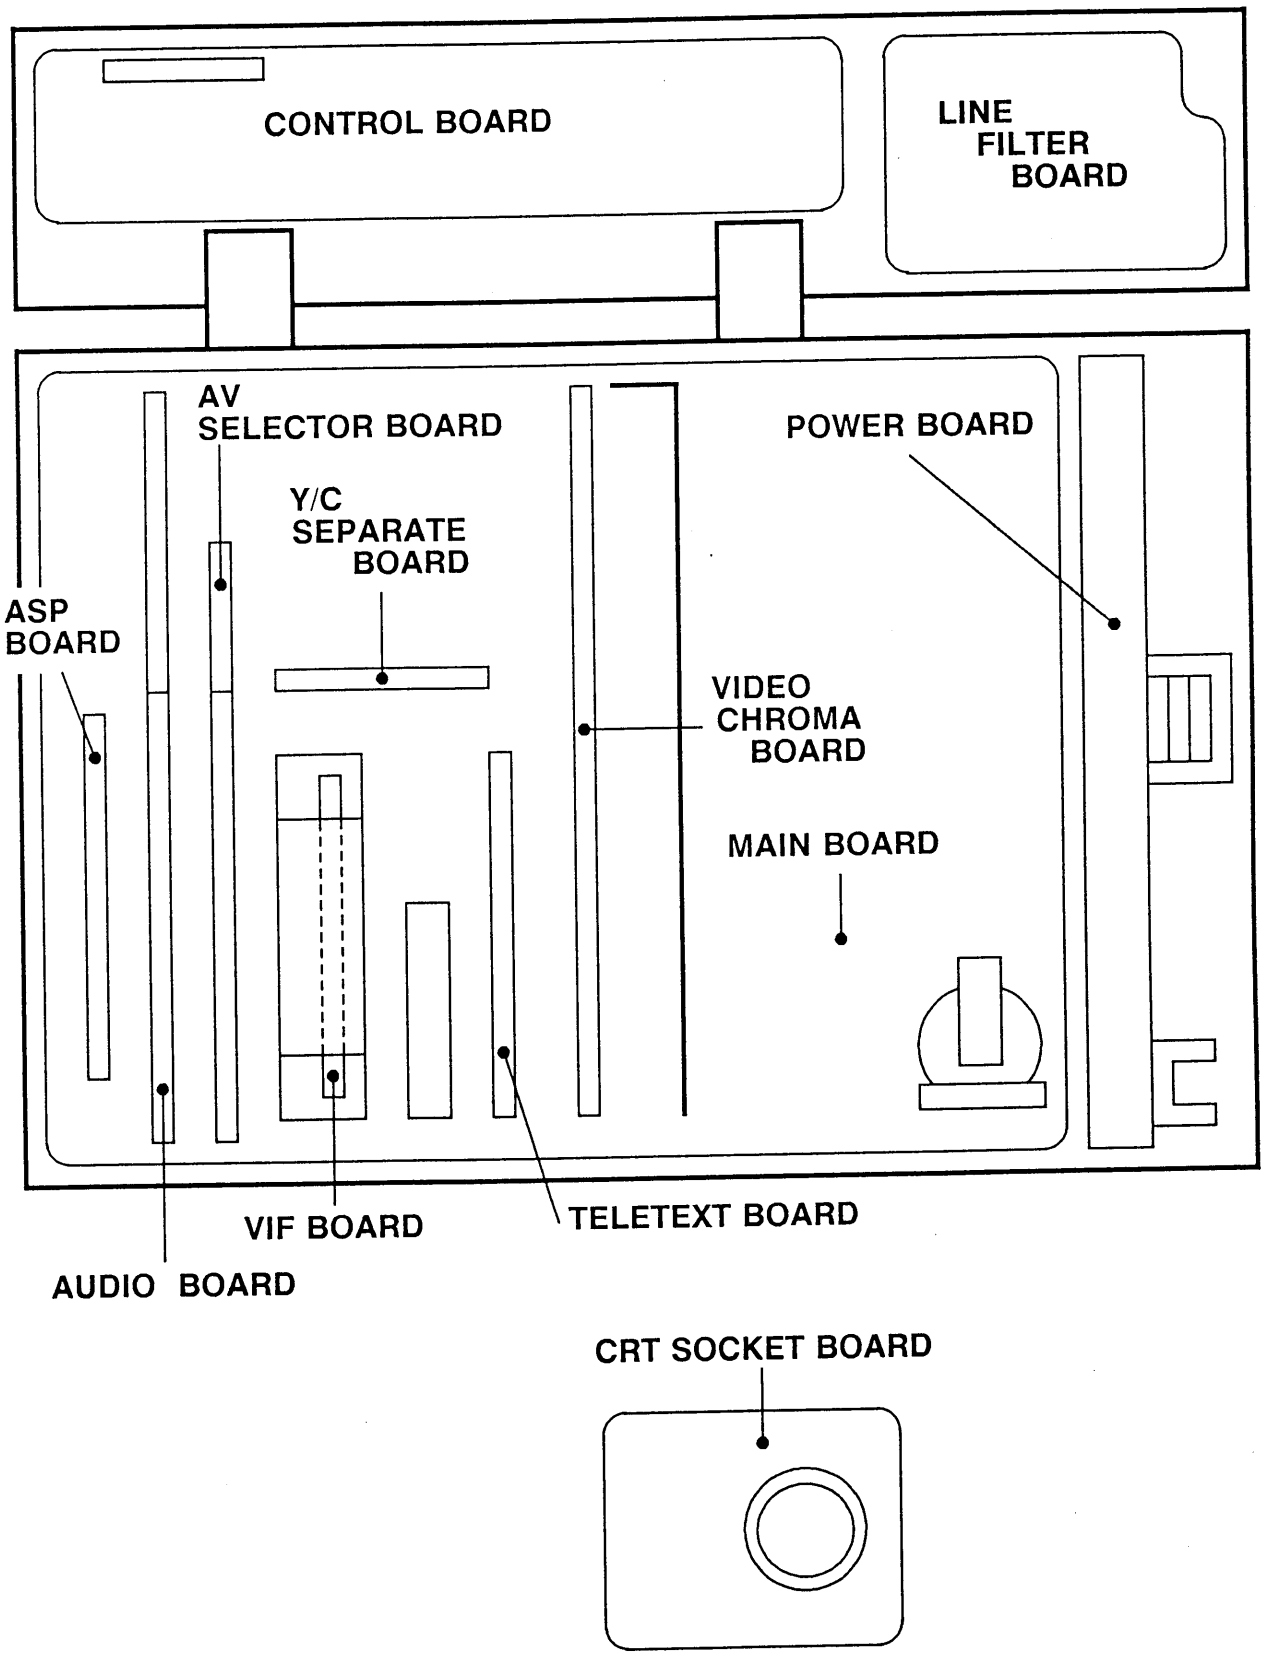

SPECIFIC SERVICE INSTRUCTIONS

DISASSEMBLY PROCEDURE

■ Removing the rear cover

1. The rear cover can be removed by removing the 9 screws of Ⓐ as shown in Fig.1.

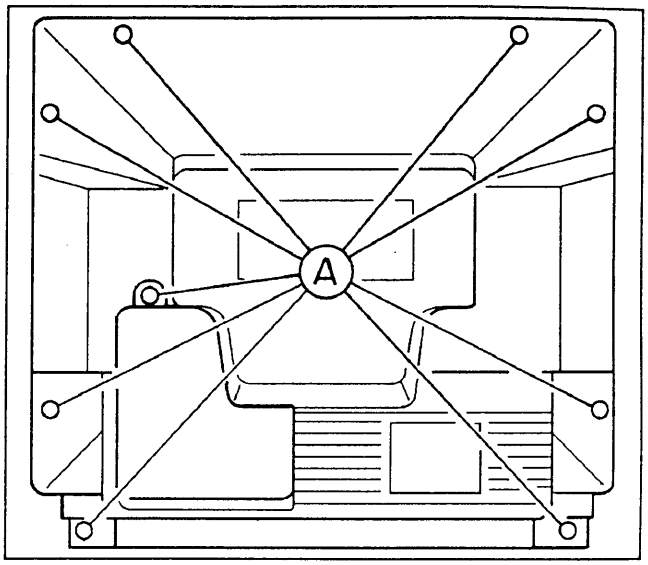

Fig.1 Removing the rear cover

■ Removing the speaker box

1. Remove the rear cover.
2. The speaker can be removed by pulling it in the direction of arrow ⓐ shown in Fig.2.
3. The opposite side can be removed in the same way.

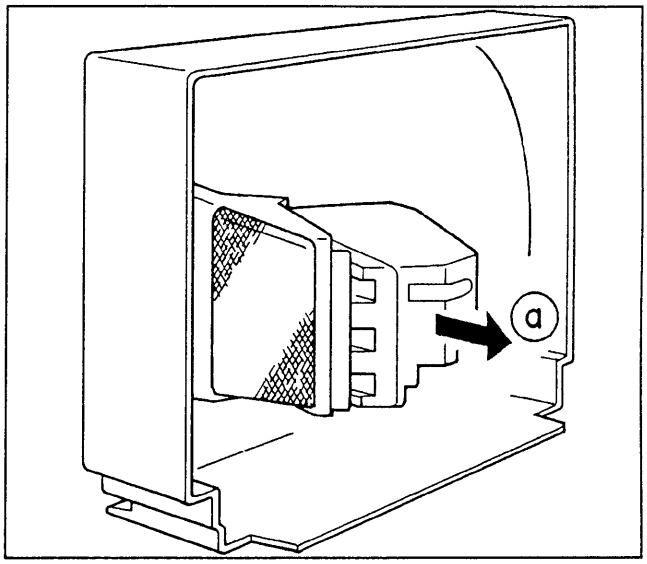

Fig.2 Removing the speaker box

■ Removing the chassis

1. Remove the rear cover.
2. Remove both sides of the speaker box.
3. Draw out the chassis in the direction of arrow ⓑ.

Note) Before performing the conductivity check, make sure that the ground of the CRT is connected.

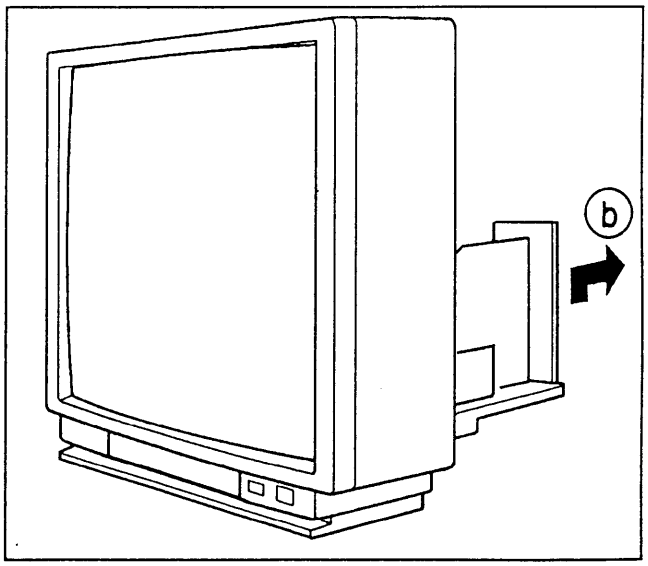

Fig.3 Removing the chassis

■ Removing the POWER BOARD

1. Remove the chassis.
2. The POWER BOARD can be removed by pulling a little bit in the direction of arrow ⓒ and lifting up while pressing claw Ⓒ.

■ Removing the terminal cover

1. Remove the chassis.
2. The terminal cover can be removed by pressing claw Ⓓ and lifting claw Ⓔ, then pulling it in the direction of arrow ⓓ.

■ Removing the front chassis

1. The front chassis can be removed by opening claw Ⓕ and lifting it in the direction of arrow ⓔ.

■ Removing the upright board

1. Remove the terminal cover.
2. The upright board stands on the MAIN BOARD with the connector. Lift out the board for replacement.

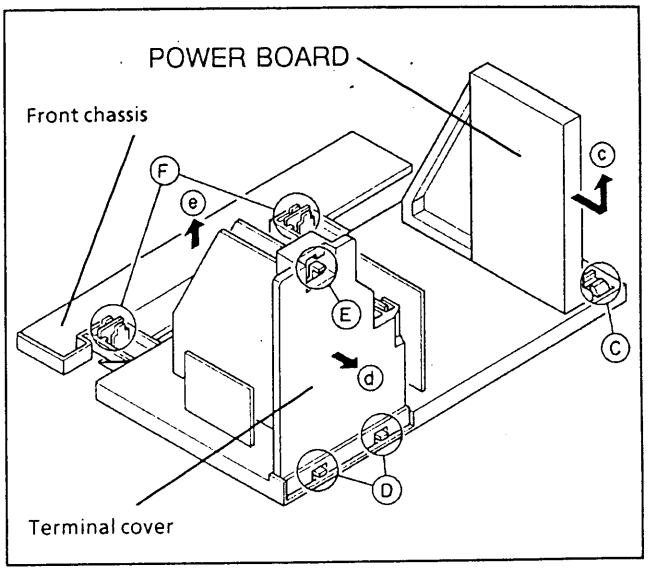

Fig.4 Removing the board

■ Removing the speaker

1. The speaker cover can be removed by removing the 4 screws of Ⓖ shown in Fig.5.
2. The speaker grill can be removed by removing the 4 screws of Ⓙ.
3. Speaker 1 can be removed by removing the 4 screws of Ⓘ.
4. Speaker 2 can be removed by removing the 2 screws of Ⓗ.

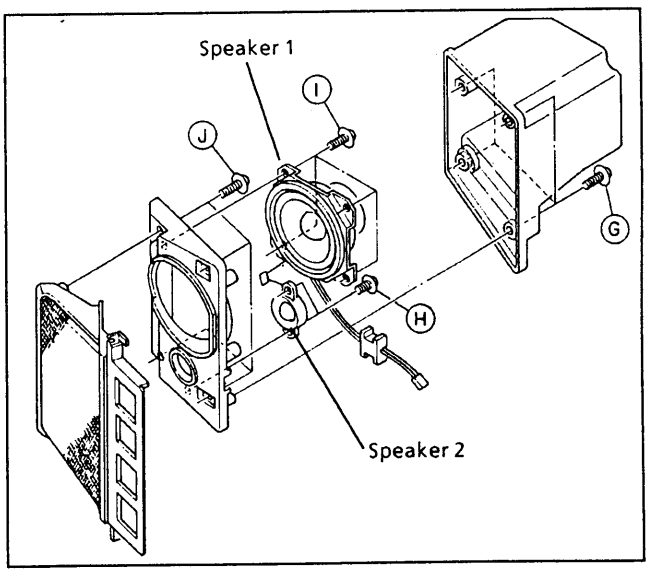

Fig.5 Removing the speakers

■ Repair and inspection

1. Position the removed chassis as shown in Fig. 6.

Note) When performing the conductivity check, make sure that the CRT ground wire is connected with the ground of the chassis and the CRT socket board.

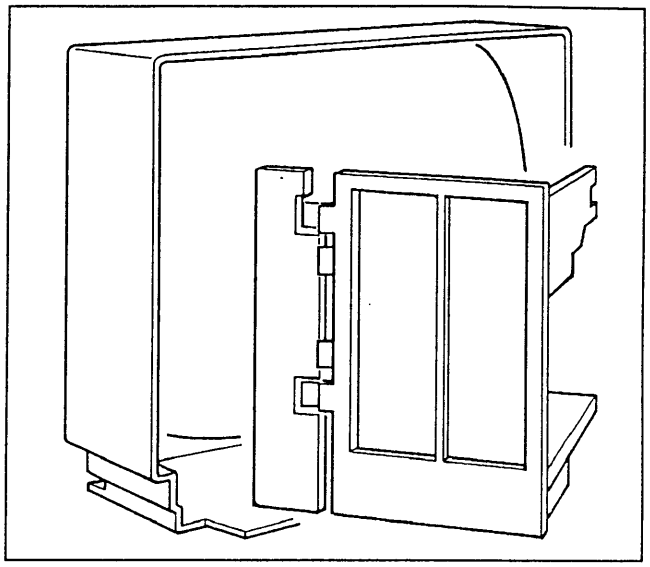

Fig.6 Repair and inspection

■ Concerning wire clamp, cable fastener and connector

1. Clamp the wire securely.
2. Do not remove the cable fastener for wire handling. If it is removed, make sure to replace it in the original position. (Insulating material must be used.)
3. The removed connector must be inserted in the original place.

Note at time of repair

■ Before servicing

1. The user can perform adjustments such as colour and brightness with this unit.
2. Because of the above, when accepting a repair request, take a record of the contents shown in table 1 beforehand.
3. Restore to the original status after completing repairs.
4. For other User Positions (such as Tone Preset), talk to the user.

TV	EXT-1	EXT-2	EXT-3
Colour	←	←	←
Bright	←	←	←
Cont.	←	←	←
Sharp	←	←	←
Bass	←	←	←
Treble	←	←	←
Balance	←	←	←

Table 1

■ Concerning the repair tool

Repair for this machine can be difficult since the board stands on the MAIN BOARD. For this reason, an extension tool is provided which extends the distance between the MAIN BOARD and the upright board.

Product number(1 SETS) : TV-J001

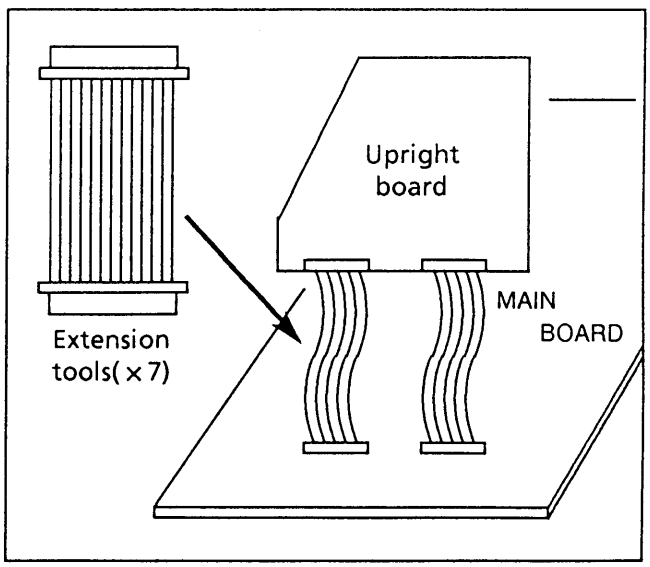

Fig.7 Extension tools

SERVICE ADJUSTMENTS

TOOLS AND FIXTURES FOR ADJUSTMENT

- DC VOLTMETER
- OSCILLOSCOPE
- PATTERN GENERATOR(PAL)

<table>
<tr><th>No.</th><th>Item</th><th>Measuring instrument</th><th>Test point</th><th>Adjustment part</th><th>Description</th></tr>
<tr><td>1</td><td>B1 Voltage adjustment</td><td>Pattern generator

Voltmeter</td><td>TP-B1
TP-E
[POWER BOARD]</td><td>R032 (B1 ADJ)
[POWER BOARD]</td><td>1. Input cross hatch signals.
2. Connect the voltmeter between TP-B1 and TP-E and check that B1 voltage is 142.0 ± 0.5V.
3. If the voltage is incorrect, adjust R032 (B1 ADJ).</td></tr>
<tr><td colspan="6"> 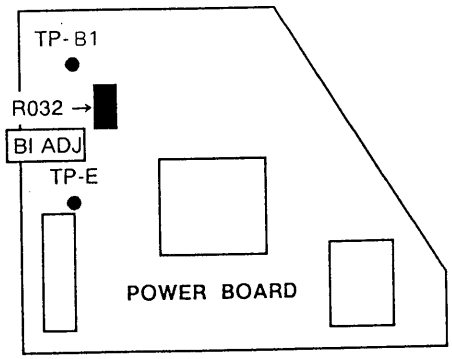
</td></tr>
<tr><td>2</td><td>FOCUS adjustment</td><td>Pattern generator</td><td></td><td>FOCUS VR
[MAIN BOARD]</td><td>1. Input a cross hatch signal.
2. By watching the screen, adjust the cross hatch using FOCUS VR so that the vertical and horizontal line is the thinnest and clearest possible.
3. Check that focus is clear when the screen is darkened.
NOTE Set FOCUS VR to the left (toward low voltage) as much as possible.</td></tr>
<tr><td colspan="6"> 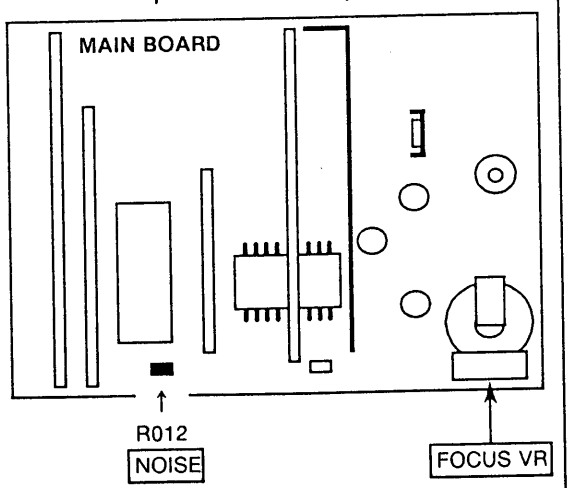
</td></tr>
<tr><td>3</td><td>NOISE adjustment</td><td></td><td></td><td>R012 (NOISE)
[MAIN BOARD]</td><td>1. Allow noise to appear on the screen using R012 (NOISE).
2. Allow noise to disappear from the screen using R012 (NOISE).
3. Check that there is no abnormality in other channels.</td></tr>
</table>

No.	Item	Measuring instrument	Test point	Adjustment part	Description
4	Vertical linearity · vertical center · vertical amplitude adjustment	Pattern generator		R406 (V.LIN) R412 (V.HEIGHT) [VIDEO CHROMA BOARD] S541 (V.CENTER SW) [MAIN BOARD]	1. Input a monoscope signal. (If a monoscope signal is not available, input a cross hatch signal) 2 Using R406 (V.LIN), adjust the upper and lower patterns to make a well-balanced circle. 3. Adjust using S541 (V.CENTER SW) so that the pattern comes to the center of the screen. 4. Adjust using R412 (V.HEIGHT) so that the pattern is 92% of the upper and lower patterns. 5. Repeat steps 2 to 4 as necessary.
5	Distorted pin correction, distorted keystone correction, horizontal center, horizontal amplitude adjustment	Pattern generator		R568 (distorted pin correction), R564 (distorted keystone correction), R572 (horizontal amplitude) [MAIN BOARD] R520 (H.CENTER) [VIDEO CHROMA BOARD]	1. Input a cross hatch signal. 2. Adjust using R568 (distorted pin correction) and R564 (distorted keystone correction) so that the vertical line which is the first line from the end of the cross hatch is straight and also parallel with the other lines. 3. Input a monoscope signal. (If a monoscope signal is not available, input a cross hatch signal) 4. Adjust using R520 (H.CENTER). (A = A) so that the distances from both ends to the vertical lines are equal. 5. Adjust using R572 (horizontal amplitude) so that the horizontal amplitude is 92±0.5%. 6. Repeat steps 2 to 5 as necessary.

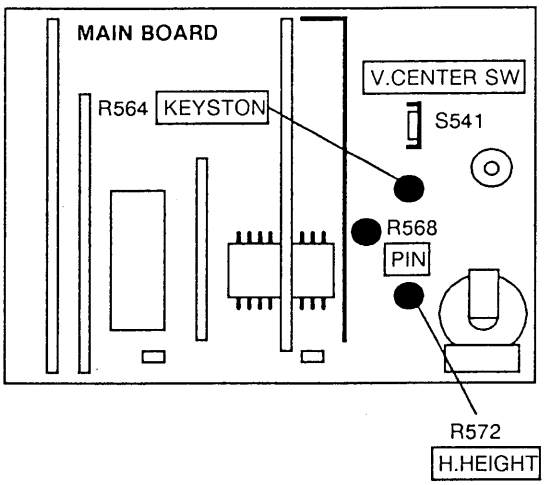

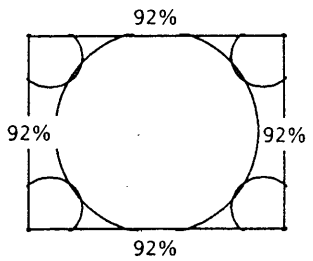

VIDEO CHROMA BOARD

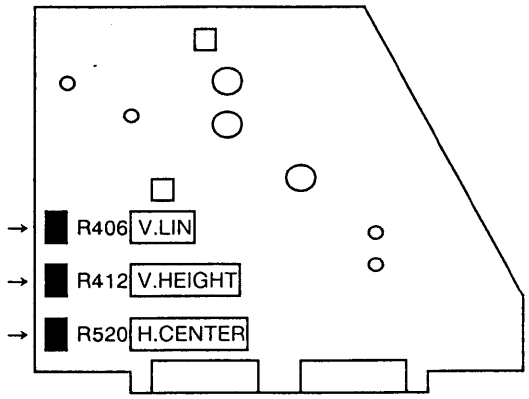

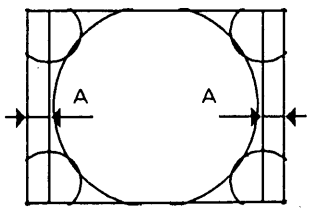

No.	Item	Measuring instrument	Test point	Adjustment part	Description
6	VSM RESET adjustment	Remote control (remote control with STANDARD button is ideal)			Before performing this adjustment, record levels such as COLOUR, CONT, BRIGHT, and SHARP. Restore the previous levels after repair. 1. Obtain the menu with the remote control and set the levels of COLOUR, CONT, BRIGHT and a SHARP to the center. 2. Perform this adjustment with TV, EXT1, EXT2 and EXT3. NOTE When remote control with the STANDARD button is available, just press the TV, EXT1, EXT2 and EXT3 buttons of STANDARD.
7	SUB BRIGHT adjustment	Pattern generator		R373 (SUB BRIGHT) [MAIN BOARD]	1. Input Black signal. 2. Adjustment is performed using R373 (SUB BRIGHT) just before the screen begins to brighten.
8	SCREEN adjustment	Pattern generator Oscilloscope	TP-B TP-G TP-R TP-E [CRT SOCKET BOARD]	SCREEN VR [MAIN BOARD]	1. Input a cross hatch signal. 2. Connect the oscilloscope with TP-B, TP-G and TP-R and fully rotate the SCREEN VR to the left, then rotate it to the right little by little until line A does not move. 3. In the 3 test points, adjust the distance between A – B to be a minimum of 10V.

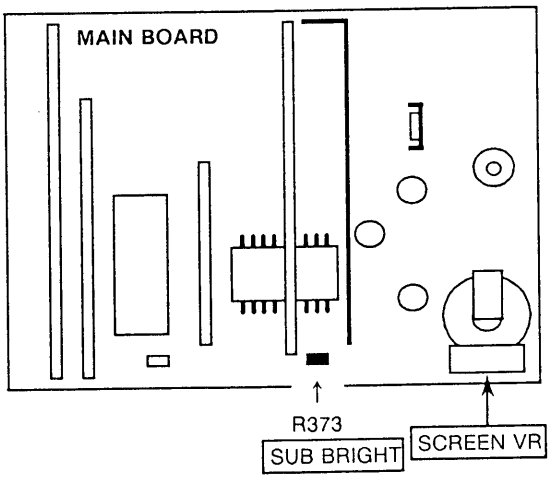

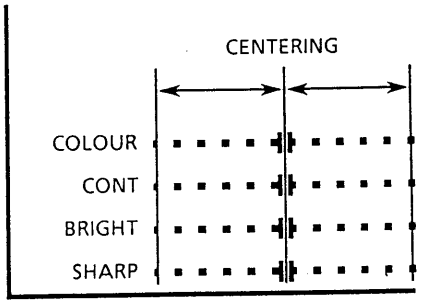

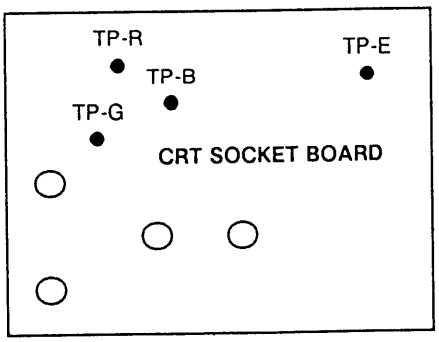

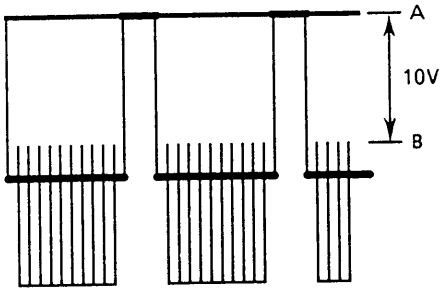

No.	Item	Measuring instrument	Test point	Adjustment part	Description
9	Y LEVEL adjustment	Pattern generator oscilloscope	PIN ⑮ of IC 351 [MAIN BOARD]	R258 (Y LEVEL) [VIDEO CHROMA BOARD]	1. Input a split color bar signal. 2. Connect the oscilloscope with PIN ⑮ of IC 351 of the MAIN BOARD. 3. Adjust the voltage between 100% white signal and pedestal to be 0.31V.
10	SUB CONTRAST adjustment	Pattern generator Oscilloscope	TP-B [CRT SOCKET BOARD]	R387 (SUB CONT) [MAIN BOARD]	1. Input a split color bar signal. 2. Connect the oscilloscope with TP-B. 3. Adjust the voltage between A – B to be 74V using R387 (SUB CONT).

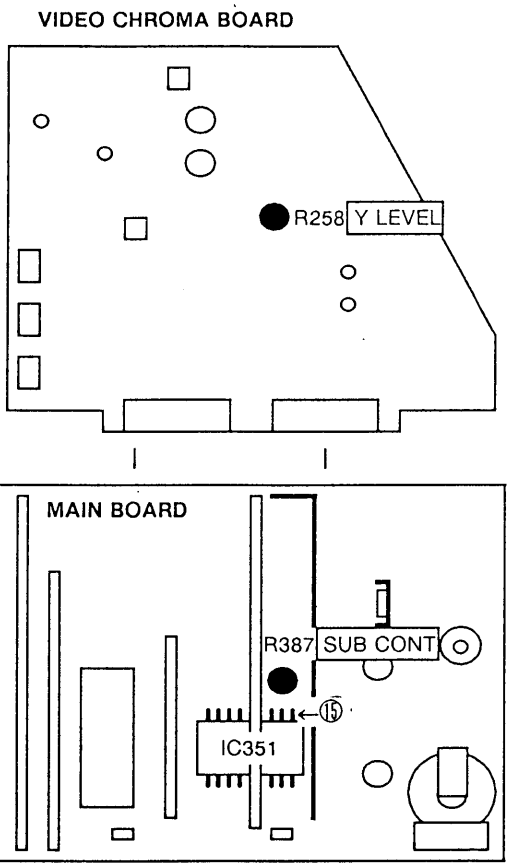

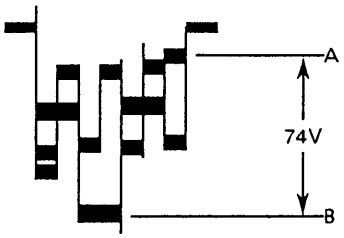

No.	Item	Measuring instrument	Test point	Adjustment part	Description
11	HEIGHT LIGHT adjustment	Pattern generator		R106 (R DRIVE) R103 (G DRIVE) [CRT SOCKET]	1. Input white signal. 2. Adjust the whole screen to white using R106 (R DRIVE) and R103 (G DRIVE). <When monoscope signal and colour analyzer are available> 1. Input a monoscope signal. 2. Point the OPTICAL SENSOR of the color analyzer at the center of the screen. 3. Adjust so that the indicated value of the color analyzer is color temperature 9300°K (X = 0.271, Y = 0.295).
12	SUB COLOR adjustment	Pattern generator Oscilloscope	TP-B TP-E [CRT SOCKET BOARD]	R303 (PAL SUB COLOUR) [VIDEO CHROMA BOARD]	1. Input Split color bar signal. 2. Connect the oscilloscope with TP-B. 3. Adjust the voltage between White signal and Blue signal to be 0V p-p (0V) using R303 (PAL SUB COLOR).

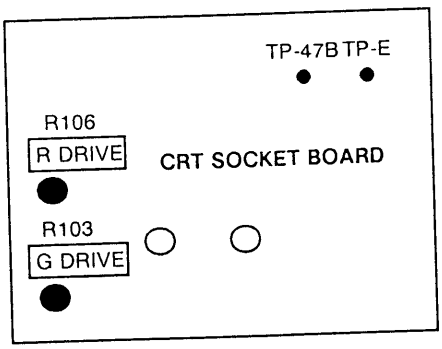

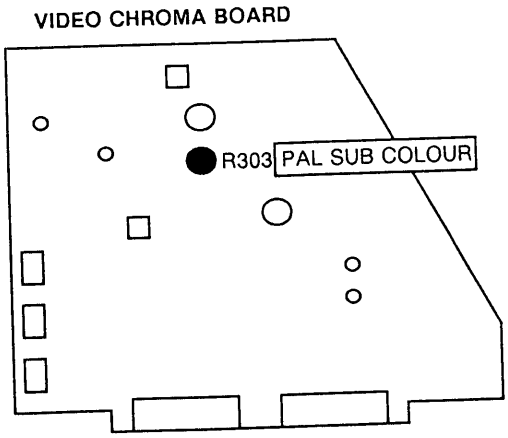

No.	Item	Measuring instrument	Test point	Adjustment part	Description
13	CHROMA CIRCUIT adjustment	Pattern generator Oscilloscope	TP-301 TP-302 [VIDEO CHROMA BOARD]	T302 (DL.P) R351 (PAL DL GAIN) T301 (BURST CLEAN)	1. Input Split color bar. 2. Connect CH1 (X – axis) of the oscilloscope with TP-301 and CH2 (Y – axis) of the oscilloscope with TP-302 and set in X – Y mode. 3. Adjust the signal(D) to be (E) using T301(BURST CLEAN)

VIDEO CHROMA BOARD

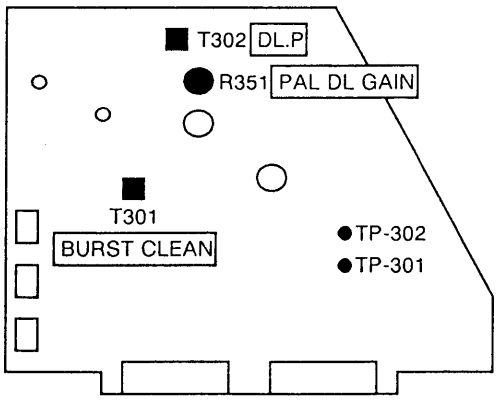

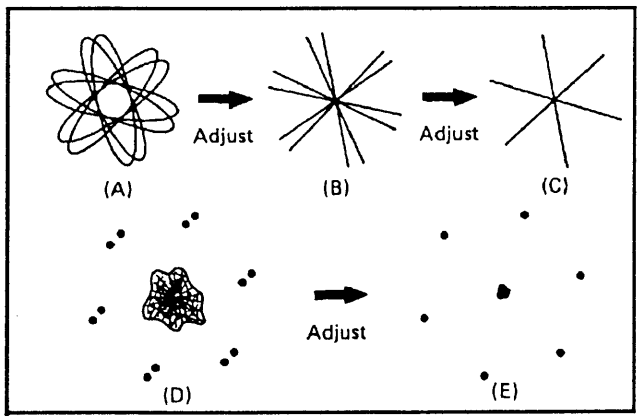

No.	Item	Measuring instrument	Test point	Adjustment part	Description
14	CLOCK adjustment	Remote control		C016 (DISPLAY POSITION) [TELETEXT BOARD]	1. Receive a TELETEXT signal. 2. Set TELETEXT and AIR signals to in mix mode with the remote control. 3. Adjust using C016 (DISPLAY POSITION) so that the character screen and TV screen of TELETEXT do not flow in a horizontal direction.
15	EYE PATTERN adjustment	Oscilloscope	TP-EA TP-EB [AUDIO BOARD]	C208 [AUDIO BOARD]	1. Input a digital voice signal. 2. Connect the oscilloscope with TP-EA. 3. As shown in the figure, adjust using C208 so that the inside of the EYE PATTERN waveform is the maximum. 4. Connect the oscilloscope with TP-EB. 5. Check that the inside of the EYE PATTERN waveform is the maximum, the same as the above. 6. Repeat steps 2 to 5 as necessary.

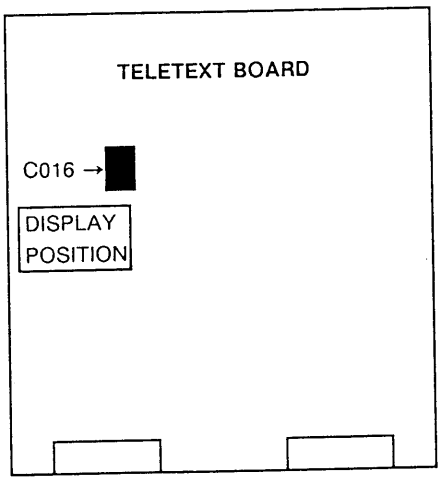

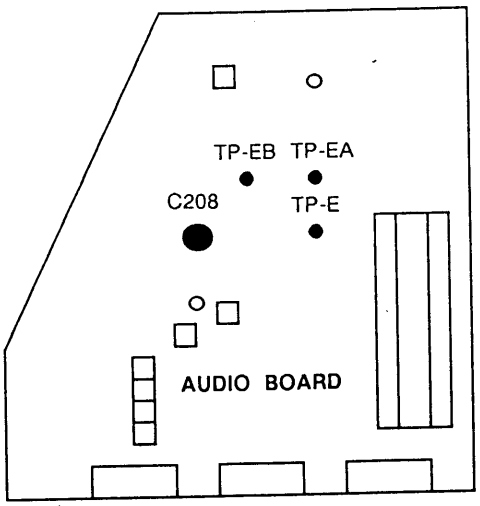

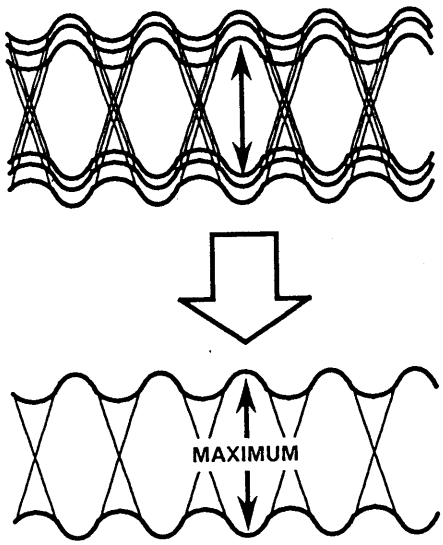

PARTS LIST

CAUTION

- The parts marked ⚠ are very important for the safety. When replacing these parts, be sure to use specified ones to secure the safety and performance.
- The module circuit board is supplied together with the assembly, but the parts which do not have the drawing in this Parts List, P. C. Board Ass'y and the Parts No. columns of which are filled with lines —— . will not be supplied.
- As a rule, the resistors and capacitors which are indicated as shown in (NOTE 2) "HOW TO EXPRESS PARTS NUMBERS OF STANDARD PARTS" are not shown in the list of the parts on the board.
  When ordering the service parts, confirm the resistance/rated power, capacitance/rated voltage, and type of the parts, then order by the part No. indicated according to (NOTE 2).

(NOTE 1) ABBREVIATIONS OF RESISTORS, CAPACITORS AND TOLERANCES

RESISTORS		CAPACITORS	
C R	Carbon Resistor	C CAP.	Ceramic Capacitor
F R	Fusible Resistor	E CAP.	Electrolytic Capacitor
P R	Plate Resistor	M CAP.	Mylar Capacitor
V R	Variable Resistor	HV CAP.	High Voltage Capacitor
HV R	High Voltage Resistor	MF CAP.	Metalized Film Capacitor
MF R	Metal Film Resistor	MM CAP.	Metalized Mylar Capacitor
MG R	Metal Glazed Resistor	MP CAP.	Metalized Polystyrol Capacitor
MP R	Metal Plate Resistor	PP CAP.	Polypropylene Capacitor
OM R	Metal Oxide Film Resistor	PS CAP.	Polystyrol Capacitor
CMF R	Coating Metal Film Resistor	TF CAP.	Thin Film Capacitor
UNF R	Non-Flammable Resistor	MPP CAP.	Metalized Polypropylene Capacitor
CH V R	Chip Variable Resistor	TAN. CAP.	Tantalum Capacitor
CH MG R	Chip Metal Glazed Resistor	CH C CAP.	Chip Ceramic Capacitor
COMP. R	Composition Resistor	BP E CAP.	Bi-Polar Electrolytic Capacitor
LPTC R	Linear Positive Temperature Coefficient Resistor	CH AL E CAP.	Chip Aluminum Electrolytic Capacitor
		CH AL BP CAP.	Chip Aluminum Bi-Polar Capacitor
		CH TAN. E CAP.	Chip Tantalum Electrolytic Capacitor
		CH AL BP E CAP.	Chip Tantalum Bi-Polar Electrolytic Capacitor

TOLERANCES									
F	G	J	K	M	N	R	H	Z	P
±1%	±2%	±5%	±10%	±20%	±30%	+30% - 10%	+50% - 10%	+80% - 20%	+100% - 0%

(NOTE 2) HOW TO EXPRESS PARTS NUMBERS OF STANDARD PARTS

■ RESISTOR

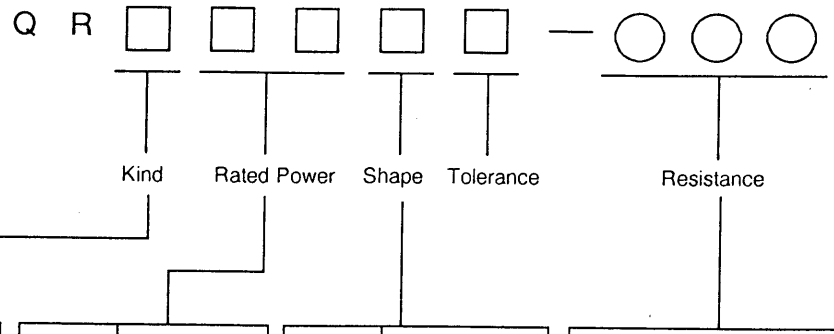

Symbol	Part Name
C	COMP.R
D	C R
S	CH MG R

Symbol	Rated Power
0 1	1 w
1 2	1/2 w
1 4	1/4 w
1 6	1/6 w
1 8	1/8 w

Symbol	Shape
1	Straight lead
8	Chip

Indicate with first two-figure expressed by Ω and following 0.
please note that,in case of resistance less than 10 Ω, a letter "R"will be effective as point.

EX.

2.2 Ω = 2R2

470 Ω = 47×10^1 → 471

150kΩ = 15×10^4 → 154

■ CAPACITOR

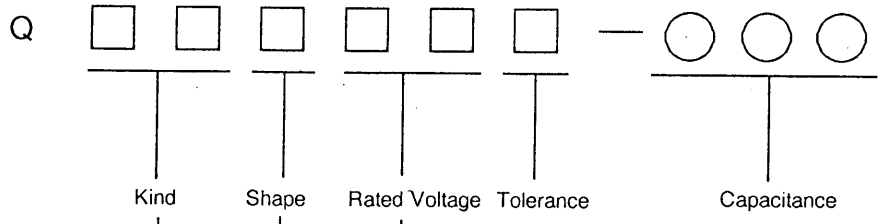

Symbol	Part Name
CS	C CAP.
CS	CH C CAP.
ET	E CAP.
FM	M CAP.

5Figure / 6Figure	0	1	2
A		10V	100V
C		16V	160V
D			200V
E		25V	250V
H		50V	500V
J	6.3V	63V	
V		35V	

Indicate with first two-figure expressed by pF and following 0.
Please note that,in case of capacitance less than 10 pF a letter "R" will be effective as point.

EX

5pF = 5R0

1000pF = 10×10^2 → 102

47μF = 47×10^6 → 476

Symbol	Shape
1	Straight lead
1	Leads in the same direction
8	Chip
A	Leads in the same direction (compact part)

MAIN PARTS LIST

SYMBOL NO.	⚠	PART NO.	PART NAME	REMARKS	
CRT & TUNER					
L01	⚠	CELD019-002J2	DEGAUSSING COIL		*
TU1001		CEEK350-B01-U	UHF E TUNER		*
V01	⚠	A59EAK22X11	PICTURE TUBE	Inc. DY, Magne, Wedge	*
VARIABLE R					
R1012		QVPA603-223AZ	V R (NOISE)	22kΩ B	
R1373		QVPA603-103AZ	V R (SUB BRIGHT)	10kΩ B	
R1387		QVPA601-473A	V R (SUB CONTRAST)	47kΩ B	
R1564		QVPE610-204H	TRIM R (DISTORED	PIN CORRECTION)	
R1568		QVPA801-104M	V R (DISTORED KEY	STON CORRECTION)	
R1572		QVPA801-202M	V R (H. HEIGHT)	2kΩ B	
R2032		QVPA603-332AZ	V R (B1 ADJ.)	3.3KΩ B	*
R258		QVPA601-103A	V R (Y LEVEL)	10kΩ B	
R303		QVPA601-472A	V R (PAL SUB COLOR)	4.7kΩ B	
R3103		QVPC802-102H	V R (G. DRIVE)	1kΩ B	
R3106		QVPC802-102H	V R (R. DRIVE)	1kΩ B	
R351		QVPA601-222A	V R (PAL DL GAIN)	2.2kΩ B	
R406		QVPA603-473A	V R (V. LIN)	47kΩ B	
R412		QVPA603-221AZ	V R (H. HEIGHT)	220 Ω B	
R520		QVPA603-473A	V R (H. CENTER)	47kΩ B	
TRANSFORMER					
T1501		CE40895-00A	H DRIVE TRANSF.		
DIODE					
D001		MA4100 (M) -T2	ZENER DIODE		*
D1001		MA4330 (M) -T2	ZENER DIODE		*
D101		GL2HY6	L E D (YLW)	S Video	
D101		RD13JS (B) -T2	ZENER DIODE		*
D102		GL2NG6	L E D (GRN)	Stereo	
D102		RD13JS (B) -T2	ZENER DIODE		*
D103		GL2HS6	L E D (ORG)	On Timer	
D103		RD13JS (B) -T2	ZENER DIODE		*
D104		GL2PR6	L E D (RED)	Power	
D1351		RD12ES (B) -T2	ZENER DIODE		*
D1352		RD12ES (B) -T2	ZENER DIODE		*
D1353		RD12ES (B) -T2	ZENER DIODE		*
D151		RD13JS (B) -T2	ZENER DIODE		*
D152		RD13JS (B) -T2	ZENER DIODE		*
D1547		MA4120 (M) -T2	ZENER DIODE		*
D155		RD13JS (B) -T2	ZENER DIODE		*
D156		RD13JS (B) -T2	ZENER DIODE		*
D1561		RD30E (B2) -T2	ZENER DIODE		*
D2001	⚠	D3SB60	BRIDGE DIODE		
D2003		RD3.0F (B2) -T3	ZENER DIODE		*
D201		RD13JS (B) -T2	ZENER DIODE		*
D202		RD13JS (B) -T2	ZENER DIODE		*
D203		RD13JS (B) -T2	ZENER DIODE		*
D2032		RD6.2E (B2) -T2	ZENER DIODE		*
D204		RD13JS (B) -T2	ZENER DIODE		*
D205		RD13JS (B) -T2	ZENER DIODE		*
D301		RD13JS (B) -T2	ZENER DIODE		*
D302		RD13JS (B) -T2	ZENER DIODE		*
D303		RD13JS (B) -T2	ZENER DIODE		*
D303		KV1310	VARI CAP DIODE		
D304		RD13JS (B) -T2	ZENER DIODE		*
D305		RD13JS (B) -T2	ZENER DIODE		*
D306		RD13JS (B) -T2	ZENER DIODE		*
D3106		RD8.2ES (B2) -T2	ZENER DIODE		*
D3107		RD8.2ES (B2) -T2	ZENER DIODE		*
D3108		RD8.2ES (B2) -T2	ZENER DIODE		*

SYMBOL NO.	⚠	PART NO.	PART NAME	REMARKS	
DIODE					
D3110		RD6.2ES(B3)-T2	ZENER DIODE		*
D332		MA4033(M)-T2	ZENER DIODE		*
D501	⚠	MA4068(N)C1-T2	ZENER DIODE		*
D503		MA4120(M)-T2	ZENER DIODE		*
D507		RD4.7E(B3)	ZENER DIODE		
D8011		RD13JS(B)-T2	ZENER DIODE		*
D8012		RD13JS(B)-T2	ZENER DIODE		*
D8013		RD13JS(B)-T2	ZENER DIODE		*
D8014		RD13JS(B)-T2	ZENER DIODE		*
D8015		RD13JS(B)-T2	ZENER DIODE		*
D8016		RD13JS(B)-T2	ZENER DIODE		*
D8017		RD13JS(B)-T2	ZENER DIODE		*
D8018		RD13JS(B)-T2	ZENER DIODE		*
D901		RD11E(B2)-T2	ZENER DIODE		*
IC					
IC001		SAA5231	I.C.		*
IC001		HCF4081BE	IC		*
IC002		SAA5243P/E	I.C.		*
IC002		HCF4081BE	IC		*
IC003		FCB61C65-70P	S RAM		*
IC004		PCF84C81P/064	I.C.		*
IC008		PCF8582AP	I.C.		*
IC101		GP1U521R	IR DETECT UNIT		
IC101		HCF4066BE	IC		*
IC101		M51365SP	I.C.(M)		
IC101		M51496P	I.C.(M)		
IC1301		AN5862K	I.C.(M)		
IC1302		AN5862K	I.C.(M)		
IC1351		TDA4580	I.C.		*
IC151		HCF4066BE	IC		*
IC152		HCF4066BE	IC		*
IC1521	⚠	L7812ABV	IC		*
IC1522	⚠	L7805ABV	IC		*
IC1541		TDA3654	IC		*
IC1561		TDA8145	IC		*
IC1701		M37102M8-A44SP	IC		
IC1702		M6M80041P	IC		
IC1703		MN1280-Q	I.C.(M)		
IC1704		HCF4049UBE	IC	or HCF4049UBE	*
IC1705		MC78L05ACP	I.C.	or MC78L05ACP	*
IC1901		L7812ABV	IC		*
IC2001		TEA2261	IC		*
IC2002	⚠	CNX82A	IC		*
IC201		HCF4053BE	IC		*
IC201		M51494L	I.C.(M)		
IC201		TA8662N	I.C.		
IC202		HCF4066BE	IC		*
IC202		HCF4053BE	IC		*
IC203		M52025SP	IC		
IC301		TDA1029	IC		*
IC301		M65109BSP	IC		
IC302		HCF4066BE	IC		*
IC302		TDA4565	I.C.		*
IC3101		TEA5101A	IC		*
IC401		SM5807EP	IC		
IC402		TDA1543A	IC		*
IC403		NE4558N	IC		*
IC501		TDA3810	I.C.		*

SYMBOL NO.	⚠	PART NO.	PART NAME	REMARKS
IC				
IC501		LM324N	I C	*
IC502		TDA1029	I C	*
IC531		VUC2003	I C	
IC591		L7812ABV	I C	*
IC701		LA7210	I. C. (M)	
IC751		TDA1526	I. C.	*
IC8001		TC4049BP	I. C.	
IC801		TA8216H	I C	
IC851		M5218P	I. C. (M).	
IC911		L7805ABV	I C	*
OTHERS				
		CM11749-A0C-E	F CABI ASSY	*
		CM34525-001-E	POWER KNOB	*
		CM11753-B01-ME	REAR COVER	*
		CM11899-00A-E	SP BOX ASSY	*
		CM11899-00B-E	SP BOX ASSY	*
		CM46617-002-E	POWER KNOB	*
	⚠	QMP4C00-200J9	POWER CORD	*
CF601		A75111-C	CERAMIC FILTER	
CF602		A75111-C	CERAMIC FILTER	
CP1901	⚠	ICP-N10-Y	I. C. PROTECT	*
CP591	⚠	ICP-N10-Y	IC PROTECTER	*
CP901	⚠	ICP-N15	IC PROTECTOR	
DL301		CE41881-001J1	DELAY LINE	*
F9901	⚠	QMF51E2-3R15S	FUSE	3. 15A
J801		CEMT007-001J1	EXT SP TERMINAL	*
LF2001	⚠	CE41890-001	LINE FILTER	
LF9901	⚠	A39475-G	LINE FILTER	
LF9902	⚠	CE41893-001J1	LINE FILTER	*
R1521	⚠	QRH017J-470M	F R	47 Ω 1W J
R1523	⚠	QRH027J-1R8M	F R	1. 8 Ω 2W J
R1524	⚠	QRH027J-1R8M	F R	1. 8 Ω 2W J
R1525	⚠	QRH027J-1R8M	F R	1. 8 Ω 2W J
R1526	⚠	QRZ0054-470M	F R	47 Ω 1/4W J
R1527	⚠	QRH017J-6R8M	F R	6. 8 Ω 1W J
R1532	⚠	QRH127J-1R8M	F R	1. 8 Ω 1/2W J
R506	⚠	QRH017J-4R7M	F R	4. 7 Ω 1W J
R901	⚠	QRH127J-3R3M	F R	3. 3 Ω 1/2W J
SF101		CE40454-302	SAW FILTER	
SF101		CE41031-301	SAW FILTER	
SW801		QSS4C22-C04	SLIDE SWITCH	Speaker Select SW
S1541		QSL4A13-C02	LEVER SWITCH	V. Center
S8002		QSP4H11-C06	PUSH SWITCH	Function
S8003		QSP4H11-C06	PUSH SWITCH	CH-
S8004		QSP4H11-C06	PUSH SWITCH	CH+
S8005		QSP4H11-C06	PUSH SWITCH	VOL-
S8006		QSP4H11-C06	PUSH SWITCH	VOL+
S8007		CESP004-001J1	PUSH SWITCH	Sub Power *
S9901	⚠	QSP4D21-C06	PUSH SWITCH	Main Power *
TH2001	⚠	CE41884-001J1	W-PTC	*
X001		CE41257-001J1	X TAL	
X002		CSA6. 00MT	CERAMIC FILTER	*
X003		CE41258-A01J1	X TAL	
X1751		CE41887-001	X TAL	
X201		CE41845-001	X-TAL	
X202		CE41540-001	X-TAL	
X301		CE41115-001	CRYSTAL	
X501		CSB500F9	CERAMIC RESO	

EXPLODED VIEW PARTS LIST

	SYMBOL NO.	PART NO.	PART NAME	REMARKS
⚠	1	A59EAK22X11	PICTURE TUBE	Inc. DY, Magne, Wedge*
⚠	2	CELD019-002J2	DEGAUSSING COIL	L0.1 *
	3	CH30342-00K	BRAIDED ASSY	
	4	CH41987-00C	BRAIDED SUB ASSY	X2
	5	CM22022-A02-E	DOOR	*
	6	CM34811-001-E	CONTROL SHEET	*
	7	CM11777-C01-VE	CONTROL BASE	*
	8	CM46617-002-E	POWER KNOB	*
	9	CM46710-001-E	PB SPACER	*
	10	CM11762-C01-E	AV TERMINAL BASE	*
⚠	11	QMP4C00-200J9	POWER CORD	*
	12	CM46618-001-VE	POWER CORD CLAMP	*
	13	CM11753-B01-ME	REAR COVER	*
	14	GBSA4020N	W TAP SCREW	X9
	15	CM21933-A04-E	RATING LABEL	*
	100	CM11749-A0C-E	F CABI ASSY	Include No. 101~105*
	101	CM45436-00A	DOOR LATCH	*
	102	CM34525-001-E	POWER KNOB	*
	103	CM30861-074	SPRING	*
	104	CM43094-002	JVC MARK	*
	105	CM46622-001-E	REMOCON WINDOW	*
	200	CM11899-00A-E	SP BOX ASSY (L)	InNo. 201~03, 304~09*
	201	CM11797-A01-E	SP GRILL	
	202	CM11790-001-E	BAFFLE BOARD	
	203	CM11786-A01-E	SPEAKER BOX	
	300	CM11899-00B-E	SP BOX ASSY (R)	Include No. 301~309*
	301	CM11798-A01-E	SP GRILL (R)	
	302	CM11790-002-E	BAFFLE BOARD	
	303	CM11786-A02-E	SPEAKER BOX	
	304	CM44611-001	BOX RUBBER	X2
	305	CEX40610-A01	SPEAKER	X2
	306	CEX40611	SPEAKER	X2
	307	GBSB4012Z	TAPPING SCREW	X16
	308	QFM11HK-473M	M CAP.	0.047μF 50V K
	309	CM22023-001	PUNCH METAL	X2

EXPLODED VIEW

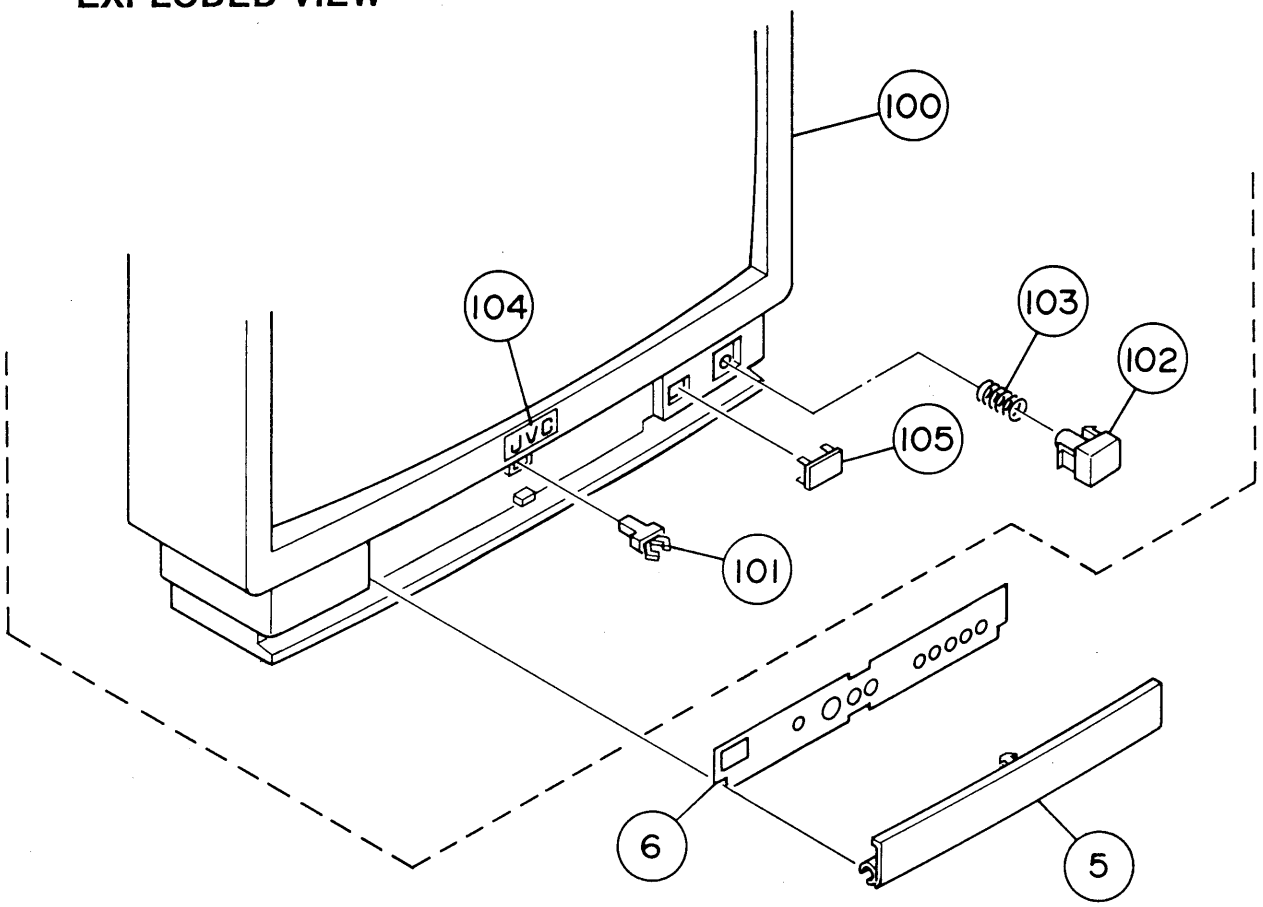

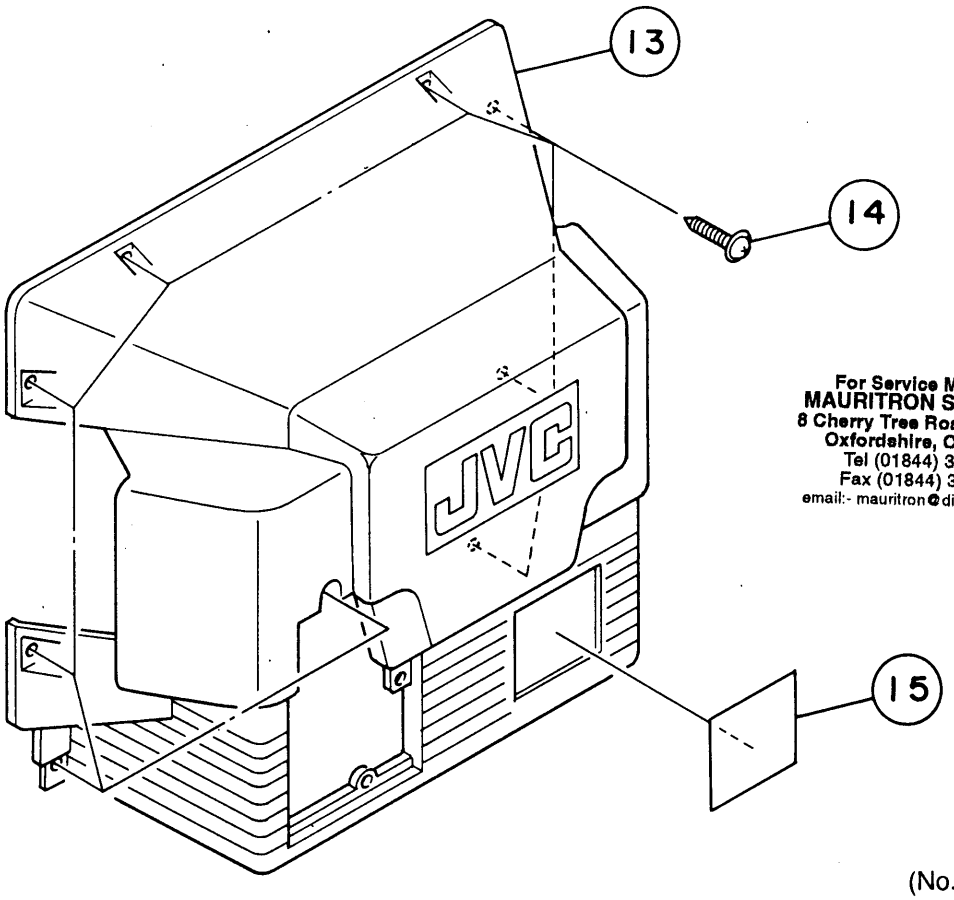

For Service Manuals
MAURITRON SERVICES
8 Cherry Tree Road, Chinnor
Oxfordshire, OX9 4QY.
Tel (01844) 351694
Fax (01844) 352554
email:- mauritron@dial.pipex.com

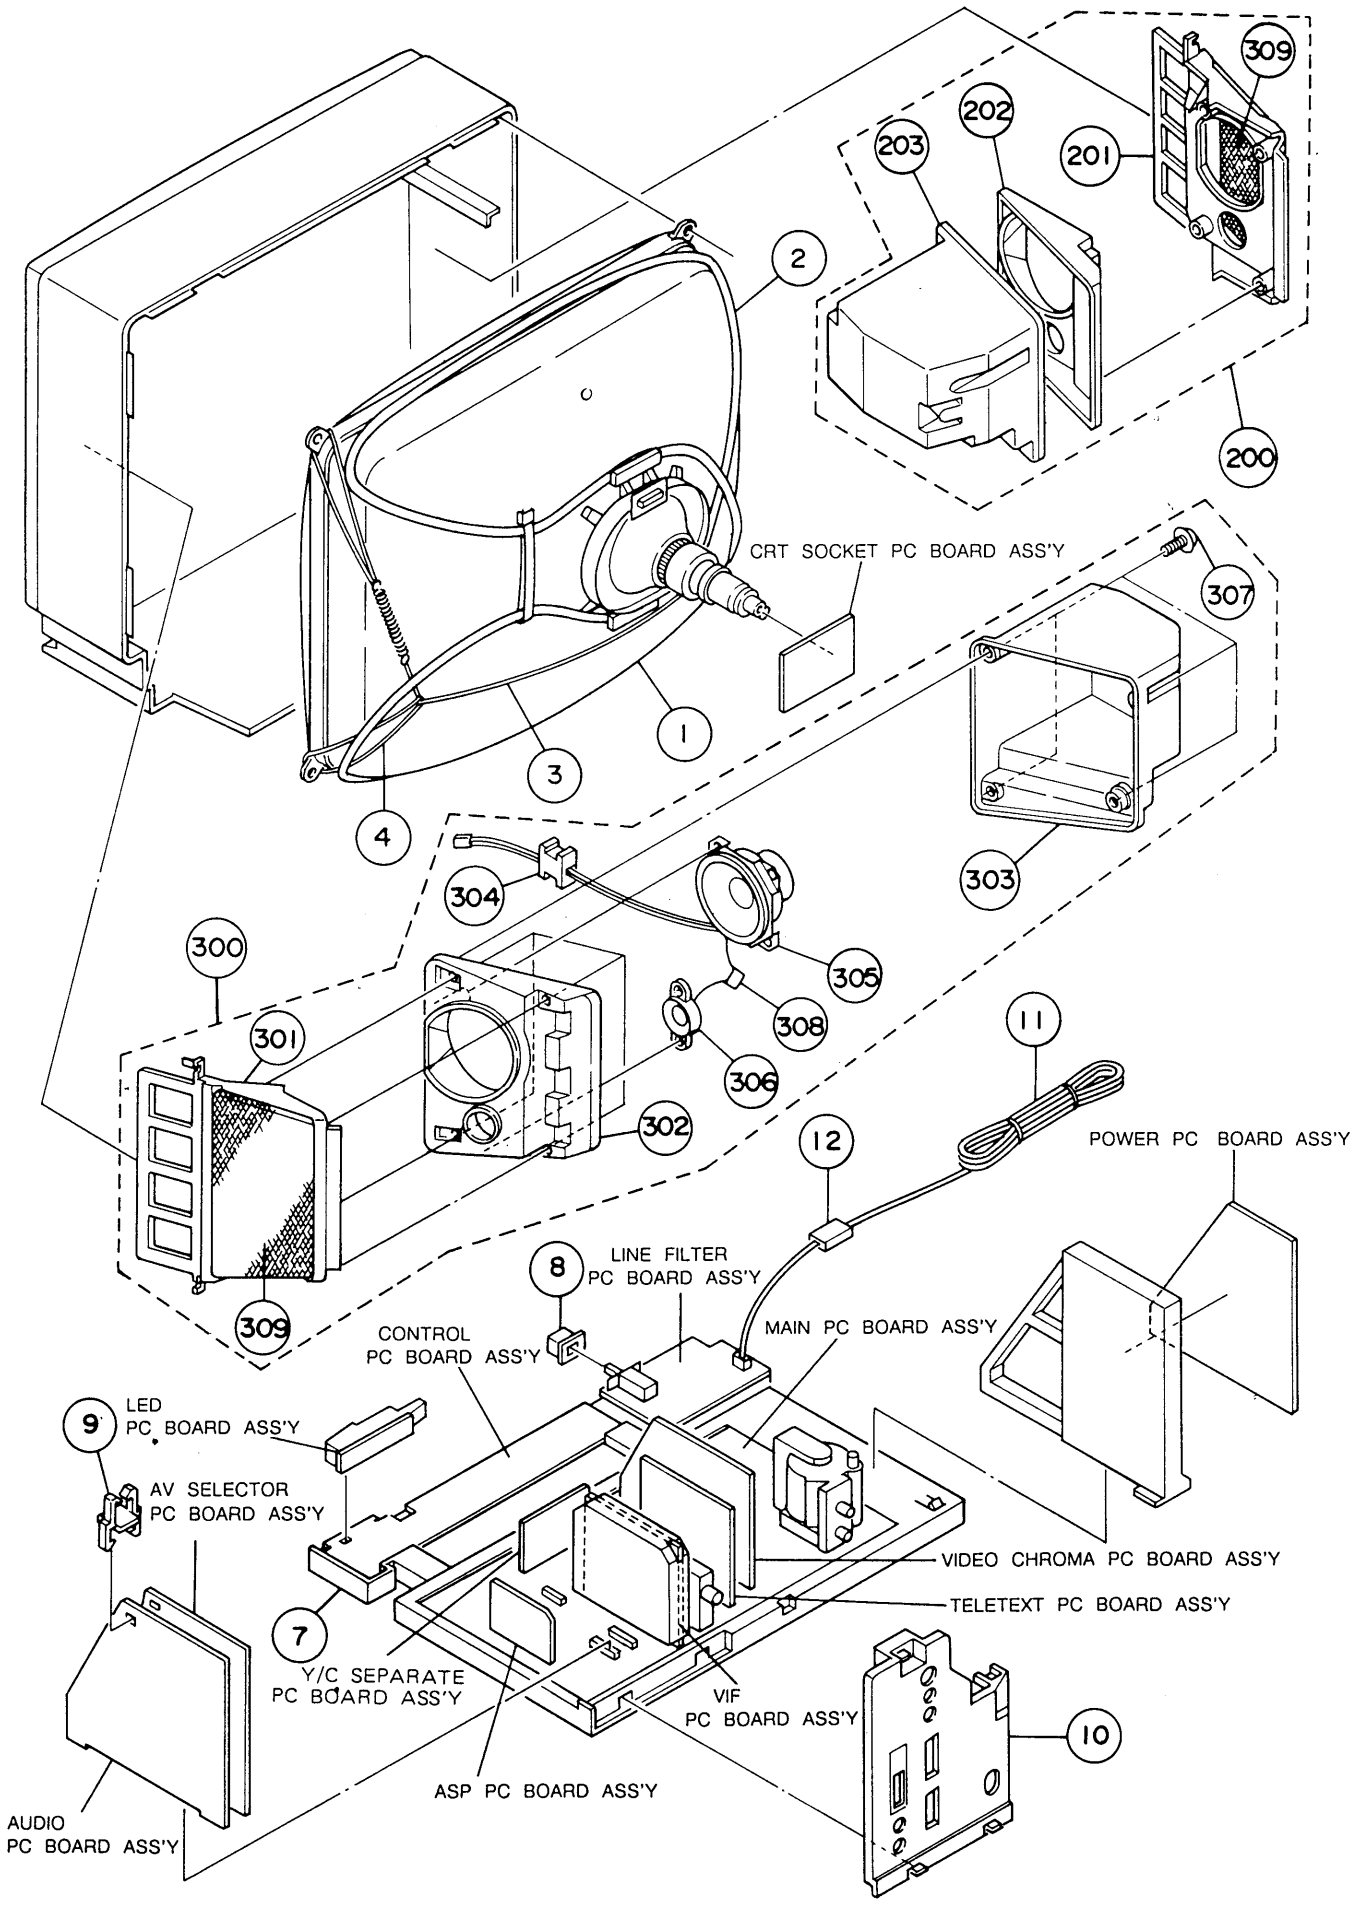
309
202
203
201
2
200
CRT SOCKET PC BOARD ASS'Y
307
1
3
4
303
304
305
300
308
301
306
302
11
12
POWER PC BOARD ASS'Y
8
LINE FILTER
PC BOARD ASS'Y
309
CONTROL
PC BOARD ASS'Y
MAIN PC BOARD ASS'Y
9
LED
PC BOARD ASS'Y
AV SELECTOR
PC BOARD ASS'Y
VIDEO CHROMA PC BOARD ASS'Y
TELETEXT PC BOARD ASS'Y
7
Y/C SEPARATE
PC BOARD ASS'Y
VIF
PC BOARD ASS'Y
10
ASP PC BOARD ASS'Y
AUDIO
PC BOARD ASS'Y

PRINTED CIRCUIT BOARD PARTS LIST

MAIN PC BOARD ASS'Y (SJX-1901B-U2)

1/5

SYMBOL NO.	PART NO.	PART NAME	REMARKS			
VARIABLE R						
R1012	QVPA603-223AZ	V R (NOISE)	22kΩ	B		
R1373	QVPA603-103AZ	V R (SUB BRIGHT)	10kΩ	B		
R1387	QVPA601-473A	V R (SUB CONTRAST)	47kΩ	B		
R1564	QVPE610-204H	TRIM R (DISTORTED PIN CORRECTION)				
R1568	QVPA801-104M	V R (DISTORTED KEYSTON CORRECTION)				
R1572	QVPA801-202M	V R (H. HEIGHT)	2kΩ	B		
RESISTOR						
R1003	QRG029J-332A	OM R	3.3kΩ	2W	J	
R1503	QRD123J-121SX	C R	120 Ω	1/2W	J	*
R1504	QRG029J-220	OM R	22 Ω	2W	J	
R1505	QRD123J-220SX	C R	22 Ω	1/2W	J	*
R1506	QRG029J-223	OM R	22kΩ	2W	J	
R1507	QRG029J-102	OM R	1kΩ	2W	J	
R1508	QRF074K-3R3	UNF R	3.3 Ω	7W	K	
R1509	QRG019J-121S	OM R	120 Ω	1W	J	
R1534	QRG029J-181	OM R	180 Ω	2W	J	
R1543	QRD123J-102SX	C R	1kΩ	1/2W	J	*
R1544	QRG019J-561S	OM R	560 Ω	1W	J	
R1545	QRX019J-3R3S	MF R	3.3 Ω	1W	J	
R1546	QRX019J-3R3S	MF R	3.3 Ω	1W	J	
R1547	QRG019J-471S	OM R	470 Ω	1W	J	
R1548	QRD123J-821SX	C R	820 Ω	1/2W	J	*
R1549	QRD123J-122SX	C R	1.2kΩ	1/2W	J	*
R1552	QRD123J-1R5SX	C R	1.5 Ω	1/2W	J	*
R1553	QRD123J-1R5SX	C R	1.5 Ω	1/2W	J	*
R1555	QRD123J-821SX	C R	820 Ω	1/2W	J	*
R1581	QRG029J-471	OM R	470 Ω	2W	J	
R1582	QRG029J-561	OM R	560 Ω	2W	J	
R1760	QRB049J-103	NET R				
R1903	QRG019J-681S	OM R	680 Ω	1W	J	
CAPACITOR						
C1009	QCZ0118-104M	C CAP.	0.1μF	25V	Z	
C1013	QCZ0118-104M	C CAP.	0.1μF	25V	Z	
C1307	QCZ0118-104M	C CAP.	0.1μF	25V	Z	
C1354	QFV71HJ-274MZ	TF CAP.	0.27μF	50V	J	*
C1355	QFV71HJ-274MZ	TF CAP.	0.27μF	50V	J	*
C1356	QEHC1CM-108MZ	E CAP.	1000μF	16V	M	*
C1357	QFV71HJ-104MZ	TF CAP.	0.1μF	50V	J	*
C1358	QFV71HJ-274MZ	TF CAP.	0.27μF	50V	J	*
C1359	QFV71HJ-104MZ	TF CAP.	0.1μF	50V	J	*
C1360	QFV71HJ-104MZ	TF CAP.	0.1μF	50V	J	*
C1361	QFV71HJ-104MZ	TF CAP.	0.1μF	50V	J	*
C1362	QFV71HJ-334MZ	TF CAP.	0.33μF	50V	J	*
C1365	QFV71HJ-104MZ	TF CAP.	0.1μF	50V	J	*
C1366	QFV71HJ-104MZ	TF CAP.	0.1μF	50V	J	*
C1369	QFV71HJ-104MZ	TF CAP.	0.1μF	50V	J	*
C1370	QFV71HJ-104MZ	TF CAP.	0.1μF	50V	J	*
C1371	QFV71HJ-104MZ	TF CAP.	0.1μF	50V	J	*
C1503	QEM61HK-105MZ	E CAP.	1μF	50V	K	*
⚠ C1506	QFZ0112-1382S	MPP CAP.	0.0138μF	2kV	±3%	
⚠ C1507	QFM72AK-124M	M CAP.	0.12μF	100V	K	
⚠ C1508	QFP32GJ-273M	PP CAP.	0.027μF	400V	J	
⚠ C1509	QFZ0059-224S	M P P CAP.	0.22μF	400V	J	
C1510	QFZ0059-393S	M P P CAP.	0.039μF	400V	J	
C1512	QFZ0089-304S	M P P CAP.	0.3μF	200V	J	
C1513	QEH52CM-107M	E CAP.	100μF	160V	M	
C1523	QEHB1VM-108M	E CAP.	1000μF	35V	M	
C1524	QEHB1EM-108M	E CAP.	1000μF	25V	M	

2/5

SYMBOL NO.	PART NO.	PART NAME	REMARKS			
CAPACITOR						
C1527	QEHC1CM-477MZ	E CAP.	470μF	16V	M	*
C1528	QEHC1AM-477MZ	E CAP.	470μF	10V	M	*
C1529	QFV71HJ-474MZ	TF CAP.	0.47μF	50V	J	*
C1532	QFV71HJ-334MZ	TF CAP.	0.33μF	50V	J	*
C1535	QCZ0128-102A	C CAP.	1000pF	500V	K	
C1536	QCZ0128-102A	C CAP.	1000pF	500V	K	
C1543	QEHB1VM-108M	E CAP.	1000μF	35V	M	
C1544	QEHC1VM-107MZ	E CAP.	100μF	35V	M	*
C1563	QEHC1VM-227MZ	E CAP.	220μF	35V	M	*
C1581	QEHC1EM-477MZ	E CAP.	470μF	25V	M	*
C1582	QEHC1EM-476MZ	E CAP.	47μF	25V	M	*
C1583	QEHC1EM-476MZ	E CAP.	47μF	25V	M	*
C1584	QFZ0089-274S	M P P CAP.	0.27μF	200V	J	
C1702	QCZ0118-104M	C CAP.	0.1μF	25V	Z	
C1704	QCZ0118-104M	C CAP.	0.1μF	25V	Z	
C1708	QFZ0083-683MZ	M CAP.	0.068μF	50V	K	*
C1751	QCT25CH-120Z	C CAP.	12pF	50V	J	*
C1752	QCT25CH-330Z	C CAP.	33pF	50V	J	*
C1758	QCT25CH-151Z	C CAP.	150pF	50V	J	*
C1759	QCT25CH-470Z	C CAP.	47pF	50V	J	*
C1760	QEB61HM-104MZ	E CAP.	0.1μF	50V	M	*
C1762	QCZ0118-104M	C CAP.	0.1μF	25V	Z	
C1764	QFZ0083-563MZ	M CAP.	0.056μF	50V	K	*
C1768	QCZ0118-104M	C CAP.	0.1μF	25V	Z	
C1901	QCZ0118-104M	C CAP.	0.1μF	25V	Z	
C1903	QCZ0118-104M	C CAP.	0.1μF	25V	Z	
TRANSFORMER						
T1501	CE40895-00A	H DRIVE TRANSF.				
⚠ T1502	CE41888-002J1	L O TRANSF				*
T1503	CE40381-00A	SIDE PIN TRANSF				
COIL						
L1001	CELP026-8R2ZJ2	P COIL				*
L1002	CELP026-5R6ZJ2	P COIL				*
L1003	CELP026-8R2ZJ2	P COIL				*
L1004	CELP026-8R2ZJ2	P COIL				*
L1501	CE41169-002	PEAKING COIL				
L1502	CELC009-003	CHOKE COIL				
L1503	CE41883-001J1	LINEARITY COIL				*
L1504	CJ30030-056	HEATER CHOKE				
L1521	CJ30030-050	HEATER CHOKE				
L1522	CELP002-272Z	P COIL				*
L1561	CE41891-001J1	INJECTION COIL				*
L1562	CELC009-001	WIDTH COIL				
L1701	CELP026-4R7J2	P COIL				*
L1760	CELP026-8R2J2	P COIL				*
DIODE						
D1001	MA4330 (M) -T2	ZENER DIODE				*
D1002	MA700	SI. DIODE				
D1351	RD12ES (B) -T2	ZENER DIODE				*
D1352	RD12ES (B) -T2	ZENER DIODE				*
D1353	RD12ES (B) -T2	ZENER DIODE				*
D1501	BAV21-T2	SI DIODE				*
D1502	BY228-20	SI DIODE				*
D1503	BYW95B-20	SI DIODE				*
D1504	BYW95B-20	SI DIODE				*
D1505	BYD33G T3	SI DIODE				*
D1521	BYD33G T3	SI DIODE				*
D1524	BYW95B-20	SI DIODE				*

3/5

SYMBOL NO.	PART NO.	PART NAME	REMARKS
DIODE			
D1525	BYW95B-20	SI DIODE	*
D1526	BYD33D-T3	SI DIODE	*
D1527	BYD33D-T3	SI DIODE	*
D1528	1SS81	SI DIODE	
D1541	1N4002ID-T3	SI DIODE	*
D1547	MA4120 (M) -T2	ZENER DIODE	*
D1561	RD30E (B2) -T2	ZENER DIODE	*
D1562	BAV21-T2	SI DIODE	*
D1563	BAV21-T2	SI DIODE	*
D1564	1SS133-T2	SI DIODE	*
D1565	1SS133-T2	SI DIODE	*
D1581	1N4002ID-T3	SI DIODE	*
D1702	1SS133-T2	SI DIODE	*
D1703	1SS133-T2	SI DIODE	*
D1705	1SS133-T2	SI DIODE	*
D1706	1SS133-T2	SI DIODE	*
D1707	1SS133-T2	SI DIODE	*
D1708	1SS133-T2	SI DIODE	*
D1709	1SS133-T2	SI DIODE	*
D1710	1SS133-T2	SI DIODE	*
D1711	1SS133-T2	SI DIODE	*
D1713	1SS133-T2	SI DIODE	*
D1714	1SS133-T2	SI DIODE	*
D1715	1SS133-T2	SI DIODE	*
D1716	1SS133-T2	SI DIODE	*
D1752	1SS133-T2	SI DIODE	*
D1753	1SS133-T2	SI DIODE	*
D1755	1SS133-T2	SI DIODE	*
D1756	1SS133-T2	SI DIODE	*
D1758	1SS133-T2	SI DIODE	*
D1761	1SS133-T2	SI DIODE	*
D1762	1SS133-T2	SI DIODE	*
D1765	1SS133-T2	SI DIODE	*
D1766	1SS133-T2	SI DIODE	*
D1767	1SS133-T2	SI DIODE	*
D1768	BAV21-T2	SI DIODE	*
D1769	BAV21-T2	SI DIODE	*
D1770	1SS133-T2	SI DIODE	*
D1802	1SS133-T2	SI DIODE	*
D1803	1SS133-T2	SI DIODE	*
D1805	1SS133-T2	SI DIODE	*
D1831	1SS133-T2	SI DIODE	*
D1832	1SS133-T2	SI DIODE	*
D1833	1SS133-T2	SI DIODE	*
D1834	1SS133-T2	SI DIODE	*
TRANSISTOR			
Q1001	2SC1360-C1	SI TRANSISTOR	*
Q1301	2PC1815 (YG) -T	SI TRANSISTOR	*
Q1302	2PC1815 (YG) -T	SI TRANSISTOR	*
Q1303	2PC1815 (YG) -T	SI TRANSISTOR	*
Q1304	2PC1815 (YG) -T	SI TRANSISTOR	*
Q1305	2PC1815 (YG) -T	SI TRANSISTOR	*
Q1306	2PC1815 (YG) -T	SI TRANSISTOR	*
Q1307	2PA1015 (YG) -T	SI TRANSISTOR	*
Q1308	2PA1015 (YG) -T	SI TRANSISTOR	*
Q1309	2PA1015 (YG) -T	SI TRANSISTOR	*
Q1310	2PA1015 (YG) -T	SI TRANSISTOR	*
Q1311	2PC1815 (YG) -T	SI TRANSISTOR	*

4/5

SYMBOL NO.	PART NO.	PART NAME	REMARKS
TRANSISTOR			
Q1312	2PC1815 (YG) -T	SI TRANSISTOR	*
Q1313	2PC1815 (YG) -T	SI TRANSISTOR	*
Q1314	2PC1815 (YG) -T	SI TRANSISTOR	*
Q1315	2PC1815 (YG) -T	SI TRANSISTOR	*
Q1316	2PC1815 (YG) -T	SI TRANSISTOR	*
Q1331	2PC1815 (YG) -T	SI TRANSISTOR	*
Q1351	2PA1015 (YG) -T	SI TRANSISTOR	*
Q1352	2PA1015 (YG) -T	SI TRANSISTOR	*
Q1353	2PC1815 (YG) -T	SI TRANSISTOR	*
Q1354	2PC1815 (YG) -T	SI TRANSISTOR	*
Q1355	2PA1015 (YG) -T	SI TRANSISTOR	*
Q1501	2SC3669 (OY) -T	SI TRANSISTOR	*
⚠ Q1502	BU508AFI	SI TRANSISTOR	*
Q1541	2PC1815 (YG) -T	SI TRANSISTOR	*
Q1701	2PA1015 (YG) -T	SI TRANSISTOR	*
Q1702	2PA1015 (YG) -T	SI TRANSISTOR	*
Q1703	2PC1815 (YG) -T	SI TRANSISTOR	*
Q1704	2PC1815 (YG) -T	SI TRANSISTOR	*
Q1705	2PA1015 (YG) -T	SI TRANSISTOR	*
Q1706	2PC1815 (YG) -T	SI TRANSISTOR	*
Q1707	2PA1015 (YG) -T	SI TRANSISTOR	*
Q1708	2PA1015 (YG) -T	SI TRANSISTOR	*
Q1711	2PA1015 (YG) -T	SI TRANSISTOR	*
Q1712	2PA1015 (YG) -T	SI TRANSISTOR	*
Q1713	2PA1015 (YG) -T	SI TRANSISTOR	*
Q1714	2PA1015 (YG) -T	SI TRANSISTOR	*
Q1715	2PC1815 (YG) -T	SI TRANSISTOR	*
Q1716	2PC1815 (YG) -T	SI TRANSISTOR	*
Q1717	2PC1815 (YG) -T	SI TRANSISTOR	*
Q1801	2PC1815 (YG) -T	SI TRANSISTOR	*
Q1861	2PC1815 (YG) -T	SI TRANSISTOR	*
Q1901	2PC1815 (YG) -T	SI TRANSISTOR	*
Q1902	2SA966 (OY) -T	SI TRANSISTOR	*
IC			
IC1301	AN5862K	I. C. (M)	
IC1302	AN5862K	I. C. (M)	
IC1351	TDA4580	I C	*
⚠ IC1521	L7812ABV	I C	*
⚠ IC1522	L7805ABV	I C	*
IC1541	TDA3654	I C	*
IC1561	TDA8145	I C	
IC1701	M37102M8-A44SP	I C	
IC1702	M6M80041P	IC	
IC1703	MN1280-Q	I. C. (M)	or HCF4049UBE *
IC1704	HCF4049UBE	IC	or MC78L05ACP *
IC1705	MC78L05ACP	I. C.	*
IC1901	L7812ABV	I C	
OTHERS			
	SJX-1F901AU2	1F PB ASSY	
	SJX-1Y901AU2	Y/C SEPA PB ASSY	
	CEMS002-064	I C SOCKET	*
⚠ CP1901	ICP-N10-Y	I. C. PROTECT	
⚠ R1521	QRH017J-470M	F R	47 Ω 1W J
⚠ R1523	QRH027J-1R8M	F R	1.8 Ω 2W J
⚠ R1524	QRH027J-1R8M	F R	1.8 Ω 2W J
⚠ R1525	QRH027J-1R8M	F R	1.8 Ω 2W J
⚠ R1526	QRZ0054-470M	F R	47 Ω 1/4W J
⚠ R1527	QRH017J-6R8M	F R	6.8 Ω 1W J

5/5

SYMBOL NO.	PART NO.	PART NAME	REMARKS
OTHERS			
⚠ R1532	QRH127J-1R8M	F R	1.8Ω 1/2W J
S1541	QSL4A13-C02	LEVER SWITCH	V. CENTER
TU1001	CEEK350-B01-U	UHF E TUNER	*
X1751	CE41887-001	X TAL	

CRT SOCKET PC BOARD ASS'Y (SJX-3901A-U2)

SYMBOL NO.	PART NO.	PART NAME	REMARKS
VARIABLE R			
R3103	QVPC802-102H	V R (G. DRIVE)	1kΩ B
R3106	QVPC802-102H	V R (R. DRIVE)	1kΩ B
RESISTOR			
R3109	QRG019J-563S	OM R	56kΩ 1W J
R3110	QRG019J-563S	OM R	56kΩ 1W J
R3111	QRG019J-563S	OM R	56kΩ 1W J
CAPACITOR			
C3106	QFH53BK-223M	MM CAP.	0.022μF 1250V K
C3107	QFH52EJ-104M	MM CAP.	0.1μF 250V J
COIL			
L3101	QQL043K-221	PEAKING COIL	220μH
DIODE			
D3101	1SS133-T2	SI. DIODE	*
D3102	1SS133-T2	SI. DIODE	*
D3103	1SS133-T2	SI. DIODE	*
D3104	1SS133-T2	SI. DIODE	*
D3106	RD8.2ES(B2)-T2	ZENER DIODE	*
D3107	RD8.2ES(B2)-T2	ZENER DIODE	*
D3108	RD8.2ES(B2)-T2	ZENER DIODE	*
D3110	RD6.2ES(B3)-T2	ZENER DIODE	*
TRANSISTOR			
Q3102	2PC1815(YG)-T	SI. TRANSISTOR	*
Q3104	2PC1815(YG)-T	SI. TRANSISTOR	*
Q3105	2PC1815(YG)-T	SI. TRANSISTOR	*
IC			
IC3101	TEA5101A	I C	*
OTHERS			
⚠	CE41882-001J1	CRT SOCKET	*

POWER PC BOARD ASS'Y (SJX-2941A-U2)

1/2

SYMBOL NO.	PART NO.	PART NAME	REMARKS
VARIABLE R			
R2032	QVPA603-332AZ	V R (B1 ADJ.)	3.3kΩ B *
RESISTOR			
R2002	QRF104K-3R9	UNF R	3.9Ω 10W K
R2003	QRG039J-183	OM R	18kΩ 3W J
R2005	QRF154J-221	UNF R	220Ω 15W J
R2006	QRD123J-101SX	C R	100Ω 1/2W J *
R2007	QRM055K-R15	MP R	0.15Ω 5W K
R2008	QRD123J-1R5SX	C R	1.5Ω 1/2W J *
R2009	QRX019J-2R2	MF R	2.2Ω 1W J
R2010	QRX029J-6R8	MF R	6.8Ω 2W J
R2011	QRD123J-180SX	C R	18Ω 1/2W J *
R2016	QRV141F-5602Y	MF R	56kΩ 1/4W F *
R2017	QRV141F-1503AY	MF R	150kΩ 1/4W F *
R2041	QRG039J-153	OM R	15kΩ 3W J
R2042	QRG029J-102	OM R	1kΩ 2W J
R2044	QRG039J-181	OM R	180Ω 3W J
R2045	QRG039J-181	OM R	180Ω 3W J
⚠ R2051	QRZ0057-825	C R	8.2MΩ 1W J
CAPACITOR			
⚠ C2002	QFZ9022-104M	M F CAP.	0.1μFAC250V M
C2006	QFZ9022-473M	M F CAP.	0.047μFAC250V M
⚠ C2007	QCZ9034-472A	C CAP.	4700pFAC400V P
⚠ C2008	QCZ9034-472A	C CAP.	4700pFAC400V P
⚠ C2009	QCZ9034-472A	C CAP.	4700pFAC400V P
⚠ C2010	QCZ9034-472A	C CAP.	4700pFAC400V P
C2011	QEZ0167-227J8	E CAP.	220μF 1600V ±3% *
C2013	QFZ0081-1501S	M P P CAP.	15pF 1600V ±3%
C2015	QEHC1EM-477MZ	E CAP.	470μF 25V M *
C2017	QEM51VM-476M	E CAP.	47μF 35V M
C2021	QFP31HG-102S	PP CAP.	1000pF 50V G
C2031	QEH52CM-107M	E CAP.	100μF 160V M
C2032	QEH52CM-107M	E CAP.	100μF 160V M
C2034	QCZ0122-561A	C CAP.	560pF 2kV K
C2038	QEHC1EM-108MZ	E CAP.	1000μF 25V M *
C2040	QEHB1HM-228M	E CAP.	2200μF 50V M
C2042	QEN61CM-106Z	BP E CAP.	10μF 16V M *
⚠ C2052	QCZ9036-332M	C CAP.	3300pFAC400V M
⚠ C2053	QCZ9036-471M	C CAP.	470pFAC400V K
TRANSFORMER			
⚠ T2001	CE41889-003J1	S M TRANSF	*
COIL			
L2001	CELC005-2R5	CHOKE COIL	2.5μH
L2031	CJ30030-046	HEATER CHOKE	
L2032	CELC002-470	CHOKE COIL	
L2033	CELC002-470	CHOKE COIL	
L2034	CELC026-100	CHOKE COIL	
L2035	CELC026-100	CHOKE COIL	
DIODE			
⚠ D2001	D3SB60	BRIDGE DIODE	
D2002	BYD33M-T3	SI DIODE	*
D2003	RD3.0F(B2)-T3	ZENER DIODE	*
D2006	BYD33D-T3	SI DIODE	*
D2031	BY229-600	SI DIODE	*
D2032	RD6.2F(B2)-T2	ZENER DIODE	*
D2033	BYV28 200 20	SI DIODE	
D2034	BYV28 200 20	SI DIODE	*

2/2

SYMBOL NO.	PART NO.	PART NAME	REMARKS
DIODE			
D2036	BYD33M-T3	SI DIODE	*
TRANSISTOR			
Q2001	SGSIF444	POWER TRANSISTOR	*
Q2002	2PC1815 (YG) -T	SI TRANSISTOR	*
Q2031	2PC1815 (YG) -T	SI TRANSISTOR	*
Q2032	2PC1815 (YG) -T	SI TRANSISTOR	*
IC			
IC2001	TEA2261	I C	*
⚠ IC2002	CNX82A	I C	*
OTHERS			
⚠ LF2001	CE41890-001	LINE FILTER	
⚠ TH2001	CE41884-001J1	W-PTC	*

LINE FILTER PC BOARD ASS'Y (SJX-9901A-U2)

SYMBOL NO.	PART NO.	PART NAME	REMARKS
RESISTOR			
⚠ R9902	QRD129J-105S	C R	1MΩ 1/2W J
CAPACITOR			
⚠ C9902	QFZ9035-474M	MM CAP.	0.47μF
OTHERS			
	A44594-002	FUSE CLIP	
⚠ F9901	QMF51E2-3R15S	FUSE	3.15A
⚠ LF9901	A39475-G	LINE FILTER	
⚠ LF9902	CE41893-001J1	LINE FILTER	*
⚠ S9901	QSP4D21-C06	PUSH SWITCH	Main Power

CONTROL PC BOARD ASS'Y (SJX-8901A-U2)

SYMBOL NO.	PART NO.	PART NAME	REMARKS
CAPACITOR			
C8005	QCZ0118-104M	C CAP.	0.1μF 25V Z
C8006	QCZ0118-104M	C CAP.	0.1μF 25V Z
COIL			
L8001	CELP017-5R6	P COIL	5.6μH
L8002	CELP017-5R6	P COIL	5.6μH
L8003	CELP017-5R6	P COIL	5.6μH
L8004	CELP017-5R6	P COIL	5.6μH
L8005	CELP017-5R6	P COIL	5.6μH
L8006	CELP017-5R6	P COIL	5.6μH
DIODE			
D8002	1SS133-T2	SI. DIODE	*
D8003	1SS133-T2	SI. DIODE	*
D8004	1SS133-T2	SI. DIODE	*
D8005	1SS133-T2	SI. DIODE	*
D8006	1SS133-T2	SI. DIODE	*
D8007	1SS133-T2	SI. DIODE	*
D8011	RD13JS (B) -T2	ZENER DIODE	*
D8012	RD13JS (B) -T2	ZENER DIODE	*
D8013	RD13JS (B) -T2	ZENER DIODE	*
D8014	RD13JS (B) -T2	ZENER DIODE	*
D8015	RD13JS (B) -T2	ZENER DIODE	*
D8016	RD13JS (B) -T2	ZENER DIODE	*
D8017	RD13JS (B) -T2	ZENER DIODE	*
D8018	RD13JS (B) -T2	ZENER DIODE	*
TRANSISTOR			
Q8001	2PC1815 (YG) -T	SI TRANSISTOR	*
Q8002	2PC1815 (YG) -T	SI TRANSISTOR	*
IC			
IC8001	TC4049BP	I. C.	
OTHERS			
J8001	AX49607-004	HEADPHONE JACK	
J8002	QMD2B04-001	MINI CONNECTOR	
J8003	CEMN011-002	JACK	
J8004	CEMN011-003	JACK	
S8002	QSP4H11-C06	PUSH SWITCH	Function
S8003	QSP4H11-C06	PUSH SWITCH	CH-
S8004	QSP4H11-C06	PUSH SWITCH	CH+
S8005	QSP4H11-C06	PUSH SWITCH	VOL-
S8006	QSP4H11-C06	PUSH SWITCH	VOL+
S8007	CESP004-001J1	PUSH SWITCH	Sub Power *

AUDIO PC BOARD ASS'Y (SJX-1A901AU2)

1/3

SYMBOL NO.	PART NO.	PART NAME	REMARKS			
RESISTOR						
R500	QRB085J-474	NET R				
R519	QRV141F-9101Y	MF R	9.1kΩ	1/4W	F	*
R520	QRV141F-9101Y	MF R	9.1kΩ	1/4W	F	*
R521	QRV141F-1201AY	MF R	1.2kΩ	1/4W	F	*
R522	QRV141F-1201AY	MF R	1.2kΩ	1/4W	F	*
R911	QRG029J-220A	OM R	22 Ω	2W	J	
CAPACITOR						
C110	QCT25CH-6R0Z	C CAP.	6pF	50V	J	*
C205	QCT25CH-560Z	C CAP.	56pF	50V	J	*
C206	QCT25CH-390Z	C CAP.	39pF	50V	J	*
C207	QCT25CH-180Z	C CAP.	18pF	50V	J	*
C208	QAT3110-300A	TRIMMER CAP	30pF			
C213	QFV71HJ-104MZ	TF CAP.	0.1μF	50V	J	*
C214	QFV71HJ-104MZ	TF CAP.	0.1μF	50V	J	*
C215	QFV71HJ-104MZ	TF CAP.	0.1μF	50V	J	*
C216	QFV71HJ-104MZ	TF CAP.	0.1μF	50V	J	*
C221	QCT25CH-330Z	C CAP.	33pF	50V	J	*
C223	QCT25CH-560Z	C CAP.	56pF	50V	J	*
C224	QCT25CH-180Z	C CAP.	18pF	50V	J	*
C306	QFV71HJ-104MZ	TF CAP.	0.1μF	50V	J	*
C507	QEN61CM-106Z	BP E CAP.	10μF	16V	M	*
C508	QEN61CM-106Z	BP E CAP.	10μF	16V	M	*
C515	QEN61CM-106Z	BP E CAP.	10μF	16V	M	*
C516	QEN61CM-106Z	BP E CAP.	10μF	16V	M	*
C517	QEN61CM-106Z	BP E CAP.	10μF	16V	M	*
C518	QEN61CM-106Z	BP E CAP.	10μF	16V	M	*
C519	QEN61CM-106Z	BP E CAP.	10μF	16V	M	*
C520	QEN61CM-106Z	BP E CAP.	10μF	16V	M	*
C521	QEN61CM-106Z	BP E CAP.	10μF	16V	M	*
C522	QEN61CM-106Z	BP E CAP.	10μF	16V	M	*
C753	QFV71HJ-224MZ	TF CAP.	0.22μF	50V	J	*
C754	QEN61HM-105Z	BP E CAP.	1μF	50V	M	*
C755	QFV71HJ-563MZ	TF CAP.	0.056μF	50V	J	*
C765	QFV71HJ-563MZ	TF CAP.	0.056μF	50V	J	*
C768	QEN61HM-105Z	BP E CAP.	1μF	50V	M	*
C801	QEN61CM-106Z	BP E CAP.	10μF	16V	M	*
C803	QEN61CM-106Z	BP E CAP.	10μF	16V	M	*
C807	QFV71HJ-124MZ	TF CAP.	0.12μF	50V	J	*
C809	QFV71HJ-124MZ	TF CAP.	0.12μF	50V	J	*
C850	QEN61HM-105Z	BP E CAP.	1μF	50V	M	*
C851	QEN61HM-105Z	BP E CAP.	1μF	50V	M	*
TRANSFORMER						
T103	CELT001-303	CW TRANSF				
T161	CELT003-201	SIF TRANSF				
T201	CE41541-002	B P F				
T301	CELT015-006	S T TRANSF				
COIL						
L102	CELP026-1R5ZJ2	P COIL				*
L104	CELP026-6R8ZJ2	P COIL				*
L105	CELP026-6R8ZJ2	P COIL				*
L106	CELP026-6R8ZJ2	P COIL				*
L107	CELP026-6R8ZJ2	P COIL				*
L108	CELP026-6R8ZJ2	P COIL				*
L109	CELP026-8R2ZJ2	P COIL				*
L201	CELP026-821ZJ2	P COIL				*
L202	CELP026-821ZJ2	P COIL				*
L301	CELP026-100ZJ2	P COIL				*

2/3

SYMBOL NO.	PART NO.	PART NAME	REMARKS
COIL			
L401	CELP026-100ZJ2	P COIL	*
L411	CELP026-100ZJ2	P COIL	*
L701	CELP021-5R6	P COIL	
L702	CELP021-5R6	P COIL	
L703	CELP021-5R6	P COIL	
L803	CELC026-100	CHOKE COIL	
L804	CELC026-100	CHOKE COIL	
L805	CE41832-001	LEAD CORE	
L806	CELC026-100	CHOKE COIL	
L807	CELC026-100	CHOKE COIL	
L808	CELC026-100	CHOKE COIL	
L809	CELC026-100	CHOKE COIL	
L901	CELP026-6R8ZJ2	P COIL	*
DIODE			
D301	1SS133-T2	SI. DIODE	*
D303	KV1310	VARI CAP DIODE	
D310	1SS133-T2	SI. DIODE	*
D311	1SS133-T2	SI. DIODE	*
D312	1SS133-T2	SI. DIODE	*
D313	1SS133-T2	SI. DIODE	*
D701	1SS133-T2	SI. DIODE	*
D702	1SS133-T2	SI. DIODE	*
D704	1SS133-T2	SI. DIODE	*
D705	1SS133-T2	SI. DIODE	*
D751	1SS133-T2	SI. DIODE	*
D752	1SS133-T2	SI. DIODE	*
D753	1SS133-T2	SI. DIODE	*
D754	1SS133-T2	SI. DIODE	*
D755	1SS133-T2	SI. DIODE	*
D901	RD11E(B2)-T2	ZENER DIODE	*
D902	1SS133-T2	SI. DIODE	*
TRANSISTOR			
Q101	2SC1360-C1	SI. TRANSISTOR	
Q104	2PC1815(YG)-T	SI TRANSISTOR	*
Q105	2PA1015(YG)-T	SI TRANSISTOR	*
Q201	2PC1815(YG)-T	SI TRANSISTOR	*
Q501	2SC2878(B)-T	SI. TRANSISTER	*
Q502	2SC2878(B)-T	SI. TRANSISTER	*
Q701	2PC1815(YG)-T	SI TRANSISTOR	*
Q702	2PC1815(YG)-T	SI TRANSISTOR	*
Q703	2PC1815(YG)-T	SI TRANSISTOR	*
Q704	2PC1815(YG)-T	SI TRANSISTOR	*
Q707	2PA1015(YG)-T	SI TRANSISTOR	*
Q708	2PC1815(YG)-T	SI TRANSISTOR	*
Q709	2PC1815(YG)-T	SI. TRANSISTOR	*
Q710	2PC1815(YG)-T	SI. TRANSISTOR	*
Q752	2PA1015(YG)-T	SI TRANSISTOR	*
Q753	2PC1815(YG)-T	SI TRANSISTOR	*
Q754	2PA1015(YG)-T	SI TRANSISTOR	*
Q801	2PC1815(YG)-T	SI TRANSISTOR	*
Q891	2PA1015(YG)-T	SI TRANSISTOR	*
Q892	2PC1815(YG)-T	SI TRANSISTOR	*
Q893	2PC1815(YG)-T	SI TRANSISTOR	*
Q894	2SC2878(B)-T	SI. TRANSISTER	*
Q895	2SC2878(B)-T	SI. TRANSISTER	*
Q901	2PC1815(YG)-T	SI TRANSISTOR	*

SYMBOL NO.	PART NO.	PART NAME	REMARKS
IC			
IC101	M51365SP	I. C. (M)	
IC201	TA8662N	I. C.	
IC301	M65109BSP	I C	
IC401	SM5807EP	I C	
IC402	TDA1543A	I C	*
IC403	NE4558N	I C	*
IC501	LM324N	I C	*
IC502	TDA1029	I C	*
IC751	TDA1526	I. C.	*
IC801	TA8216H	I C	
IC851	M5218P	I. C. (M)	
IC911	L7805ABV	I C	*
OTHERS			
CF601	A75111-C	CERAMIC FILTER	
CF602	A75111-C	CERAMIC FILTER	
⚠ CP901	ICP-N15	IC PROTECTOR	
J701	CEMN011-002	JACK	
J702	CEMN011-003	JACK	
J801	CEMT007-001J1	EXT SP TERMINAL	*
SF101	CE41031-301	SAW FILTER	
SW801	QSS4C22-C04	SLIDE SWITCH,	Speaker Select SW
X201	CE41845-001	X-TAL	
X202	CE41540-001	X-TAL	

ASP PC BOARD ASS'Y (SJX-1P901AU2)

SYMBOL NO.	PART NO.	PART NAME	REMARKS
CAPACITOR			
C501	QFV71HJ-224MZ	TF CAP.	0.22μF 50V J *
C502	QFV71HJ-224MZ	TF CAP.	0.22μF 50V J *
C508	QEN61HM-474Z	BP E CAP.	0.47μF 50V M *
C511	QEN61HM-474Z	BP E CAP.	0.47μF 50V M *
C513	QEN61HM-474Z	BP E CAP.	0.47μF 50V M *
C544	QEN61CM-106Z	BP E CAP.	10μF 16V M *
C546	QEN61CM-106Z	BP E CAP.	10μF 16V M *
C591	QEHC1EM-476MZ	E CAP.	47μF 25V M *
C592	QEHC1EM-476MZ	E CAP.	47μF 25V M *
DIODE			
D551	1SS133-T2	SI. DIODE	*
D552	1SS133-T2	SI. DIODE	*
TRANSISTOR			
Q551	2PC1815 (YG) -T	SI TRANSISTOR	*
IC			
IC501	TDA3810	I. C.	*
IC531	VUC2003	I C	
IC591	L7812ABV	I C	*
OTHERS			
⚠ CP591	ICP-N10-Y	IC PROTECTER	*

VIF PC BOARD ASS'Y (SJX-1F901AU2)

SYMBOL NO.	PART NO.	PART NAME	REMARKS
CAPACITOR			
C106	QCT25CH-101AZ	C CAP.	100pF 50V J *
C107	QCT25CH-101AZ	C CAP.	100pF 50V J *
C108	QCT25CH-181AZ	C CAP.	180pF 50V J *
C109	QCT25CH-181Z	C CAP.	180pF 50V J *
C111	QCT25CH-4R0AZ	C CAP.	4pF 50V J *
C112	QCT25CH-5R0AZ	C CAP.	5pF 50V J *
C115	QCT25CH-680AZ	C CAP.	68pF 50V J *
C116	QCT25CH-101Z	C CAP.	100pF 50V J *
C117	QCT25CH-101Z	C CAP.	100pF 50V J *
C120	QEE61VK-224BZ	TAN. CAP.	0.22μF 35V K *
C202	QCT25CH-221AZ	C CAP.	220pF 50V J *
C705	QFV71HJ-683MZ	TF CAP.	0.068μF 50V J *
C707	QFV81HJ-124M	TF CAP.	0.12μF 50V J
TRANSFORMER			
T101	CELT022-002	FTZ TRAP TRANSF	
T102	CE41597-401	TRAP COIL	
T103	CELT009-312	1ST PIF TRANSF	
T104	CELT001-304	CW TRANSF	
T105	CE40123-600	AFC TRANSF.	
COIL			
L101	CE40143-R56	PEAKING COIL	0.56μF
L105	CE40143-2R7	PEAKING COIL	2.7μH
L201	CELP026-150ZJ2	P COIL	*
L202	CELP026-100ZJ2	P COIL	*
DIODE			
D001	MA4100 (M) -T2	ZENER DIODE	*
D701	1SS133-T2	SI. DIODE	*
TRANSISTOR			
Q001	2SC1959 (OYG)	SI. TRANSISTOR	
Q101	2SC1360-C1	SI. TRANSISTOR	
Q102	2SC1360-C1	SI. TRANSISTOR	
Q103	2SC1360-C1	SI. TRANSISTOR	
Q104	2SC1360-C1	SI. TRANSISTOR	
Q105	2PA1015 (YG) -T	SI TRANSISTOR	*
Q201	2PC1815 (YG) -T	SI TRANSISTOR	*
Q202	2PC1815 (YG) -T	SI TRANSISTOR	*
Q203	2PA1015 (YG) -T	SI TRANSISTOR	*
Q701	2PC1815 (YG) -T	SI TRANSISTOR	*
IC			
IC101	M51496P	I. C. (M)	
IC701	LA7210	I. C. (M)	
OTHERS			
CF201	A76138	C. TRAP	
CF701	CSB500F9	CERAMIC RESO	
SF101	CE40454-302	SAW FILTER	

AV SELECTOR PC BOARD ASS'Y (SJX-1S901AU2)

1/2

SYMBOL NO.	PART NO.	PART NAME	REMARKS			
RESISTOR						
R309	QRB085J-124	NET R				
R314	QRZ0092-001	NET R				
CAPACITOR						
C002	QCZ0118-104M	C CAP.	0.1μF	25V	Z	
C003	QCZ0118-104M	C CAP.	0.1μF	25V	Z	
C004	QCZ0118-104M	C CAP.	0.1μF	25V	Z	
C104	QCZ0118-104M	C CAP.	0.1μF	25V	Z	
C159	QCZ0118-104M	C CAP.	0.1μF	25V	Z	
C165	QCZ0118-104M	C CAP.	0.1μF	25V	Z	
C309	QFV71HJ-224MZ	TF CAP.	0.22μF	50V	J	*
C310	QFV71HJ-224MZ	TF CAP.	0.22μF	50V	J	*
C311	QFV71HJ-224MZ	TF CAP.	0.22μF	50V	J	*
C312	QFV71HJ-224MZ	TF CAP.	0.22μF	50V	J	*
C313	QFV71HJ-224MZ	TF CAP.	0.22μF	50V	J	*
C314	QFV71HJ-224MZ	TF CAP.	0.22μF	50V	J	*
C315	QFV71HJ-224MZ	TF CAP.	0.22μF	50V	J	*
C316	QFV71HJ-224MZ	TF CAP.	0.22μF	50V	J	*
C320	QCZ0118-104M	C CAP.	0.1μF	25V	Z	
C322	QCZ0118-104M	C CAP.				
C330	QEN61HM-335Z	BP E CAP.	3.3μF	50V	M	*
C331	QEN61HM-335Z	BP E CAP.	3.3μF	50V	M	*
COIL						
L101	CELP026-100ZJ2	P COIL				*
L302	CELP017-5R6	P COIL				
L303	CELP017-5R6	P COIL				
L304	CELP017-5R6	P COIL				
L305	CELP017-5R6	P COIL				
L306	CE41832-001	LEAD CORE				
L307	CELP017-5R6	P COIL				
L308	CELP017-5R6	P COIL				
L309	CELP017-5R6	P COIL				
L310	CELP017-5R6	P COIL				
L311	CELP017-5R6	P COIL				
L312	CELP017-5R6	P COIL				
L313	CELP017-5R6	P COIL				
DIODE						
D101	RD13JS (B) -T2	ZENER DIODE				*
D102	RD13JS (B) -T2	ZENER DIODE				*
D103	RD13JS (B) -T2	ZENER DIODE				*
D151	RD13JS (B) -T2	ZENER DIODE				*
D152	RD13JS (B) -T2	ZENER DIODE				*
D155	RD13JS (B) -T2	ZENER DIODE				*
D156	RD13JS (B) -T2	ZENER DIODE				*
D157	1SS133-T2	SI. DIODE				*
D158	1SS133-T2	SI. DIODE				*
D201	RD13JS (B) -T2	ZENER DIODE				*
D202	RD13JS (B) -T2	ZENER DIODE				*
D203	RD13JS (B) -T2	ZENER DIODE				*
D204	RD13JS (B) -T2	ZENER DIODE				*
D205	RD13JS (B) -T2	ZENER DIODE				*
D301	RD13JS (B) -T2	ZENER DIODE				*
D302	RD13JS (B) -T2	ZENER DIODE				*
D303	RD13JS (B) -T2	ZENER DIODE				*
D304	RD13JS (B) -T2	ZENER DIODE				*
D305	RD13JS (B) -T2	ZENER DIODE				*
D306	RD13JS (B) -T2	ZENER DIODE				*
D307	1SS133-T2	SI. DIODE				*
D308	1SS133-T2	SI. DIODE				*

2/2

SYMBOL NO.	PART NO.	PART NAME	REMARKS
TRANSISTOR			
Q001	2PC1815 (YG) -T	SI TRANSISTOR	*
Q002	2PC1815 (YG) -T	SI TRANSISTOR	*
Q003	2PC1815 (YG) -T	SI TRANSISTOR	*
Q004	2PC1815 (YG) -T	SI TRANSISTOR	*
Q005	2PC1815 (YG) -T	SI TRANSISTOR	*
Q006	2PC1815 (YG) -T	SI TRANSISTOR	*
Q007	2PC1815 (YG) -T	SI TRANSISTOR	*
Q101	2PA1015 (YG) -T	SI TRANSISTOR	*
Q102	2PC1815 (YG) -T	SI TRANSISTOR	*
Q103	2PC1815 (YG) -T	SI TRANSISTOR	*
Q104	2PA1015 (YG) -T	SI TRANSISTOR	*
Q105	2PC1815 (YG) -T	SI TRANSISTOR	*
Q106	2PC1815 (YG) -T	SI TRANSISTOR	*
Q151	2PA1015 (YG) -T	SI TRANSISTOR	*
Q152	2PA1015 (YG) -T	SI TRANSISTOR	*
Q153	2PA1015 (YG) -T	SI TRANSISTOR	*
Q154	2PC1815 (YG) -T	SI TRANSISTOR	*
Q155	2PA1015 (YG) -T	SI TRANSISTOR	*
Q156	2PC1815 (YG) -T	SI TRANSISTOR	*
Q157	2PA1015 (YG) -T	SI TRANSISTOR	*
Q158	2PC1815 (YG) -T	SI TRANSISTOR	*
Q159	2PC1815 (YG) -T	SI TRANSISTOR	*
Q160	2PC1815 (YG) -T	SI TRANSISTOR	*
Q201	2PC1815 (YG) -T	SI TRANSISTOR	*
Q202	2PC1815 (YG) -T	SI TRANSISTOR	*
Q203	2PC1815 (YG) -T	SI TRANSISTOR	*
Q301	2PC1815 (YG) -T	SI TRANSISTOR	*
Q302	2PC1815 (YG) -T	SI TRANSISTOR	*
IC			
IC001	HCF4081BE	IC	*
IC002	HCF4081BE	IC	*
IC101	HCF4066BE	IC	*
IC151	HCF4066BE	IC	*
IC152	HCF4066BE	IC	*
IC301	TDA1029	IC	*
IC302	HCF4066BE	IC	*
OTHERS			
J001	CE40529-009J1	21 PIN SOCKET	*
J002	CE40529-009J1	21 PIN SOCKET	*
J003	QMD2B04-001	MINI CONNECTOR	
J004	CEMN011-002	JACK	
J005	CEMN011-003	JACK	

LED PC BOARD ASS'Y (SJX-8L901AU2)

SYMBOL NO.	PART NO.	PART NAME	REMARKS
DIODE			
D101	GL2HY6	L E D (YLW)	S Video
D102	GL2NG6	L E D (GRN)	Stereo
D103	GL2HS6	L E D (ORG)	On Timer
D104	GL2PR6	L E D (RED)	Power
IC			
IC101	GP1U521R	IR DETECT UNIT	
OTHERS			
	CM34609-001-E	LED HOLDER	*

VIDEO CHROMA PC BOARD ASS'Y (SJX-1V901BU2)

1/2

SYMBOL NO.	PART NO.	PART NAME	REMARKS			
VARIABLE R						
R258	QVPA601-103A	V R (Y LEVEL)	10kΩ B			
R303	QVPA601-472A	V R (PAL SUB COLOR)	4.7kΩ B			
R351	QVPA601-222A	V R (PAL DL GAIN)	2.2kΩ B			
R406	QVPA603-473A	V R (V. LIN)	47kΩ B			
R412	QVPA603-221AZ	V R (H. HEIGHT)	220 Ω B			
R520	QVPA603-473A	V R (H. CENTER)	47kΩ B			
RESISTOR						
⚠ R504	QRV141F-3321AY	MF R	3.32kΩ	1/4W	F	*
⚠ R505	QRV141F-6801AY	MF R	6.8kΩ	1/4W	F	*
R510	QRG029J-101A	OM R	100 Ω	2W	J	
CAPACITOR						
C223	QFV71HJ-104MZ	TF CAP.	0.1μF	50V	J	*
C224	QFV71HJ-104MZ	TF CAP.	0.1μF	50V	J	*
C260	QFV71HJ-104MZ	TF CAP.	0.1μF	50V	J	*
C305	QEN61HM-474Z	BP E CAP.	0.47μF	50V	M	*
C306	QFV71HJ-104MZ	TF CAP.	0.1μF	50V	J	*
C310	QEN61VM-475Z	BP E CAP.	4.7μF	35V	M	*
C403	QFV71HJ-154MZ	TF CAP.	0.15μF	50V	J	*
C404	QEE61CK-225BZ	TAN. CAP.	2.2μF	16V	K	*
C406	QFV71HJ-224MZ	TF CAP.	0.22μF	50V	J	*
C407	QEM61HK-475MZ	E CAP.	4.7μF	50V	K	*
C408	QEM61HK-475MZ	E CAP.	4.7μF	50V	K	*
C409	QFV71HJ-683MZ	TF CAP.	0.068μF	50V	J	*
C504	QFV71HJ-684MZ	TF CAP.	0.68μF	50V	J	*
C506	QFV71HJ-104MZ	TF CAP.	0.1μF	50V	J	*
C531	QFV71HJ-563MZ	TF CAP.	0.056μF	50V	J	*
TRANSFORMER						
T301	CELT016-006	CLOCK TRANSF				
T302	CE40396-A01	DL P TRANSF				
COIL						
L221	A76186-120Z	PEAKING COIL	12μH			*
L251	CELP017-560	P COIL				
L332	CELP026-8R2ZJ2	P COIL				*
DIODE						
D331	1SS133-T2	SI. DIODE				*
D332	MA4033 (M) -T2	ZENER DIODE				*
D401	1SS133-T2	SI. DIODE				*
D402	1SS133-T2	SI. DIODE				*
D403	1SS133-T2	SI. DIODE				*
D404	1SS133-T2	SI. DIODE				*
⚠ D501	MA4068 (N) C1-T2	ZENER DIODE				*
D502	BYD33D-T3	SI DIODE				*
D503	MA4120 (M) -T2	ZENER DIODE				*
D504	1SS133-T2	SI. DIODE				*
D505	1SS133-T2	SI. DIODE				*
D506	1SS133-T2	SI. DIODE				*
D507	RD4.7E (B3)	ZENER DIODE				
TRANSISTOR						
Q201	2PC1815 (YG) -T	SI TRANSISTOR				*
Q204	2PC1815 (YG) -T	SI TRANSISTOR				*
Q221	2PC1815 (YG) -T	SI TRANSISTOR				*
Q222	2PC1815 (YG) -T	SI TRANSISTOR				*
Q223	2PC1815 (YG) -T	SI TRANSISTOR				*
Q241	2PA1015 (YG) -T	SI TRANSISTOR				*
Q242	2PC1815 (YG) -T	SI. TRANSISTOR				*
Q243	2PC1815 (YG) -T	SI. TRANSISTOR				*
Q251	2PA1015 (YG) -T	SI TRANSISTOR				*

2/2

SYMBOL NO.	PART NO.	PART NAME	REMARKS			
TRANSISTOR						
Q333	2PC1815 (YG) -T	SI TRANSISTOR				*
Q381	2PC1815 (YG) -T	SI TRANSISTOR				*
Q382	2PC1815 (YG) -T	SI TRANSISTOR				*
Q383	2PC1815 (YG) -T	SI TRANSISTOR				*
Q384	2PC1815 (YG) -T	SI TRANSISTOR				*
Q401	2PC1815 (YG) -T	SI TRANSISTOR				*
Q501	2PC1815 (YG) -T	SI TRANSISTOR				*
Q502	2PC1815 (YG) -T	SI TRANSISTOR				*
Q503	2PC1815 (YG) -T	SI TRANSISTOR				*
Q504	2PC1815 (YG) -T	SI TRANSISTOR				*
Q505	2PA1015 (YG) -T	SI TRANSISTOR				*
Q506	2PC1815 (YG) -T	SI TRANSISTOR				*
IC						
IC201	M51494L	I. C. (M)				
IC202	HCF4053BE	IC				*
IC203	M52025SP	I C				
IC302	TDA4565	I. C.				*
OTHERS						
DL301	CE41881-001J1	DELAY LINE				*
⚠ R506	QRH017J-4R7M	F R	4.7 Ω	1W	J	
⚠ R901	QRH127J-3R3M	F R	3.3 Ω	1/2W	J	
X301	CE41115-001	CRYSTAL				
X501	CSB500F9	CERAMIC RESO				

Y/C SEPARATE PC BOARD ASS'Y (SJX-1Y901AU2)

SYMBOL NO.	PART NO.	PART NAME	REMARKS
CAPACITOR			
C203	QAT3661-200M	TRIM CAP.	
COIL			
L201	CELP026-390ZJ2	P COIL	*
L301	CELP026-120ZJ2	P COIL	*
L302	CELP026-5R6ZJ2	P COIL	*
TRANSISTOR			
Q201	2PC1815 (YG) -T	SI TRANSISTOR	*
Q202	2PC1815 (YG) -T	SI TRANSISTOR	*
Q204	2PC1815 (YG) -T	SI TRANSISTOR	*
Q205	2PC1815 (YG) -T	SI TRANSISTOR	*
Q301	2PC1815 (YG) -T	SI TRANSISTOR	*
Q302	2PC1815 (YG) -T	SI TRANSISTOR	*
Q304	2PA1015 (YG) -T	SI TRANSISTOR	*
Q305	2PC1815 (YG) -T	SI. TRANSISTOR	*
IC			
IC201	HCF4053BE	IC	*
IC202	HCF4066BE	IC	*

TELETEXT PC BOARD ASS'Y (SJX-1T901AU2)

SYMBOL NO.	PART NO.	PART NAME	REMARKS
RESISTOR			
R015	QRD123J-331SX	C R	330 Ω 1/2W J *
CAPACITOR			
C001	QCT25CH-150Z	C CAP.	15pF 50V J *
C006	QCT25CH-101Z	C CAP.	100pF 50V J *
C007	QCT25CH-150Z	C CAP.	15pF 50V J *
C008	QCT25CH-270Z	C CAP.	27pF 50V J *
C011	QCT25CH-180Z	C CAP.	18pF 50V J *
C014	QCZ0118-104M	C CAP.	0.1μF 25V Z
C015	QEPB1HM-225M	BP E CAP.	2.2μF 50V M
C016	QAT3661-300M	TRIMMER CAPA.	30pF
C039	QCZ0118-104M	C CAP.	0.1μF 25V Z
C101	QCZ0118-104M	C CAP.	0.1μF 25V Z
C202	QCZ0118-104M	C CAP.	0.1μF 25V Z
C203	QCT25CH-220Z	C CAP.	22pF 50V J *
C204	QCT25CH-220Z	C CAP.	22pF 50V J *
COIL			
L001	CELP026-150ZJ2	P COIL	*
L101	CELP026-1R5J2	P COIL	*
L102	CELP026-1R5J2	P COIL	*
DIODE			
D101	1SS133-T2	SI. DIODE	*
D102	1SS133-T2	SI. DIODE	*
D103	1SS133-T2	SI. DIODE	*
D201	1SS133-T2	SI. DIODE	*
D202	1SS133-T2	SI. DIODE	*
TRANSISTOR			
Q001	2PC1815 (YG) -T	SI TRANSISTOR	*
Q002	2PC1815 (YG) -T	SI TRANSISTOR	*
Q003	2PC1815 (YG) -T	SI TRANSISTOR	*
Q004	2SC2655 (Y)	SI. TRANSISTOR	
Q101	2PC1815 (YG) -T	SI TRANSISTOR	*
Q102	2PC1815 (YG) -T	SI TRANSISTOR	*
Q103	2PC1815 (YG) -T	SI TRANSISTOR	*
Q104	2PA1015 (YG) -T	SI TRANSISTOR	*
IC			
IC001	SAA5231	I. C.	*
IC002	SAA5243P/E	I. C.	*
IC003	FCB61C65-70P	S RAM	*
IC004	PCF84C81P/064	I. C.	*
IC008	PCF8582AP	I. C.	*
OTHERS			
X001	CE41257-001J1	X TAL	*
X002	CSA6.00MT	CERAMIC FILTER	
X003	CE41258-A01J1	X TAL	*

REMOCON

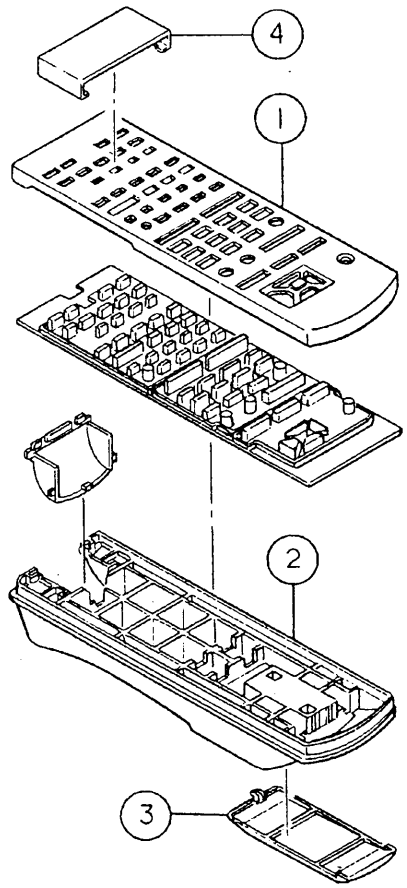

REMOCON PARTS LIST (RM-C861-E)

SYMBOL NO.	PART NO.	PART NAME	REMARKS
1	2R-C0082-01#01	FRONT CASE	*
2	2R-C0082-02#01	BOTTOM CASE	*
3	2R-C0082-03#01	BATTERY COVER	*
4	2R-C0082-05#01	SLIDE COVER	*

PACKING

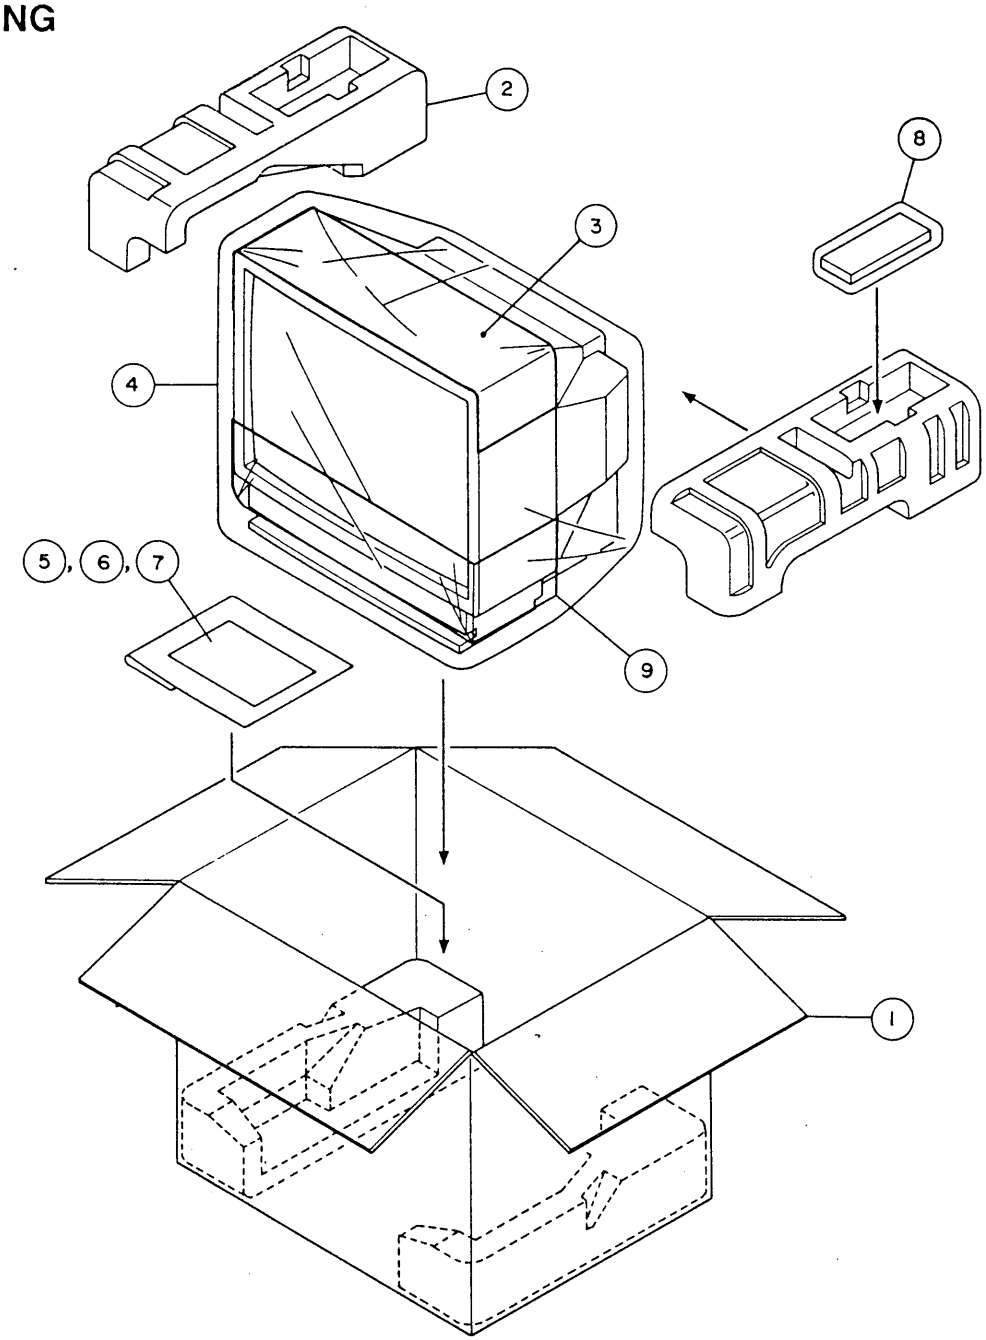

PACKING PARTS LIST

SYMBOL NO.	PART NO.	PART NAME	REMARKS
1	AEM1002-006-E	EURO BOX	*
2	CP11030-00A-E	CUSHION ASSY	*
3	CP40193-005-E	CUSHION SHEET	*
4	CP30320-003-E	POLY BAG	*
5	BT-20066A-E	ADDRESS CARD	*
6	BT-20060-E	WARRANTY CARD	*
7	21. 25F1EKIBA-E	INST BOOK	*
8	RM-C861-E	RC HAND PIECE	*
9	CP40193-008-E	CUSHION SHEET	*

AV-25F1EK SCHEMATIC DIAGRAM

1. NOTES ON USING SCHEMATIC DIAGRAMS

■ NOTICE

Voltage values and waveforms are measured by respectively receiving and displaying on the screen the colour bars signals of the PAL.

[Voltage value display method]

The voltage values indicated within the circuits denote those obtained when PAL colour bar signals are received and displayed on the screen.

The measurements were made with each VR under the condition of factory preset. The figures of the signal circuits may be more or less different after adjustments, so use the figures simply for reference.

Multimeter used

DC 20 kΩ/V

Given figures are all DC voltages.

Sweep speed of osciloscope

H ⇒20μS/div

V ⇒5mS/div

Others ⇒Sweeping time is indicated

Since the schematic diagram is a standard one, the circuit and circuit constants may be subject to change for improvement without any notice.

■ SAFETY

FR (-WW-FR) denotes a fusible resistor which operates as a fuse. When replacing fusible resistors and parts indicated with black shading ( ) in the circuit diagrams, be sure to ensure safety by using designated parts.

As to other parts too, use designated parts to maintain safety and performance.

■ INDICATION OF PARTS SYMBOL

Inside board (Example) SJX-1901B : R1209⇒R209

SJX-1A901A: R209⇒R209

■ CIRCUIT DIAGRAM DISPLAY SYMBOLS

1. Resistor

- Resistance value

  When no unit is provided : [Ω]

  K : [kΩ]

  M : [MΩ]

- Rated permissible power capacity

  When no display is made : 1/6 [W]

  Others : Display are provided

- Type

Without indication	: Carbon resistor
OMR	: Oxide metal film resistor
UNFR	: Non-Flammable resistor
CMF,MFR	: Coating metal film resistor
FR	: Fusible resistor

*Composition resistor 1/2 [W] is indicated as "1/2S" or "Comp".

2. Capacitor

- Capacity

  Over 1 [pF] Below 1 [μF]

- Withstand voltage

  No display : DC 50 [V]

  Others : DC withstand voltage [V]

  AC display : AC withstand voltage [V]

- Display of electrolytic capacitor is as follows.

  (Example)

  47/50⇒Capacity [μF] /withstand voltage [V]

  *NP : Non-polar (or Bipolar) electrolytic capacitor.

- Type

No type display indication	: Ceramic capacitor
MY	: Mylar capacitor
MM	: Metalized mylar capacitor
PP	: Polypropylene capacitor
MPP	: Metalized polypropylene capacitor
NP	: Nonpolar electrolytic capacitor
BP	: Bipolar electrolytic capacitor
TAN.	: Tantalum capacitor

3. Coil

When no unit is displayed : [μH]

4. Power supply

▬▬▬ : 12V

▭▭▭ : 5V

*Respective voltage values are indicated.

5. Test point & GND. symbol

: Test point of mini-GP pin

: Only test point display

: LIVE side ground

: NEUTRAL side ground

: EARTH ground

6. Connecting method

: Connector

: Wrapping or soldering

: Receptacle

NOTE FOR SERVICE

The power supply circuit of this model has different ground potentials. The different potentials are shown by LIVE (primary) ⊥ and the NEUTRAL (secondary) ⏚ on the circuit diagrams.

Be sure never to short between the LIVE GND and NEUTRAL GND and never measure with measuring instrument (oscilloscope, etc.) connected between the LIVE GND and NEUTRAL GND at the same time.

Failure to observe the above will result in component damage.

NO.50383
June 1990

2. PIN ARRANGEMENTS OF TRANSISTORS AND ICs

2PC1815(YG)
2PA1015(YG)
2SC1959(OYG)
2SC2878(B)

2SC1360
2SA966(OY)
2SC2655(Y)

2SC3699(OY)

BU508AF1
SGSIF444

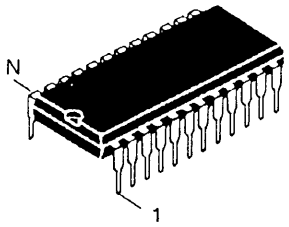

IC
M31702M8-A49SP
TDA4580
M52025SP
M51365SP
TA8662N
M65109BSP
SAA5231
SAA5243P/E
FCB61C65-70P
PCF84C81P/004

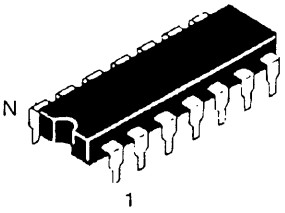

IC
HCF4049UBE
HCF4066BE
HCF4081BE
HCF4053BE
TDA4565
TDA1029
TDA1526
TDA3810

M51496P
SM5807EP
LM324M
VCU2003
TEA2261

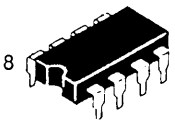

IC
M6M80041P
TDA8145
TDA1543
NE4558N
N5218P
PCF8582AP



IC
CNX82A

IC
L7812ABV
L7805ABV

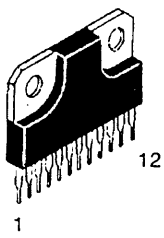

IC
TA8216A

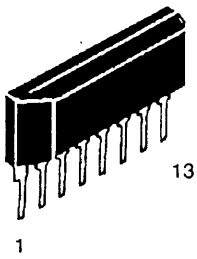

IC
AN5826

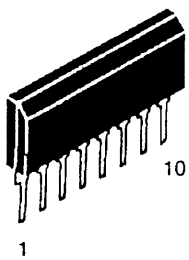

IC
M51494L

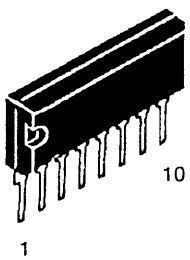

IC
LA7210

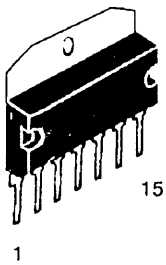

IC
TEAS101A

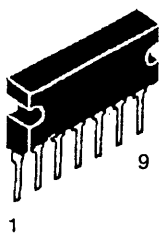

IC
TDA3654

IC
MN1280-Q

3. ALIGNMENT LOCATION

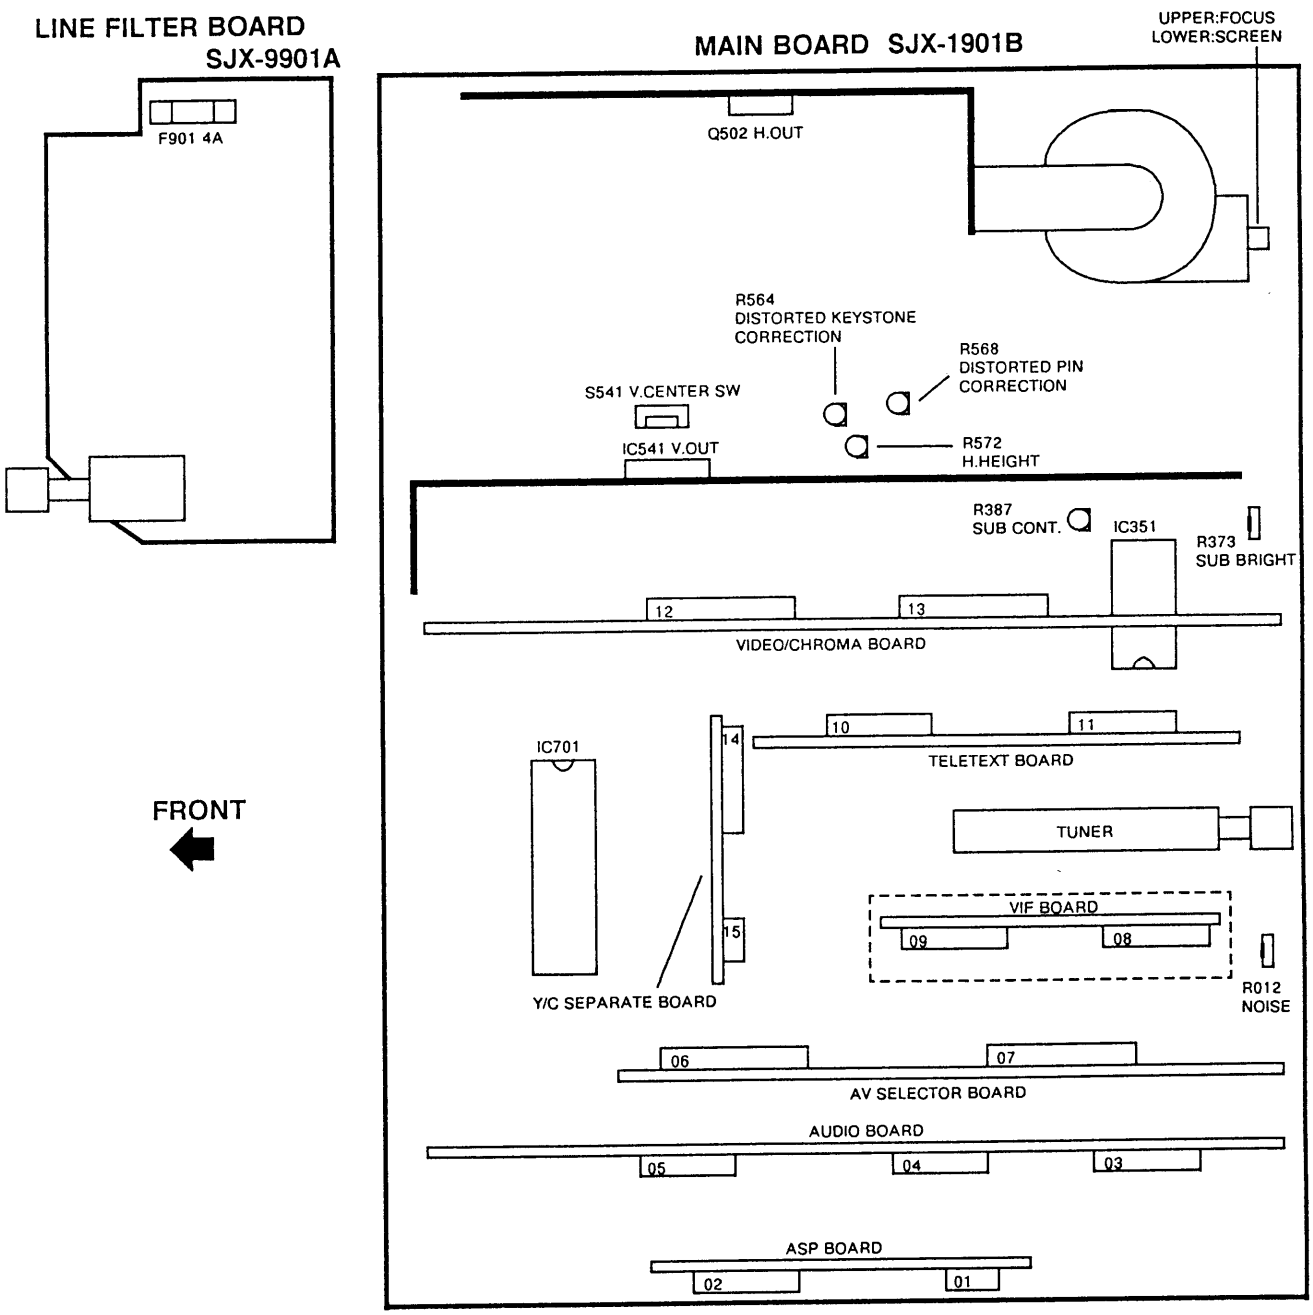

AUDIO BOARD SJX-1A901A

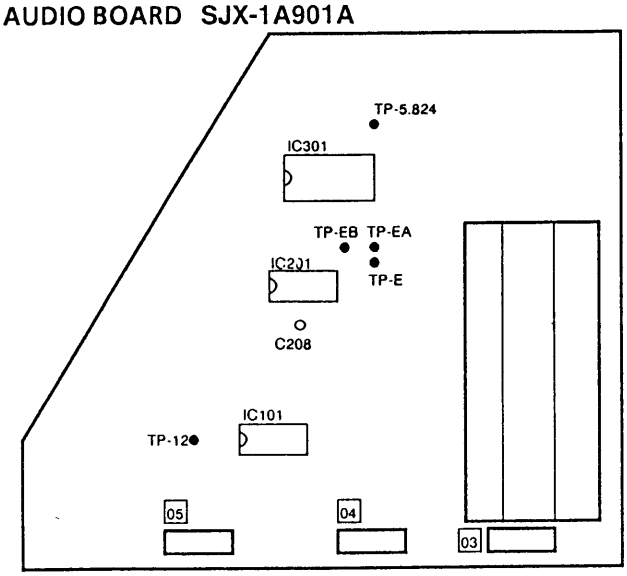

AV SELECTOR BOARD SJX-1S901A

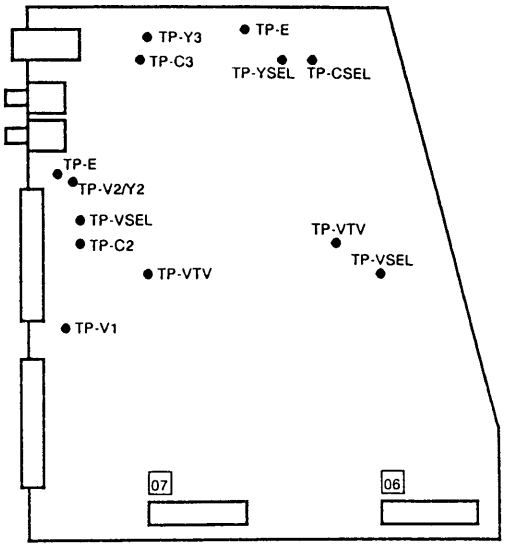

POWER BOARD SJX-2941A

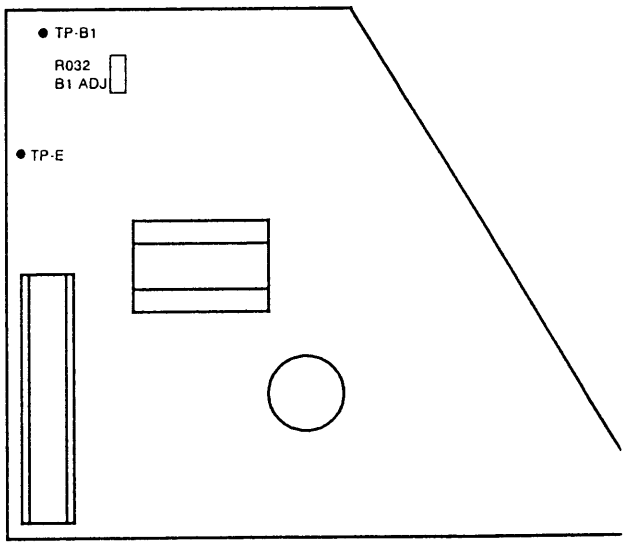

VIDEO/CHROMA BOARD SJX-1V901A

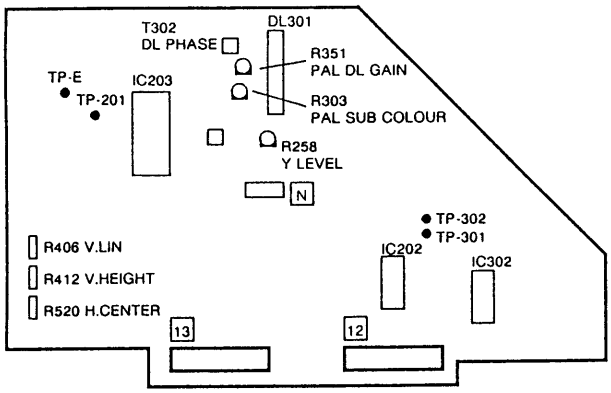

TELETEXT BOARD SJX-1T901A

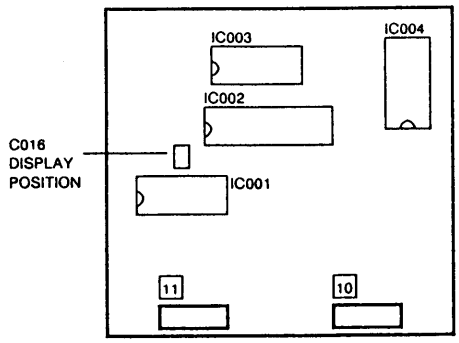

CRT SOCKET BOARD SJX-3901A

(BOTTOM VIEW)

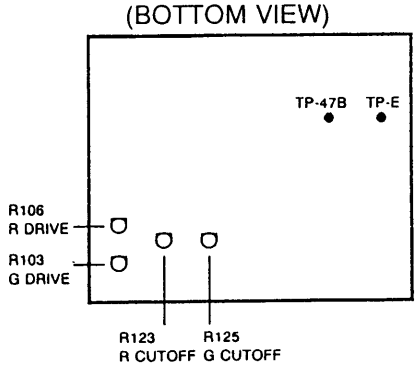

4. BLOCK DIAGRAM

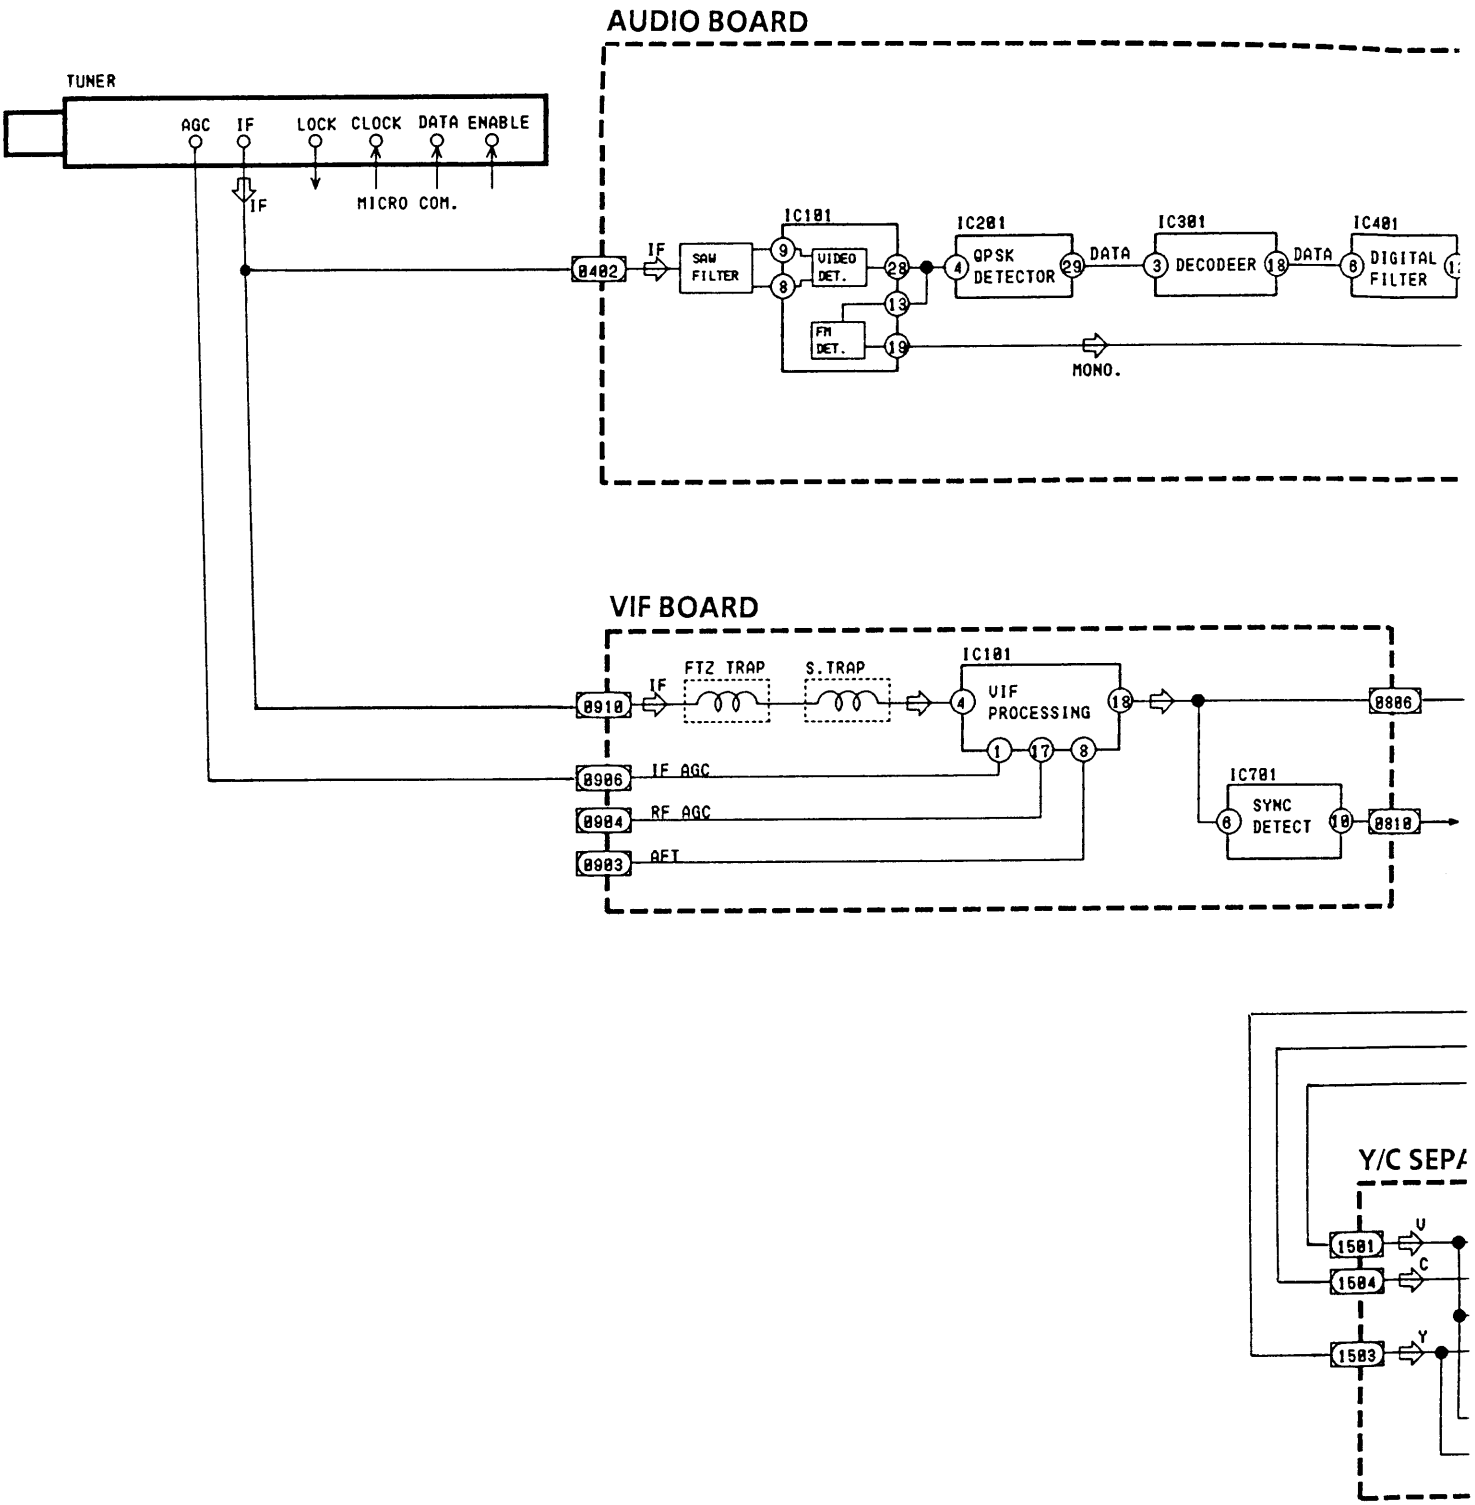

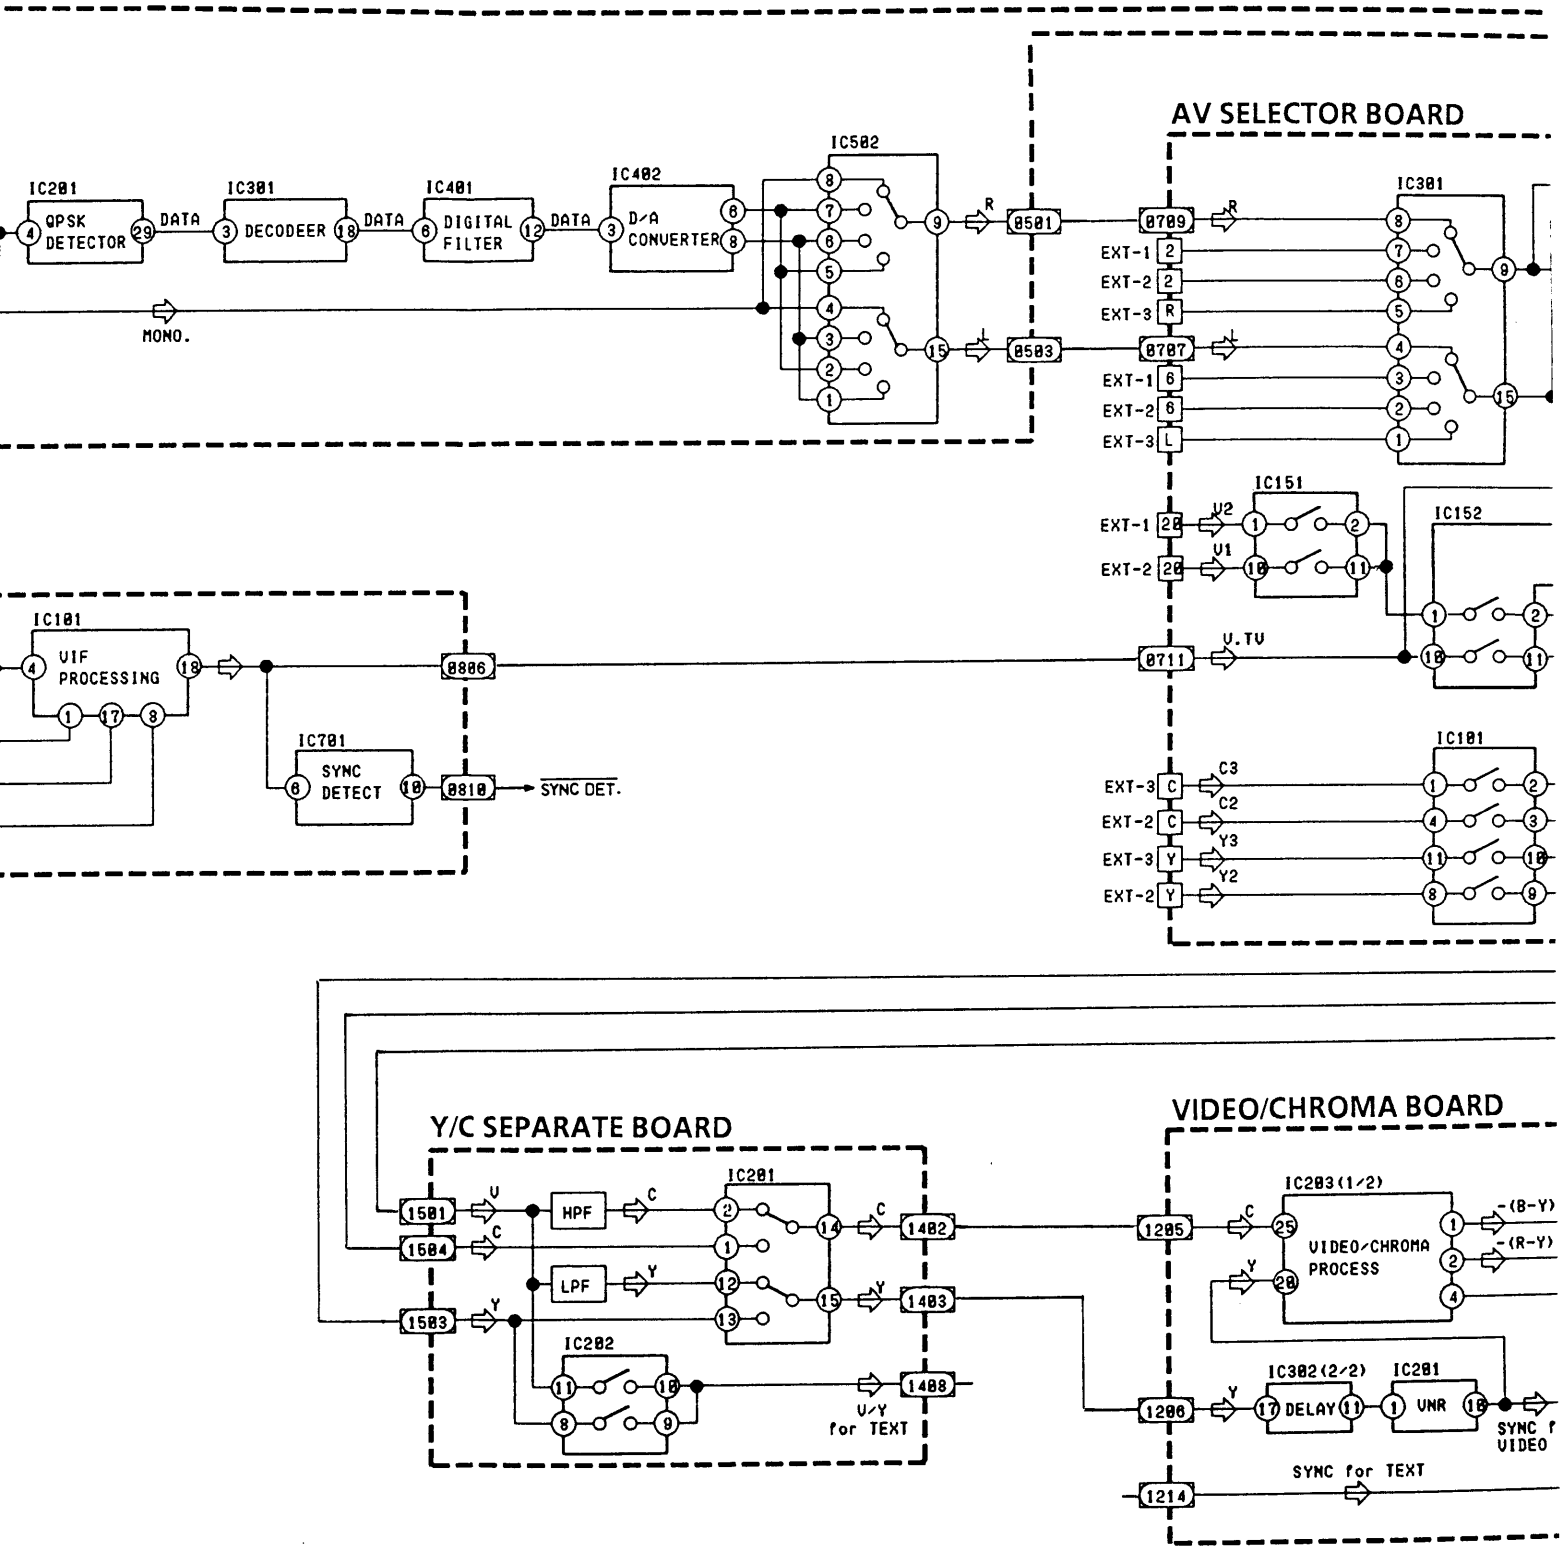
AV SELECTOR BOARD
IC201
QPSK DETECTOR
DATA
IC301
DECODEER
DATA
IC401
DIGITAL FILTER
DATA
IC402
D/A CONVERTER
IC502
MONO.
R
L
0501
0503
0709
0707
EXT-1
EXT-2
EXT-3
IC151
IC152
V2
V1
V.TV
0711
IC101
VIF PROCESSING
0806
IC701
SYNC DETECT
0810
SYNC DET.
C3
C2
Y3
Y2
Y/C SEPARATE BOARD
VIDEO/CHROMA BOARD
1501
1504
1503
HPF
LPF
IC201
IC202
1402
1403
1408
U/Y for TEXT
1205
1206
1214
IC203(1/2)
VIDEO/CHROMA PROCESS
-(B-Y)
-(R-Y)
IC302(2/2)
DELAY
VNR
SYNC for TEXT

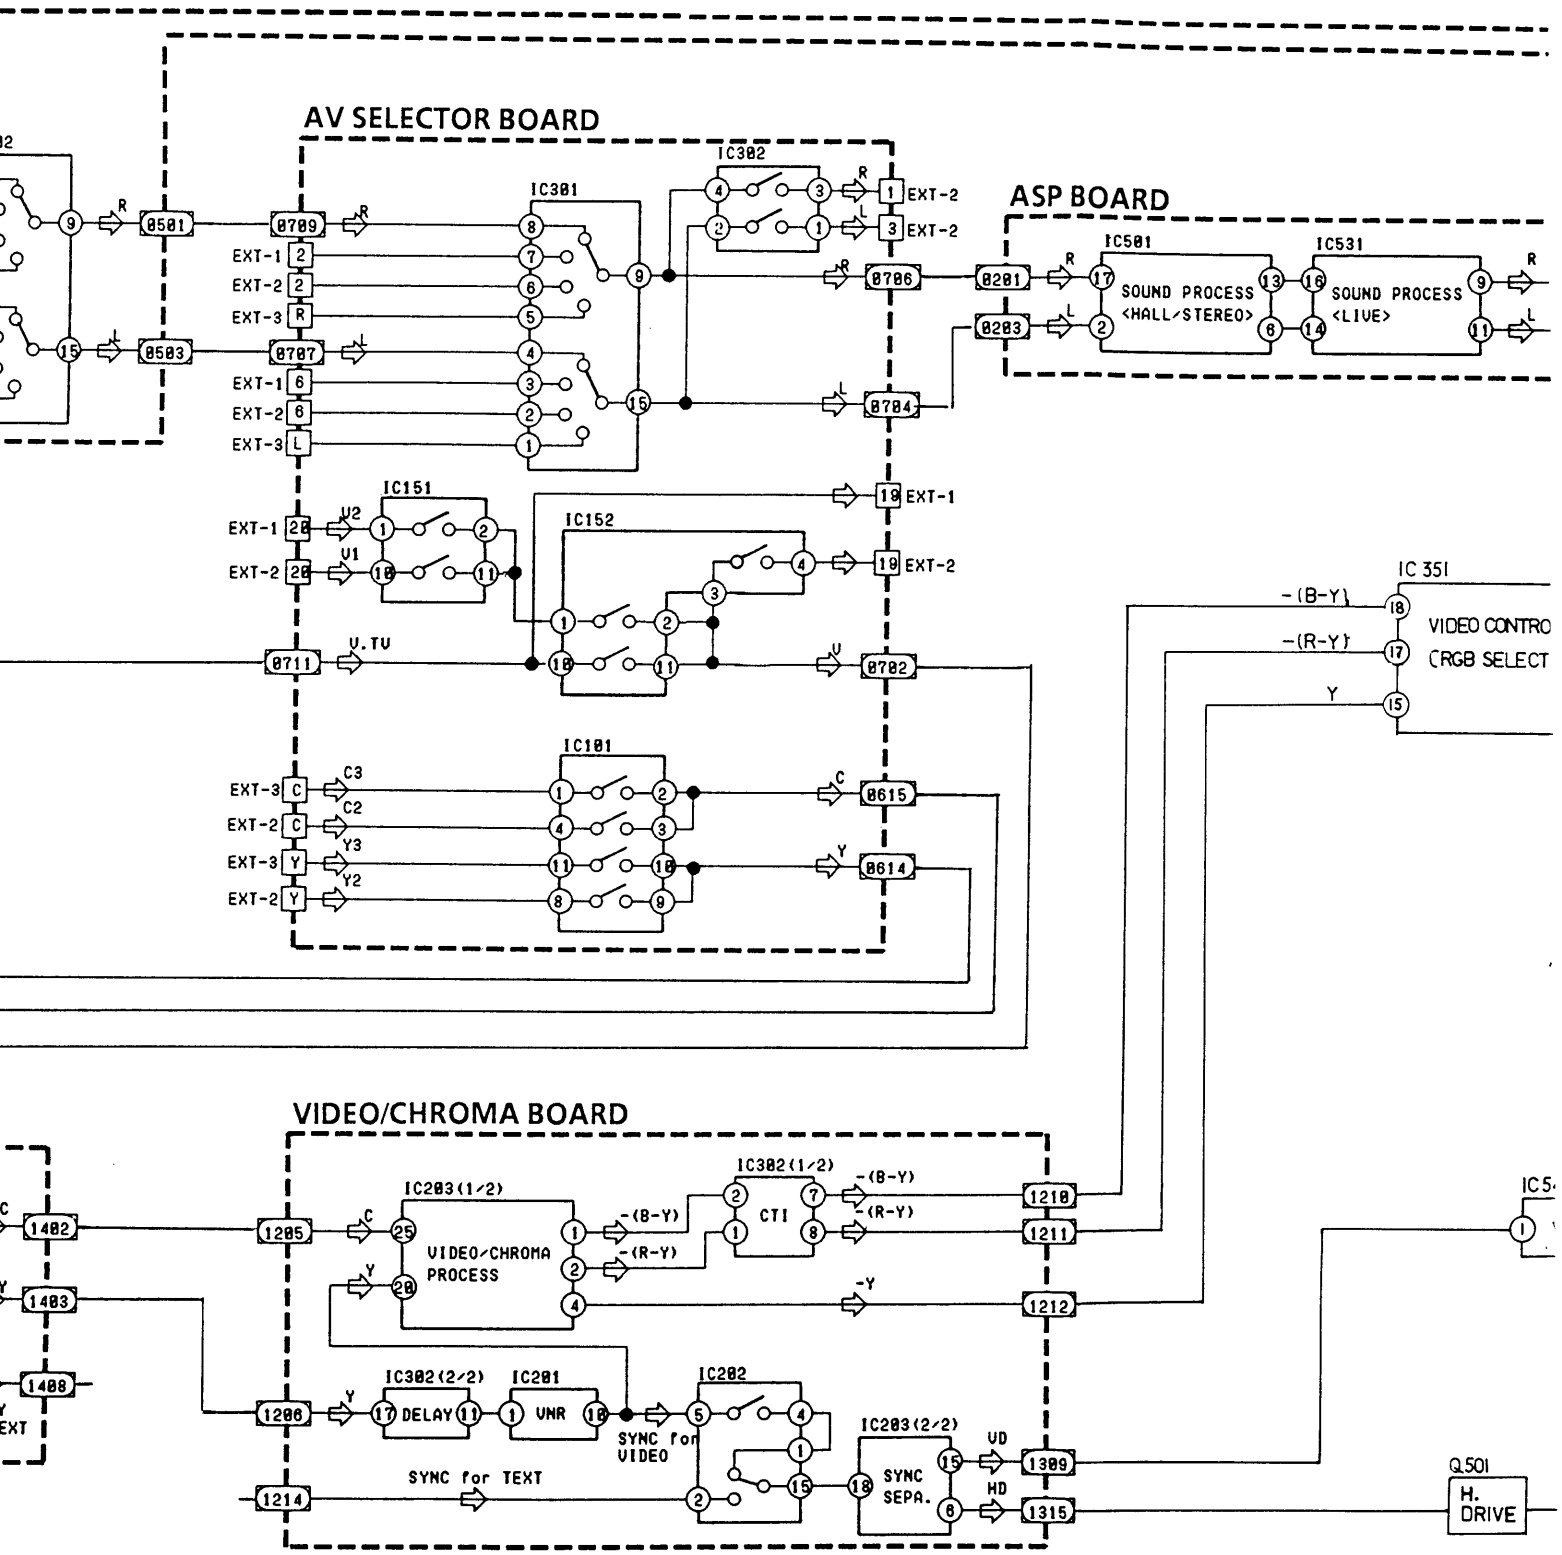
AV SELECTOR BOARD
ASP BOARD
VIDEO/CHROMA BOARD
IC302
IC301
IC151
IC152
IC101
IC501
IC531
IC351
IC203(1/2)
IC302(1/2)
IC302(2/2)
IC201
IC202
IC203(2/2)
EXT-1
EXT-2
EXT-3
SOUND PROCESS <HALL/STEREO>
SOUND PROCESS <LIVE>
VIDEO/CHROMA PROCESS
CTI
DELAY
VNR
SYNC for VIDEO
SYNC for TEXT
SYNC SEPA.
VIDEO CONTRO
RGB SELECT
H. DRIVE
Q501

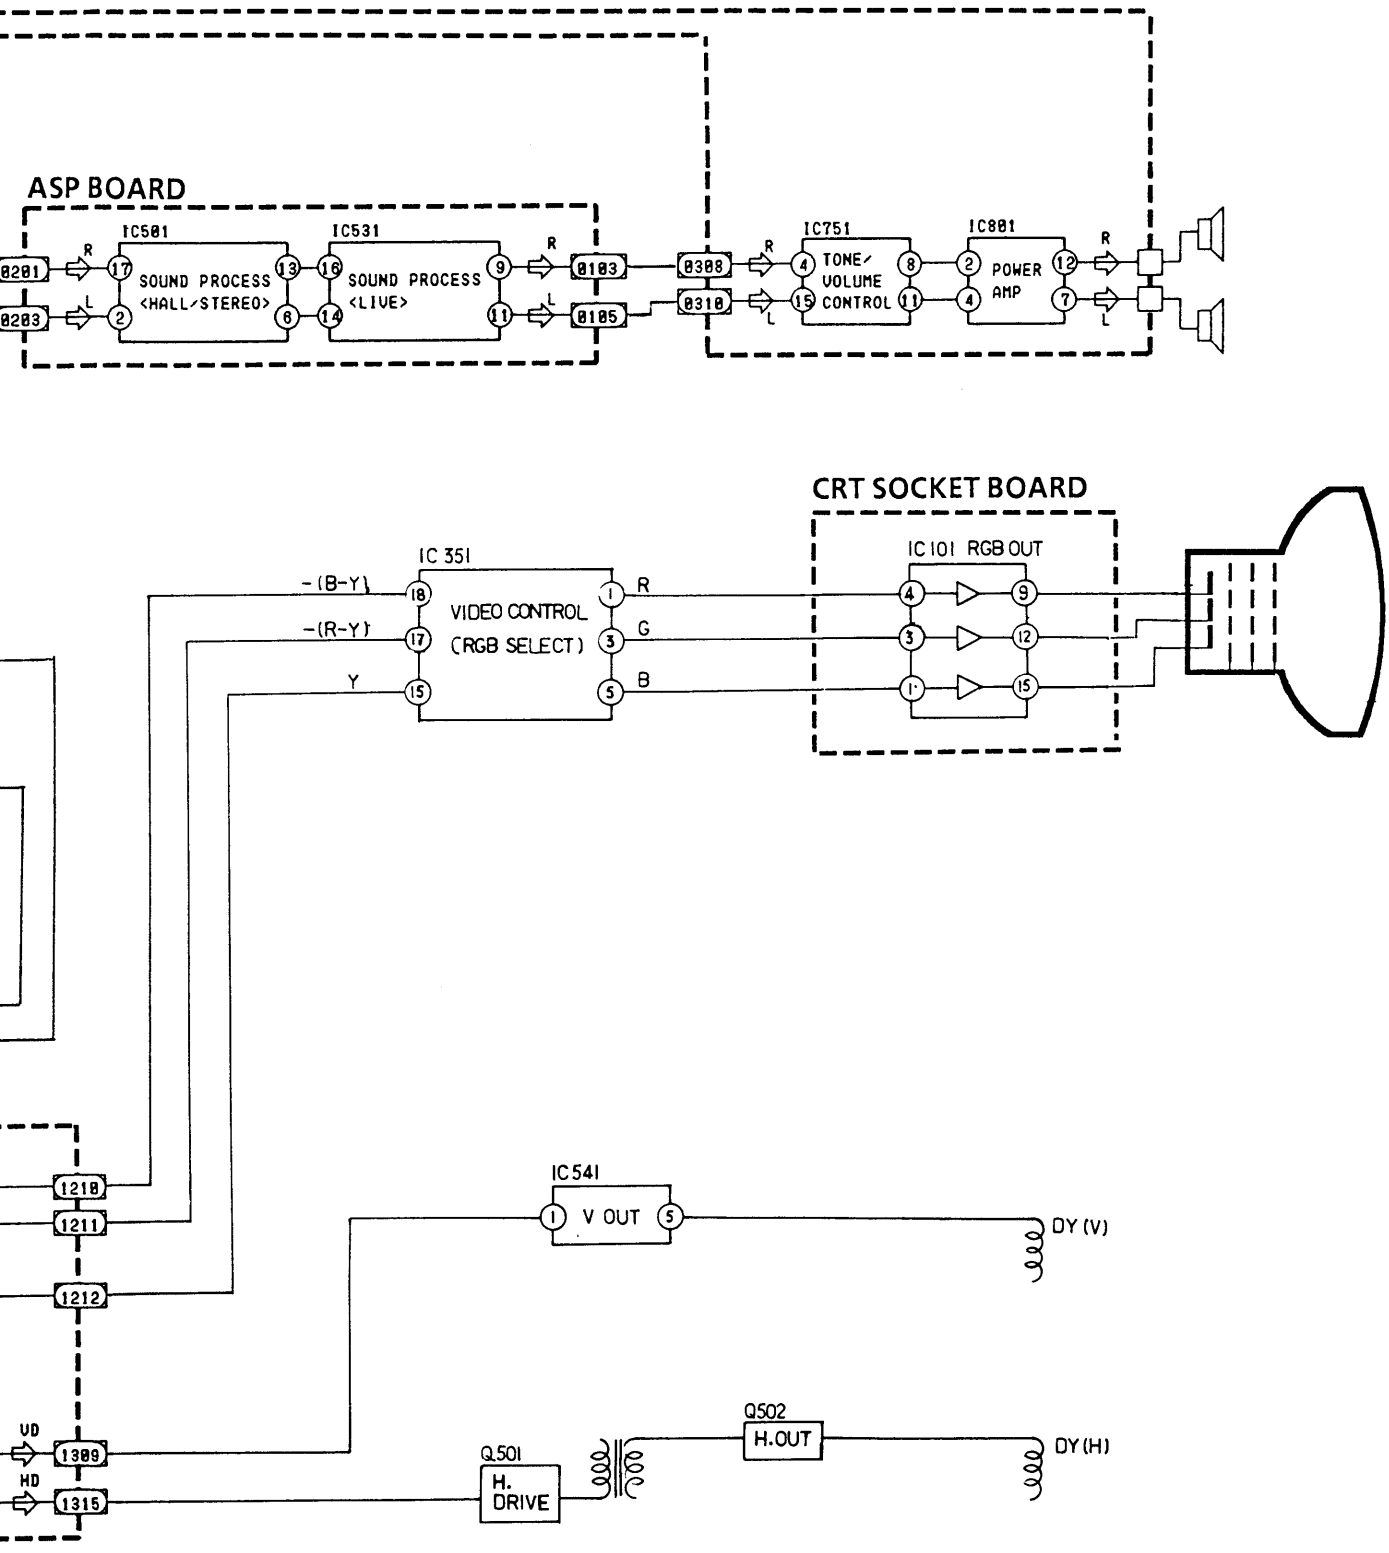
ASP BOARD
IC501
IC531
SOUND PROCESS
<HALL/STEREO>
SOUND PROCESS
<LIVE>
IC751
TONE/
VOLUME
CONTROL
IC801
POWER
AMP
CRT SOCKET BOARD
IC 351
VIDEO CONTROL
(RGB SELECT)
IC101 RGB OUT
-(B-Y)
-(R-Y)
Y
R
G
B
IC541
V OUT
DY (V)
Q502
H.OUT
DY (H)
Q501
H.
DRIVE
VD
HD

5. SCHEMATIC DIAGRAMS AND BACK PATTERNS
■ MAIN PCB AND CONTROL PCB SCHEMATIC DIAGRANS

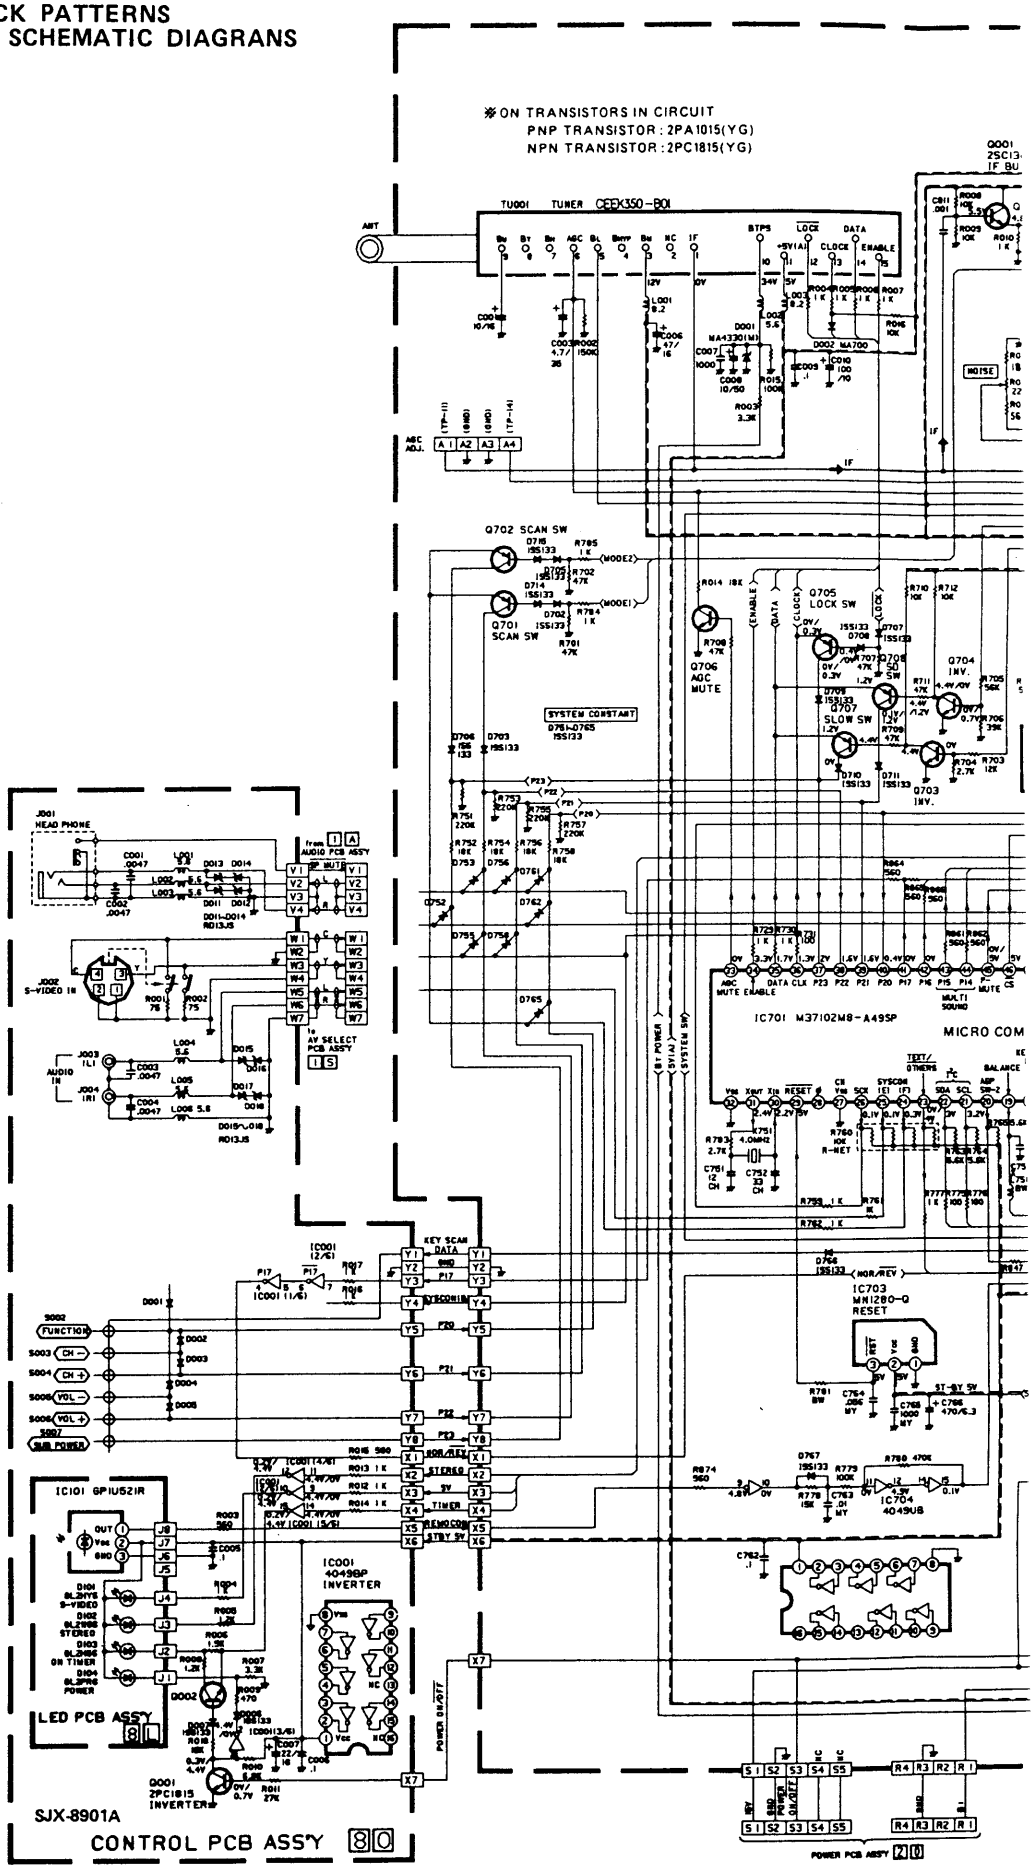

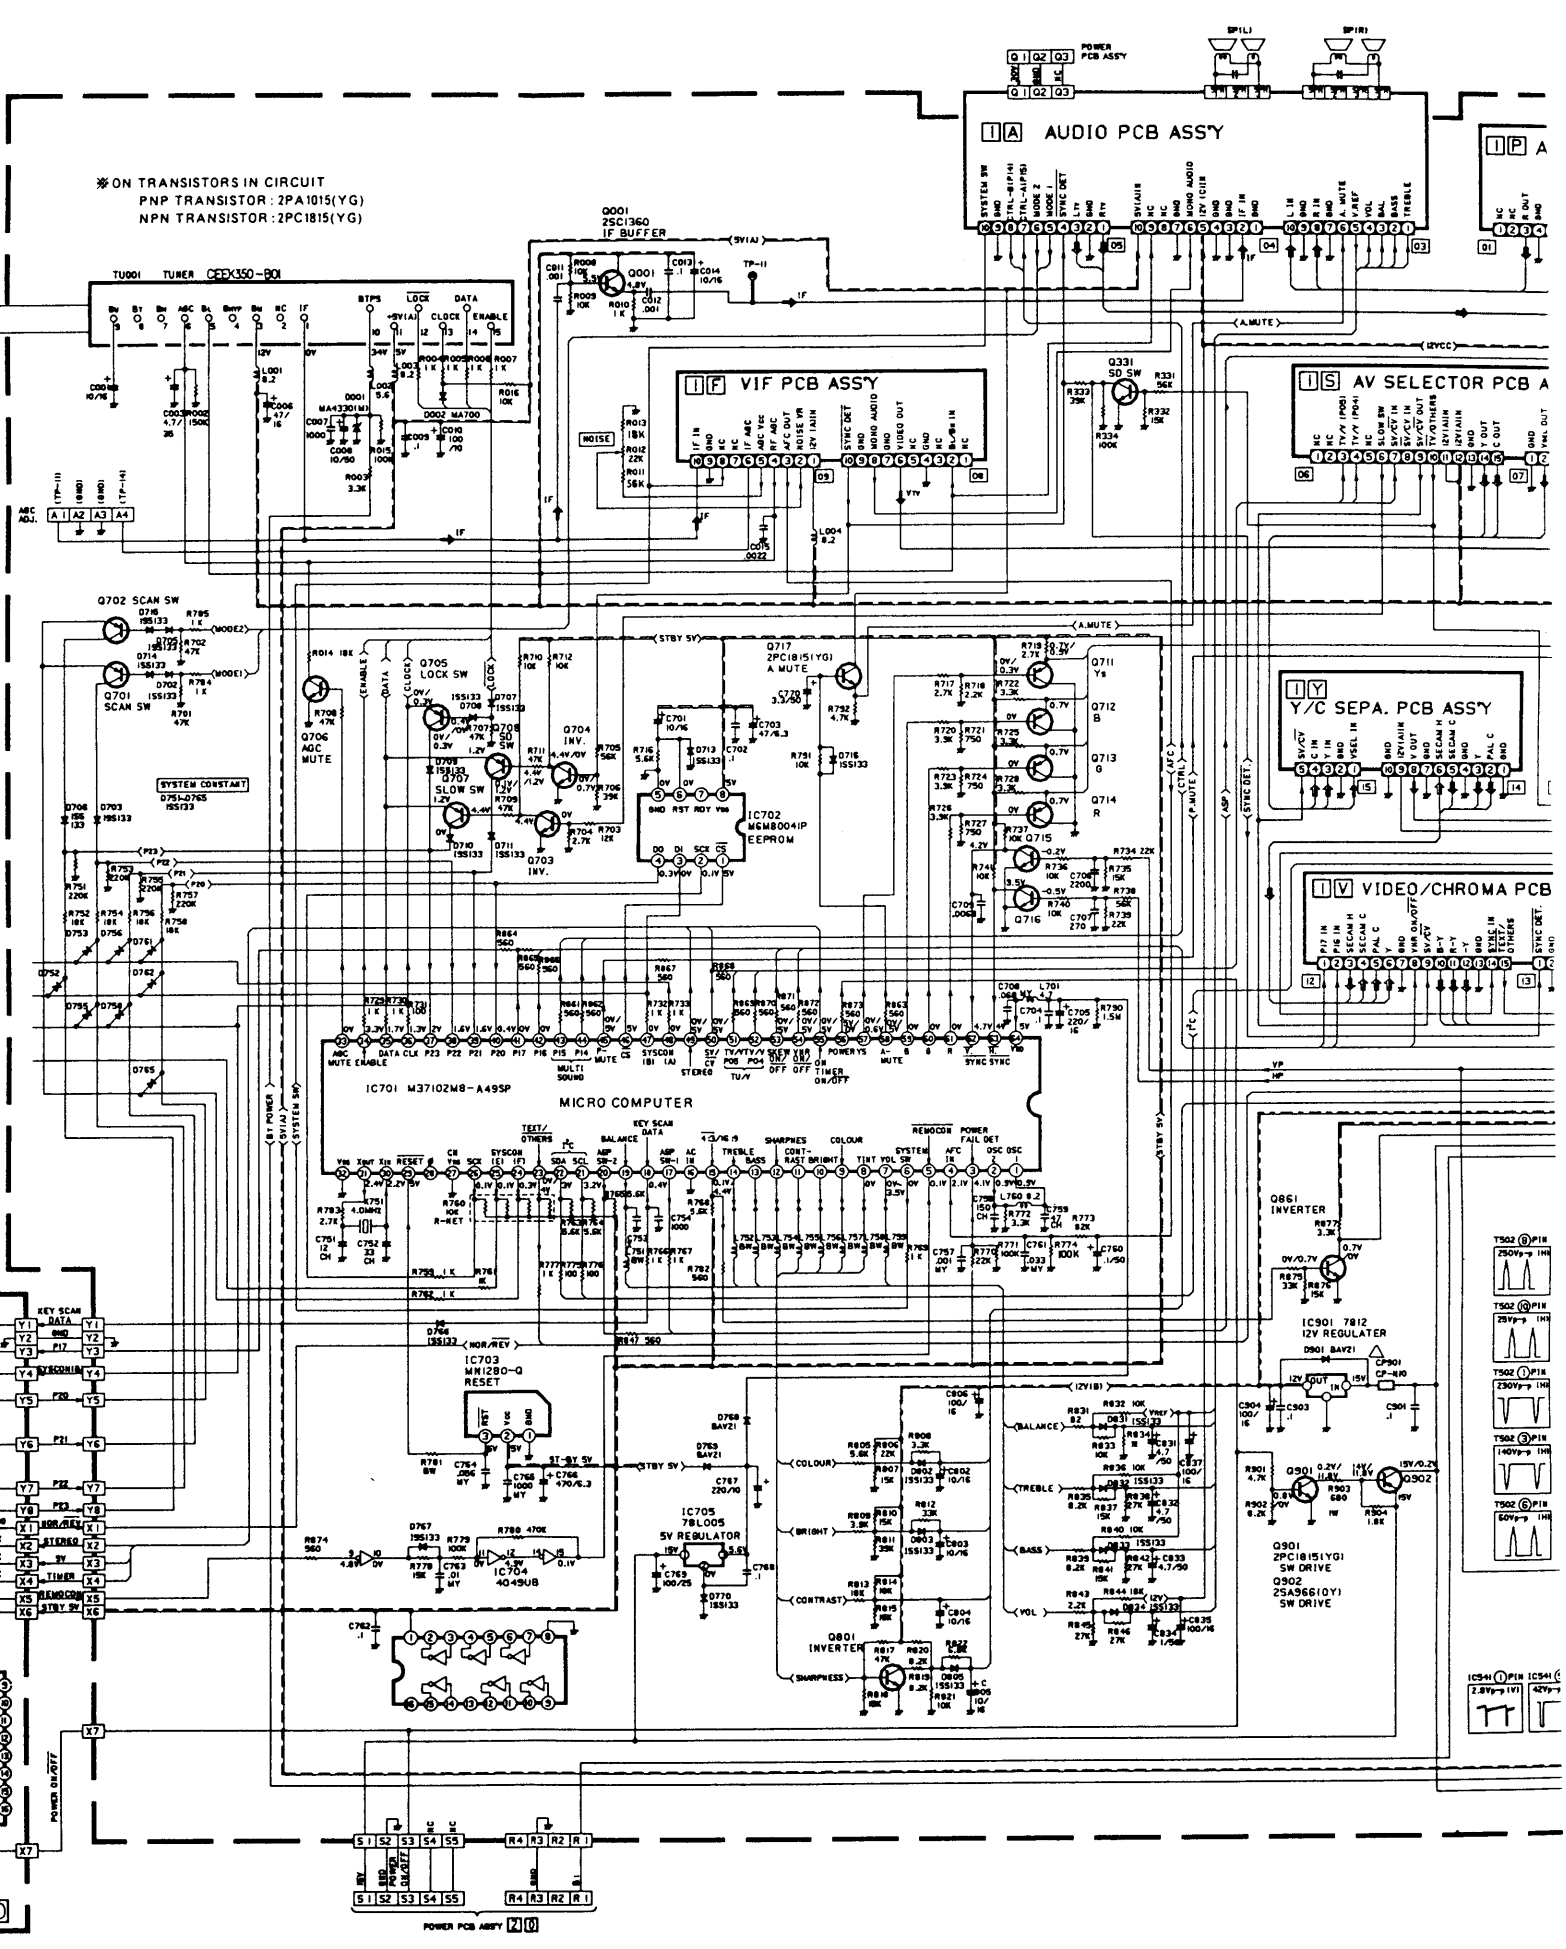
※ON TRANSISTORS IN CIRCUIT
PNP TRANSISTOR : 2PA1015(YG)
NPN TRANSISTOR : 2PC1815(YG)
IA AUDIO PCB ASSY
IF VIF PCB ASSY
IS AV SELECTOR PCB A
IY Y/C SEPA. PCB ASSY
IV VIDEO/CHROMA PCB
IP A
TU001 TUNER CEEX350-B01
Q001 2SC1360 IF BUFFER
IC701 M37102M8-A49SP
MICRO COMPUTER
IC702 M5M80041P EEPROM
IC703 MN1280-Q RESET
IC704 4049UB
IC705 78L005 5V REGULATOR
IC901 7812 12V REGULATER
Q701 SCAN SW
Q702 SCAN SW
Q703 INV.
Q704 INV.
Q705 LOCK SW
Q706 AGC MUTE
Q707 SLOW SW
Q711 Ys
Q712 B
Q713 G
Q714 R
Q715
Q716
Q717 2PC1815(YG) A.MUTE
Q331 SD SW
Q861 INVERTER
Q801 INVERTER
Q901 2PC1815(YG) SW DRIVE
Q902 2SA966(OY) SW DRIVE
SYSTEM CONSTANT
KEY SCAN DATA
POWER PCB ASSY

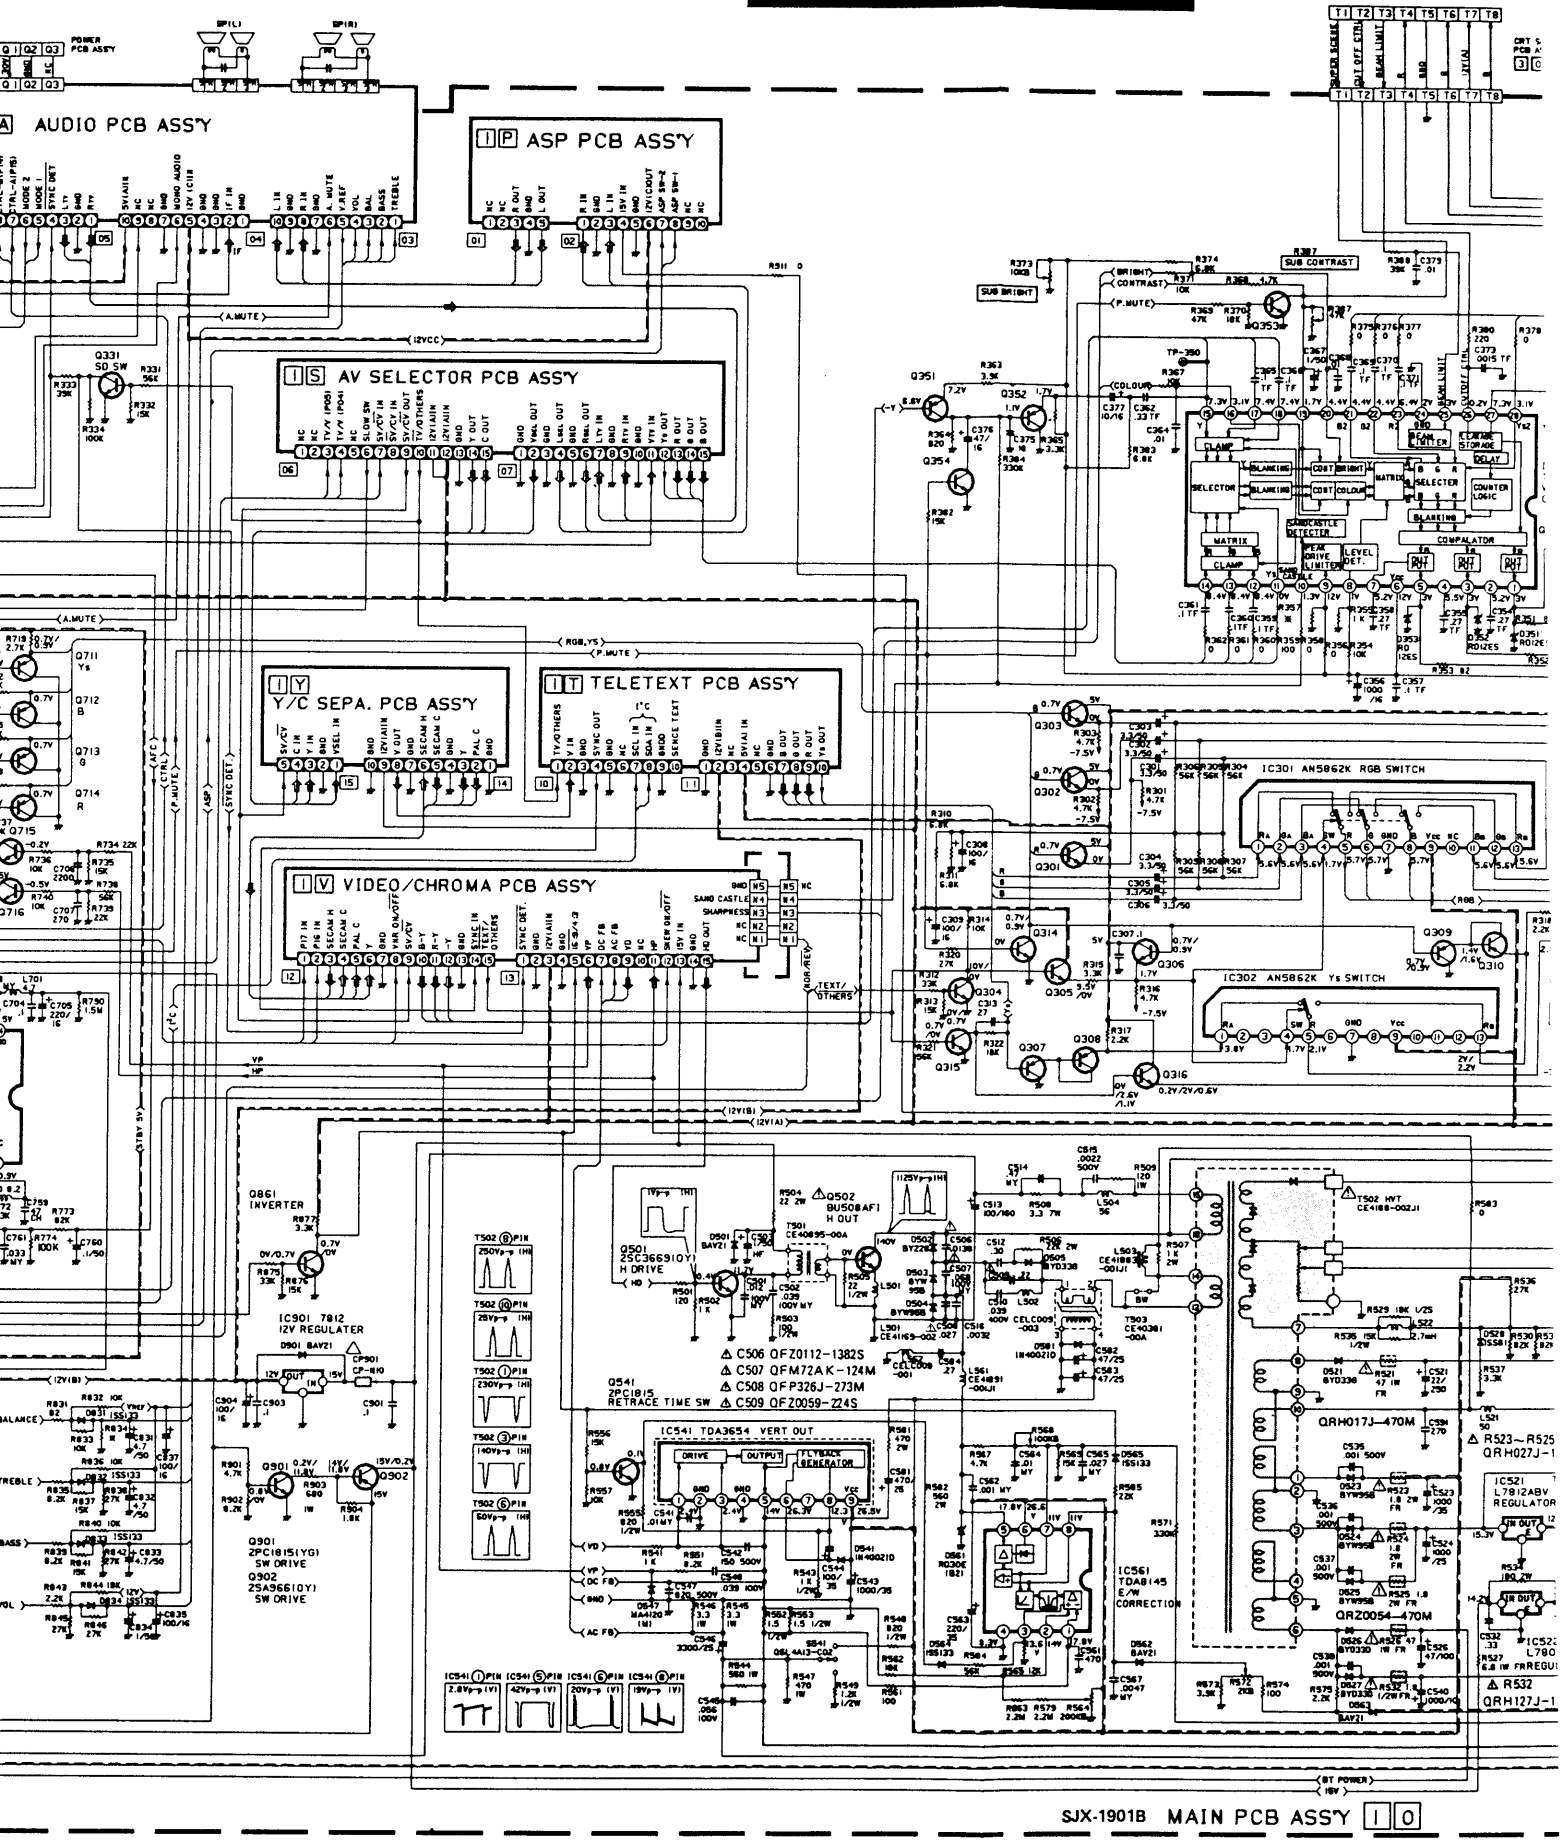
AUDIO PCB ASS'Y
ASP PCB ASS'Y
AV SELECTOR PCB ASS'Y
Y/C SEPA. PCB ASS'Y
TELETEXT PCB ASS'Y
VIDEO/CHROMA PCB ASS'Y
IC301 AN5862K RGB SWITCH
IC302 AN5862K Ys SWITCH
IC901 7812 12V REGULATOR
Q861 INVERTER
Q501 2SC3669(QY) H DRIVE
Q502 BU508AF(I) H OUT
IC541 TDA3654 VERT OUT
IC561 TDA8145 E/W CORRECTION
Q901 2PC1815(YG) SW DRIVE
Q902 2SA966(QY) SW DRIVE
Q541 2PC1815 RETRACE TIME SW
T502 HVT CE4188-002JI
SJX-1901B MAIN PCB ASS'Y

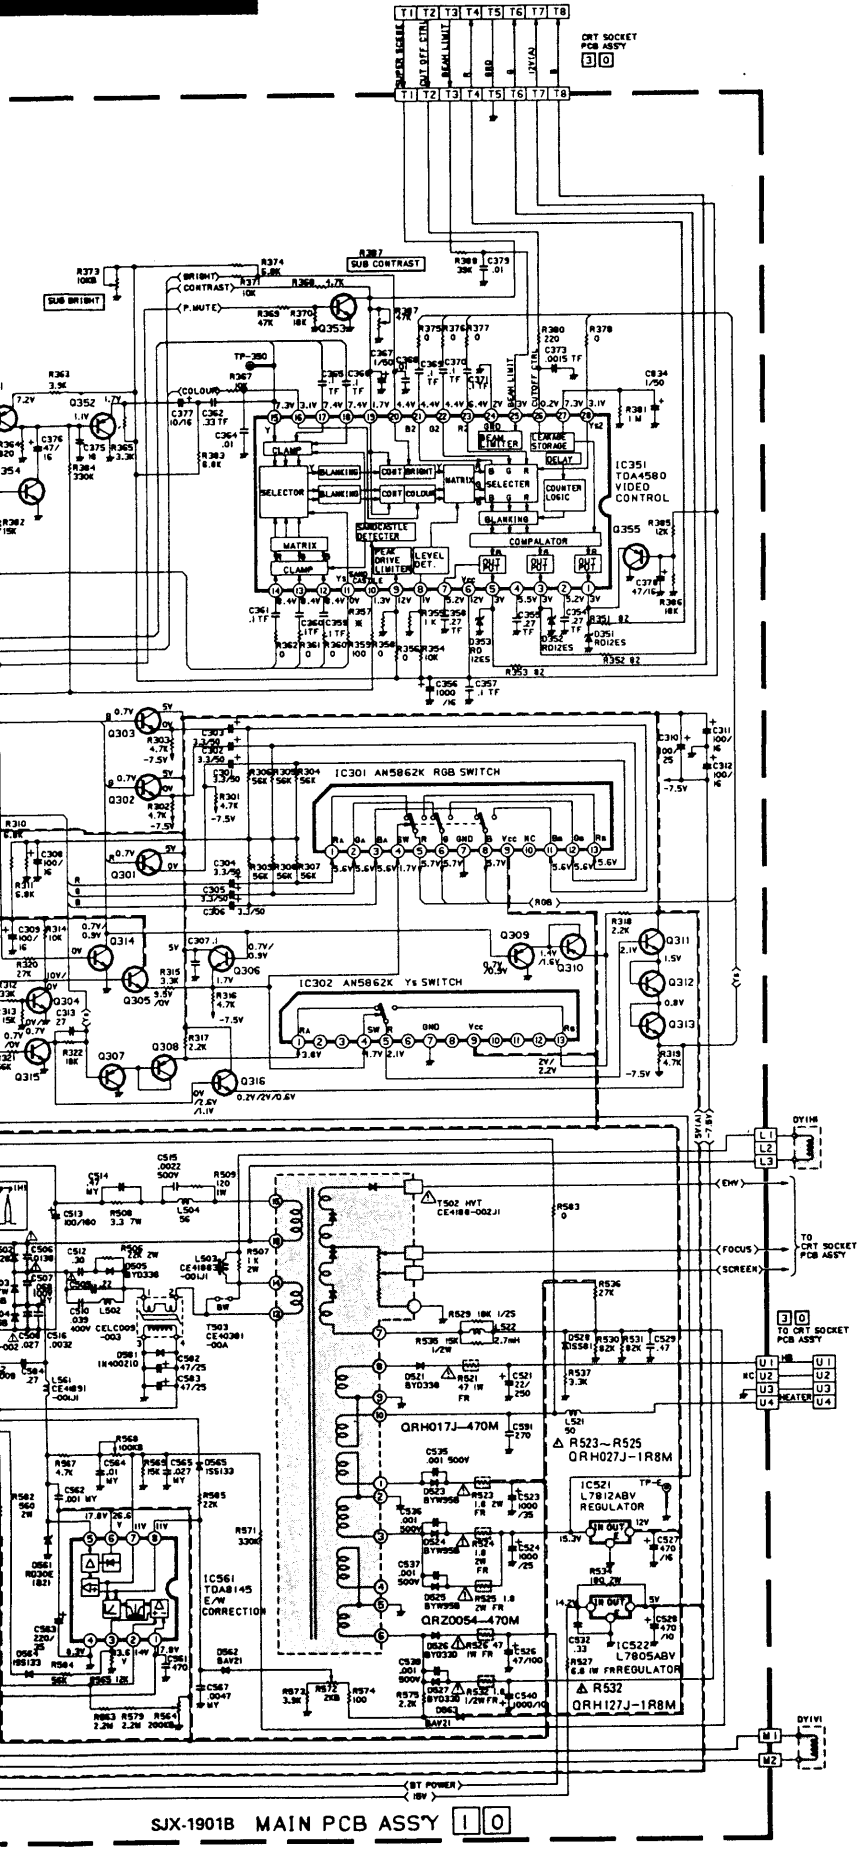
CRT SOCKET PCB ASSY
SUB CONTRAST
SUB BRIGHT
IC351 TDA4580 VIDEO CONTROL
IC301 AN5862K RGB SWITCH
IC302 AN5862K Ys SWITCH
IC561 TDA8145 E/W CORRECTION
IC521 L7812ABV REGULATOR
IC522 L7805ABV REGULATOR
QRH017J-470M
QRZ0054-470M
QRH027J-1R8M
QRH127J-1R8M
TO CRT SOCKET PCB ASSY
SJX-1901B MAIN PCB ASS'Y 10

CRT SOCKET PCB SCHEMATIC DIAGRAM AND BACK PATTERN

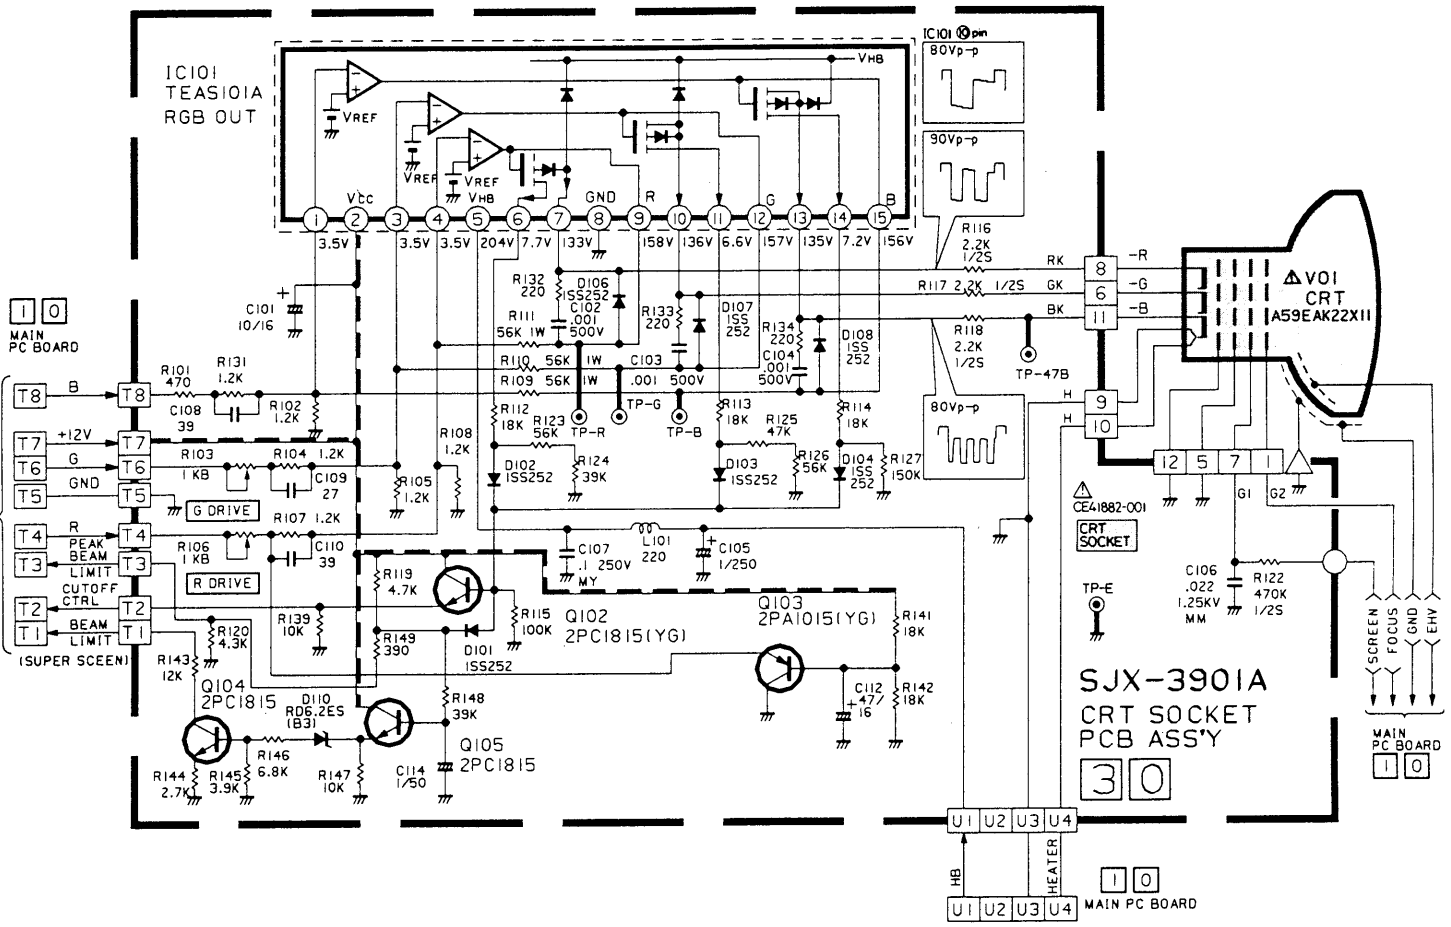

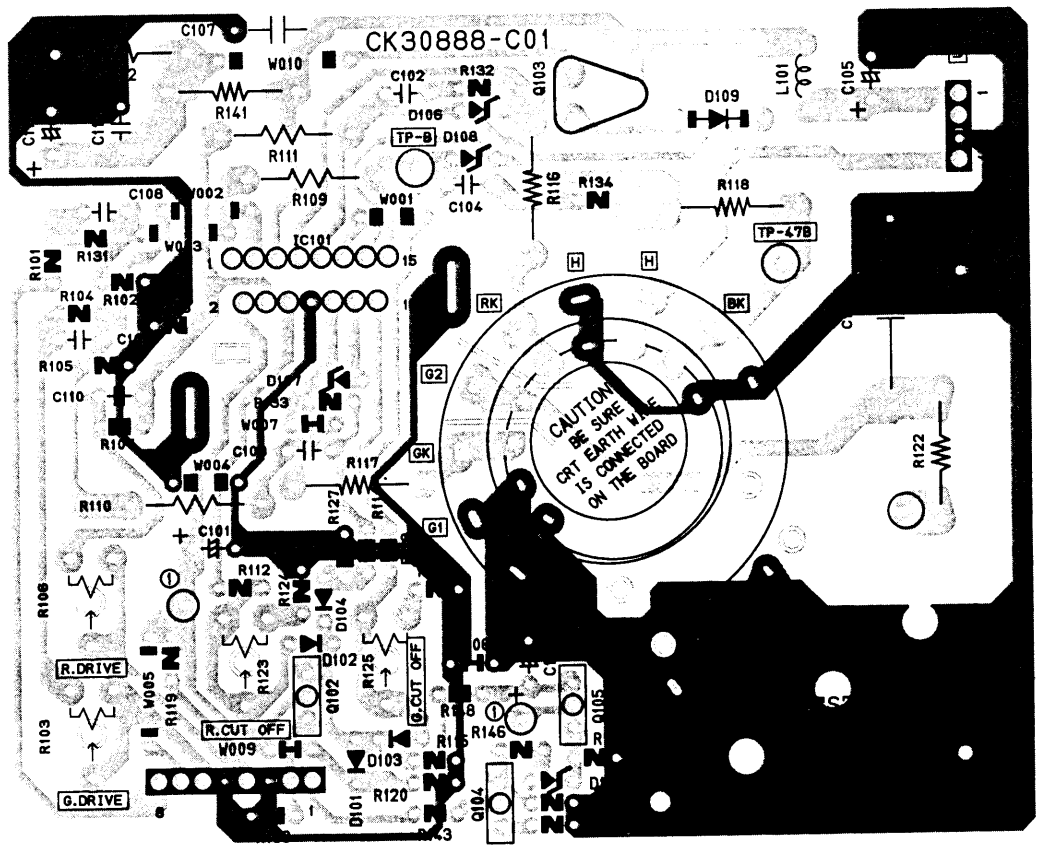

For Service Manuals
MAURITRON SERVICES
8 Cherry Tree Road, Chinnor
Oxfordshire, OX9 4QY.
Tel (01844) 351694
Fax (01844) 352554
email:- mauritron@dial.pipex.com

■ Y/C SEPARATE PCB SCHEMATIC DIAGRAM AND BACK PATTERN

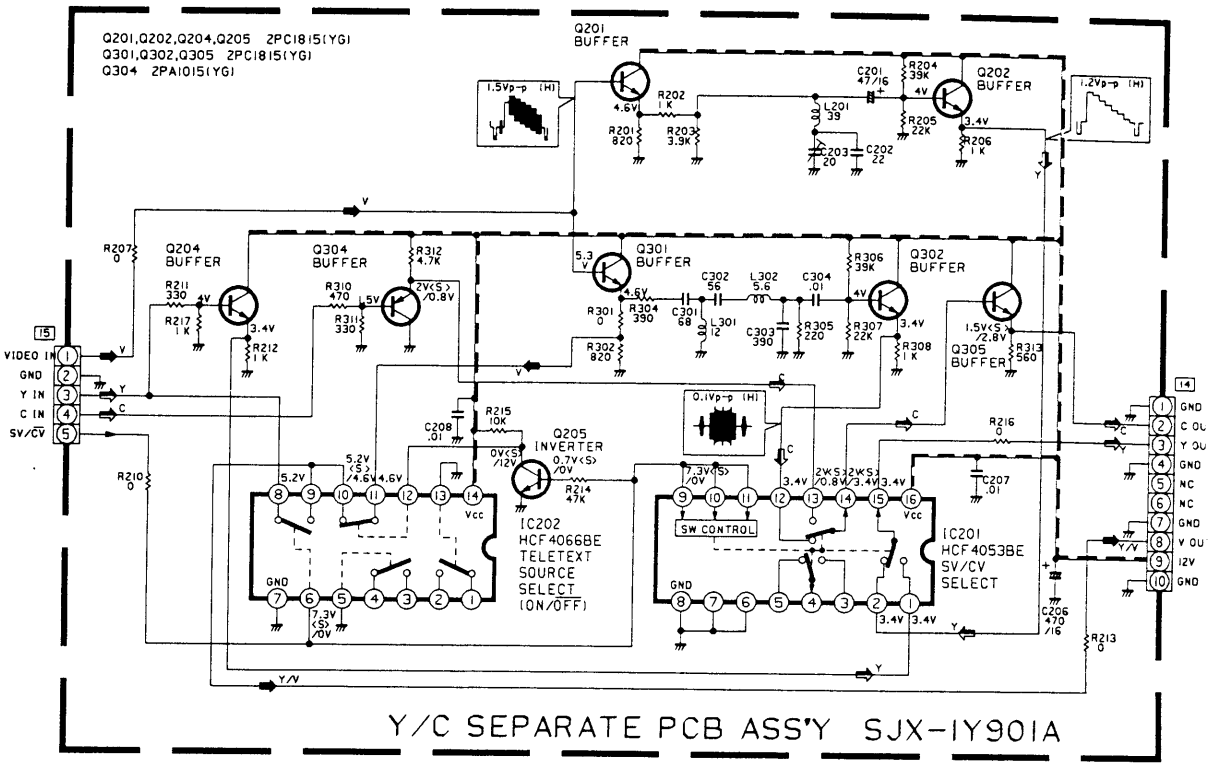

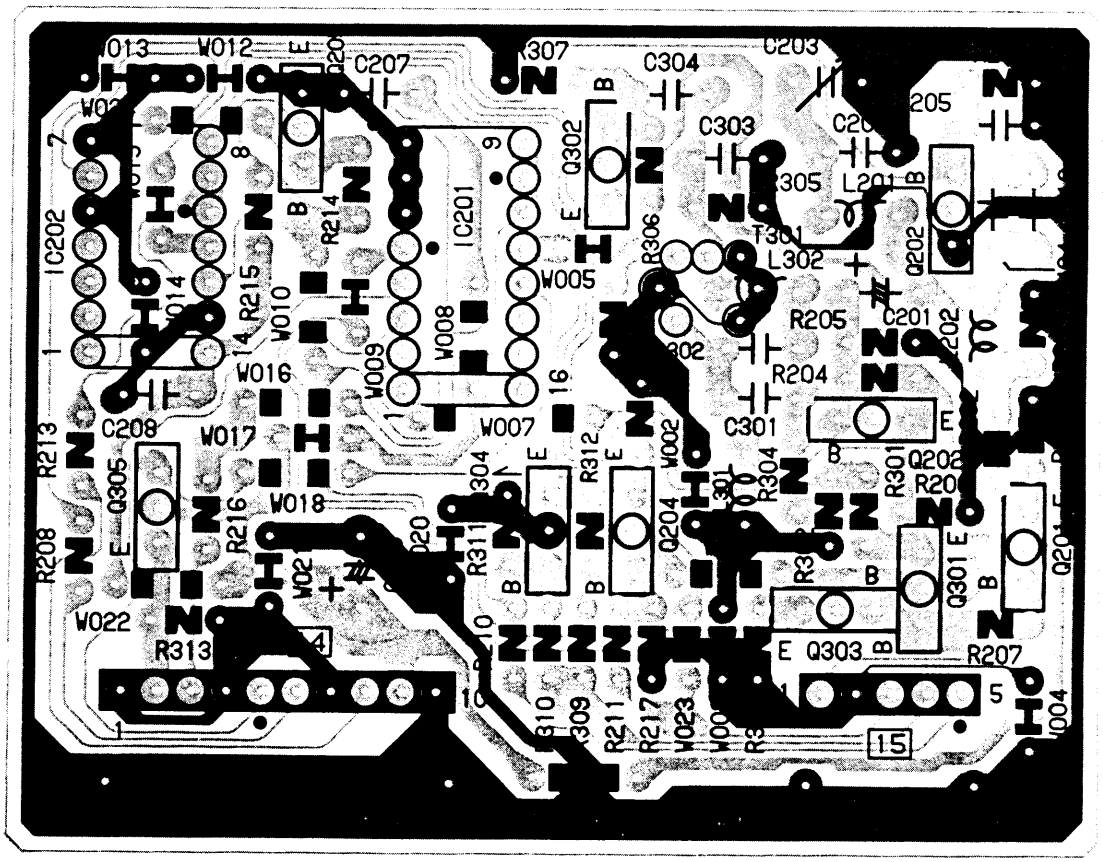

TOP

■ MAIN PCB PATTERN

FRONT

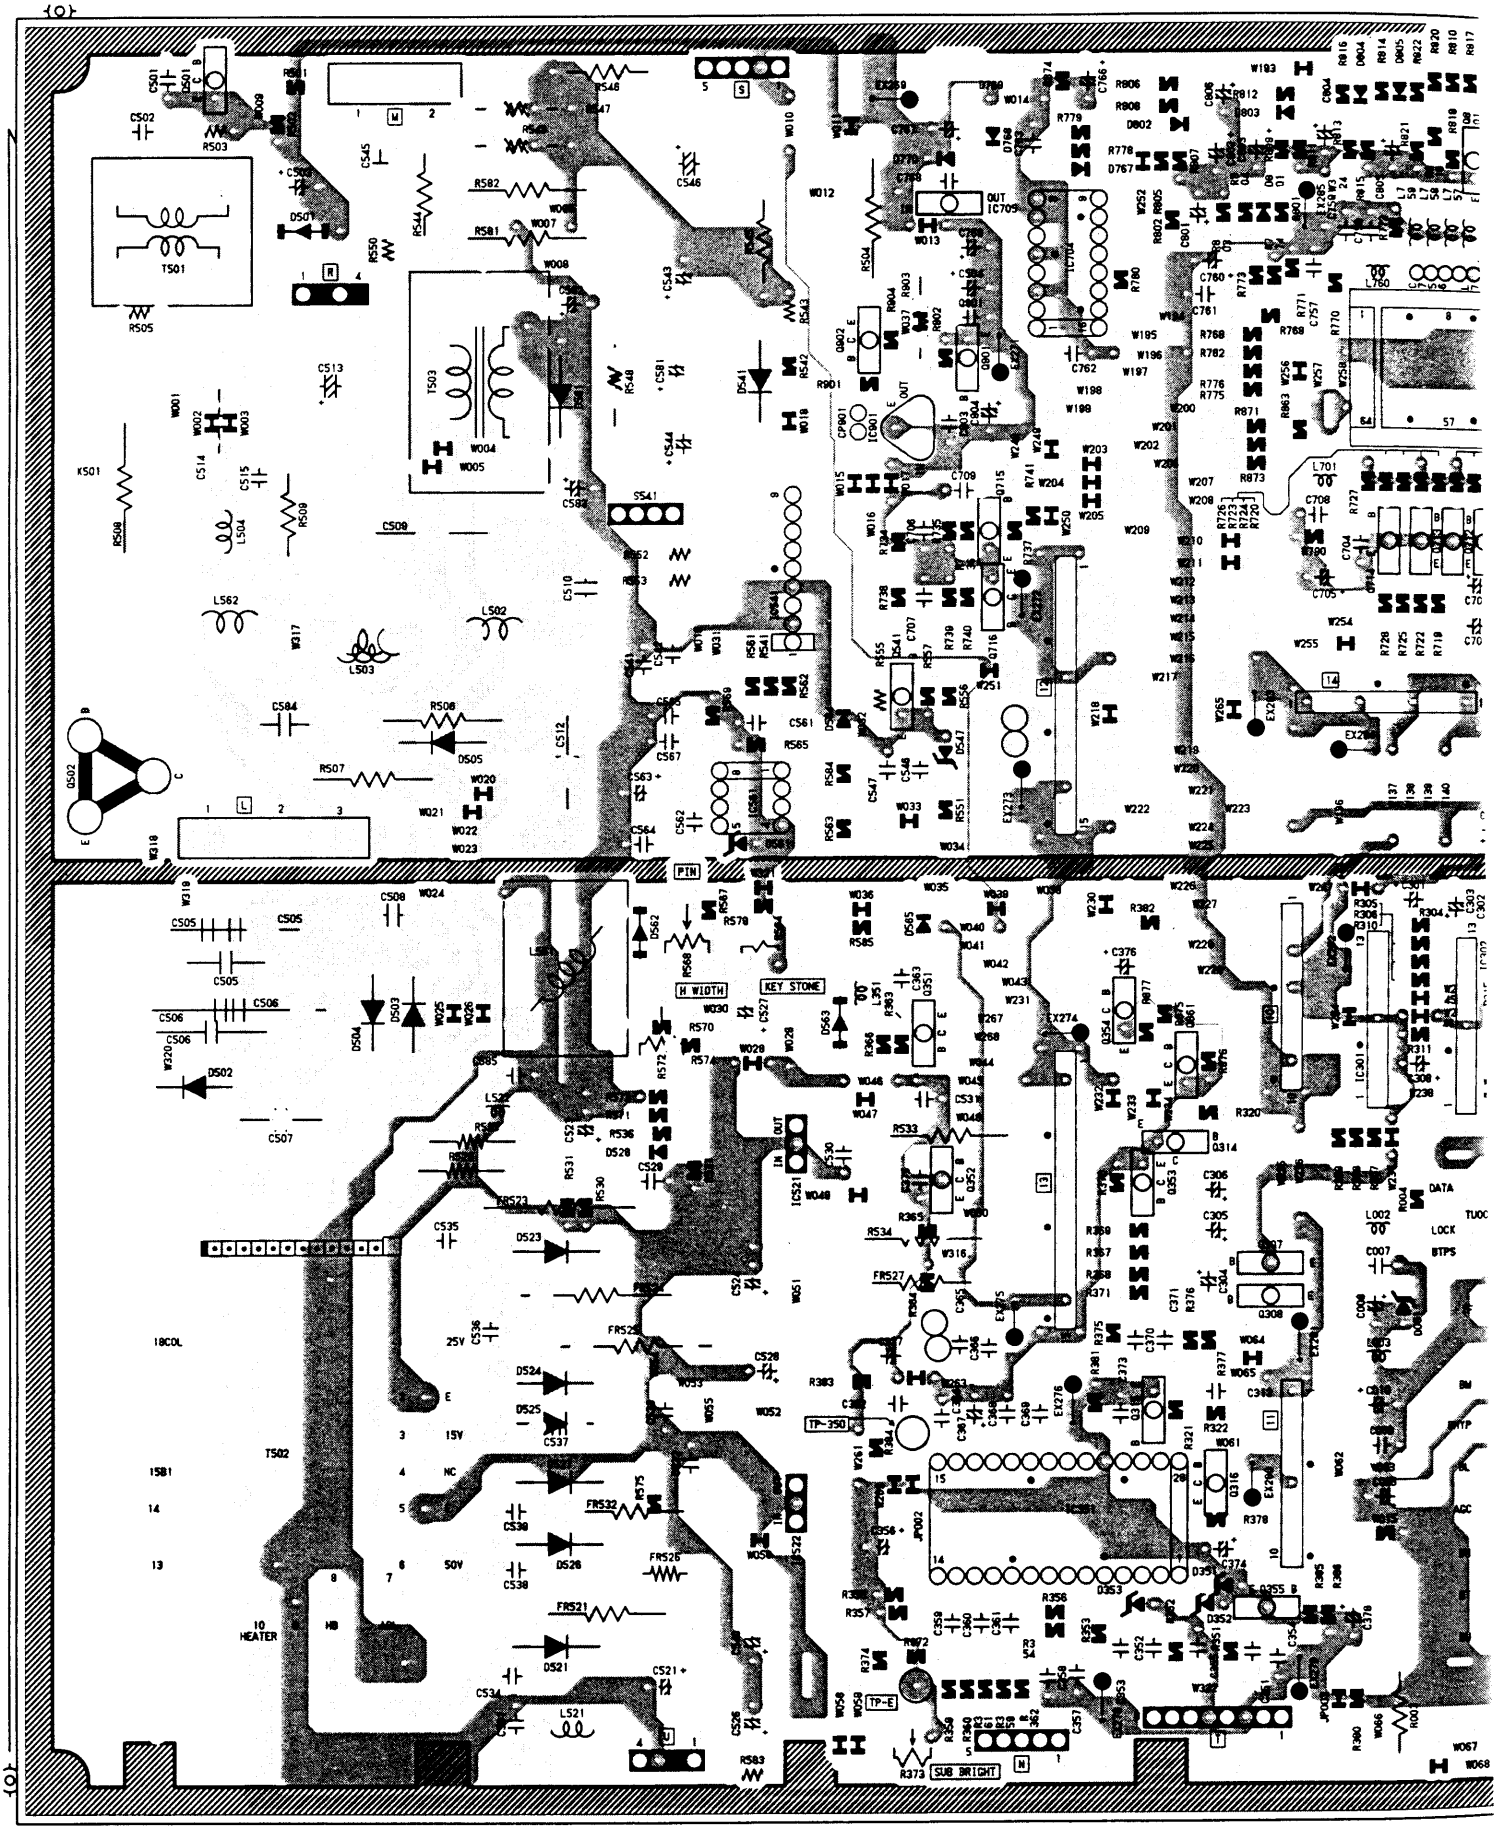

FRONT

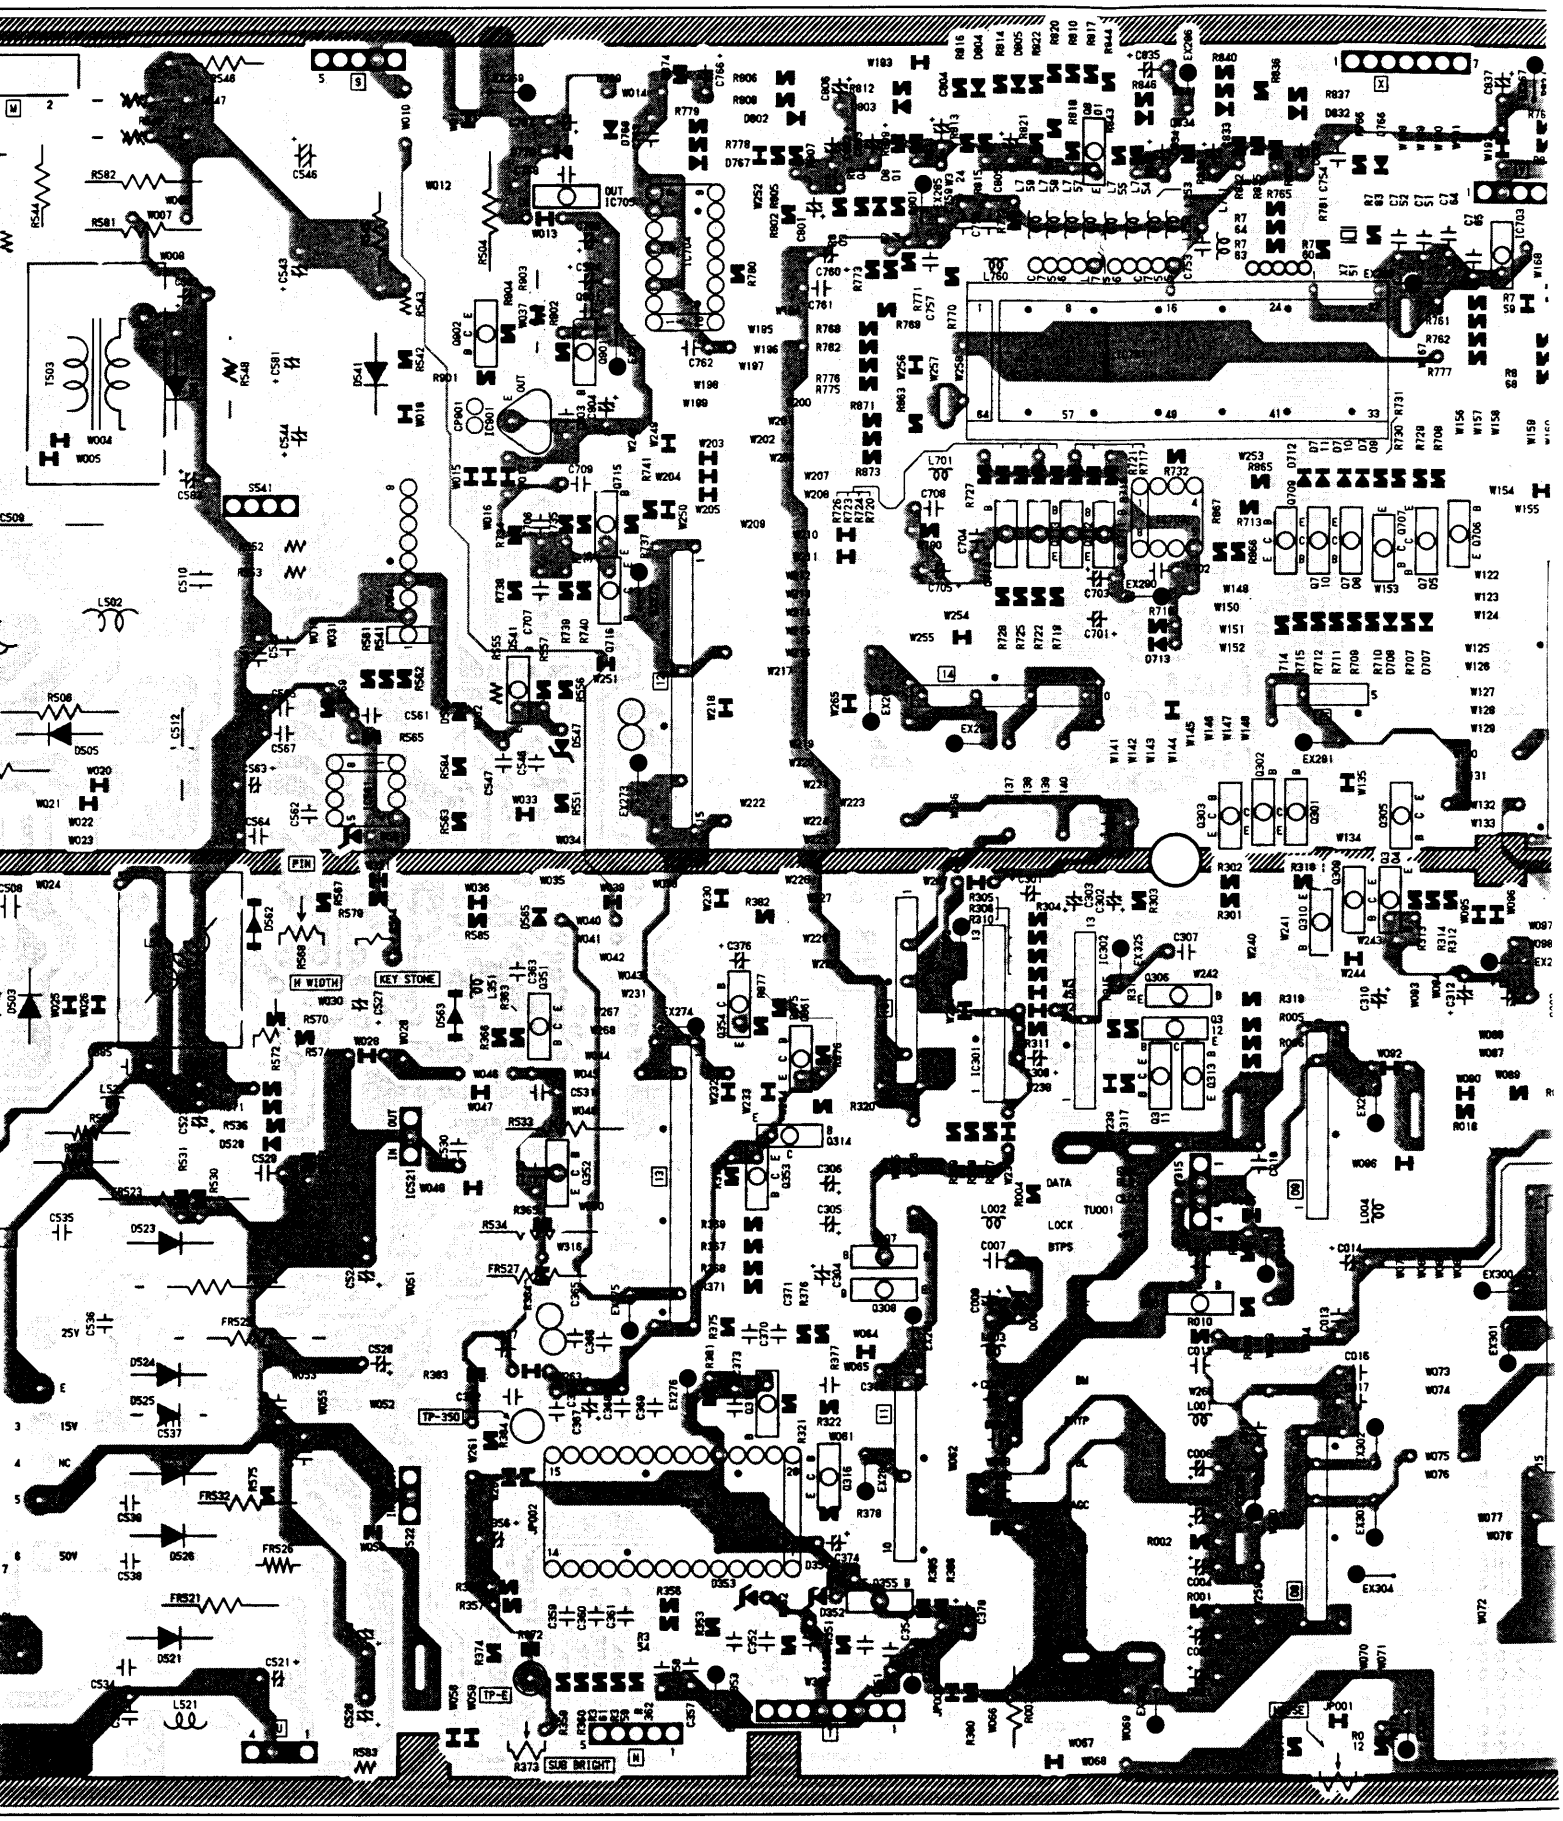

(No.50383) 13

14 (No.50383)

■ CONTROL PCB BACK PATTERN

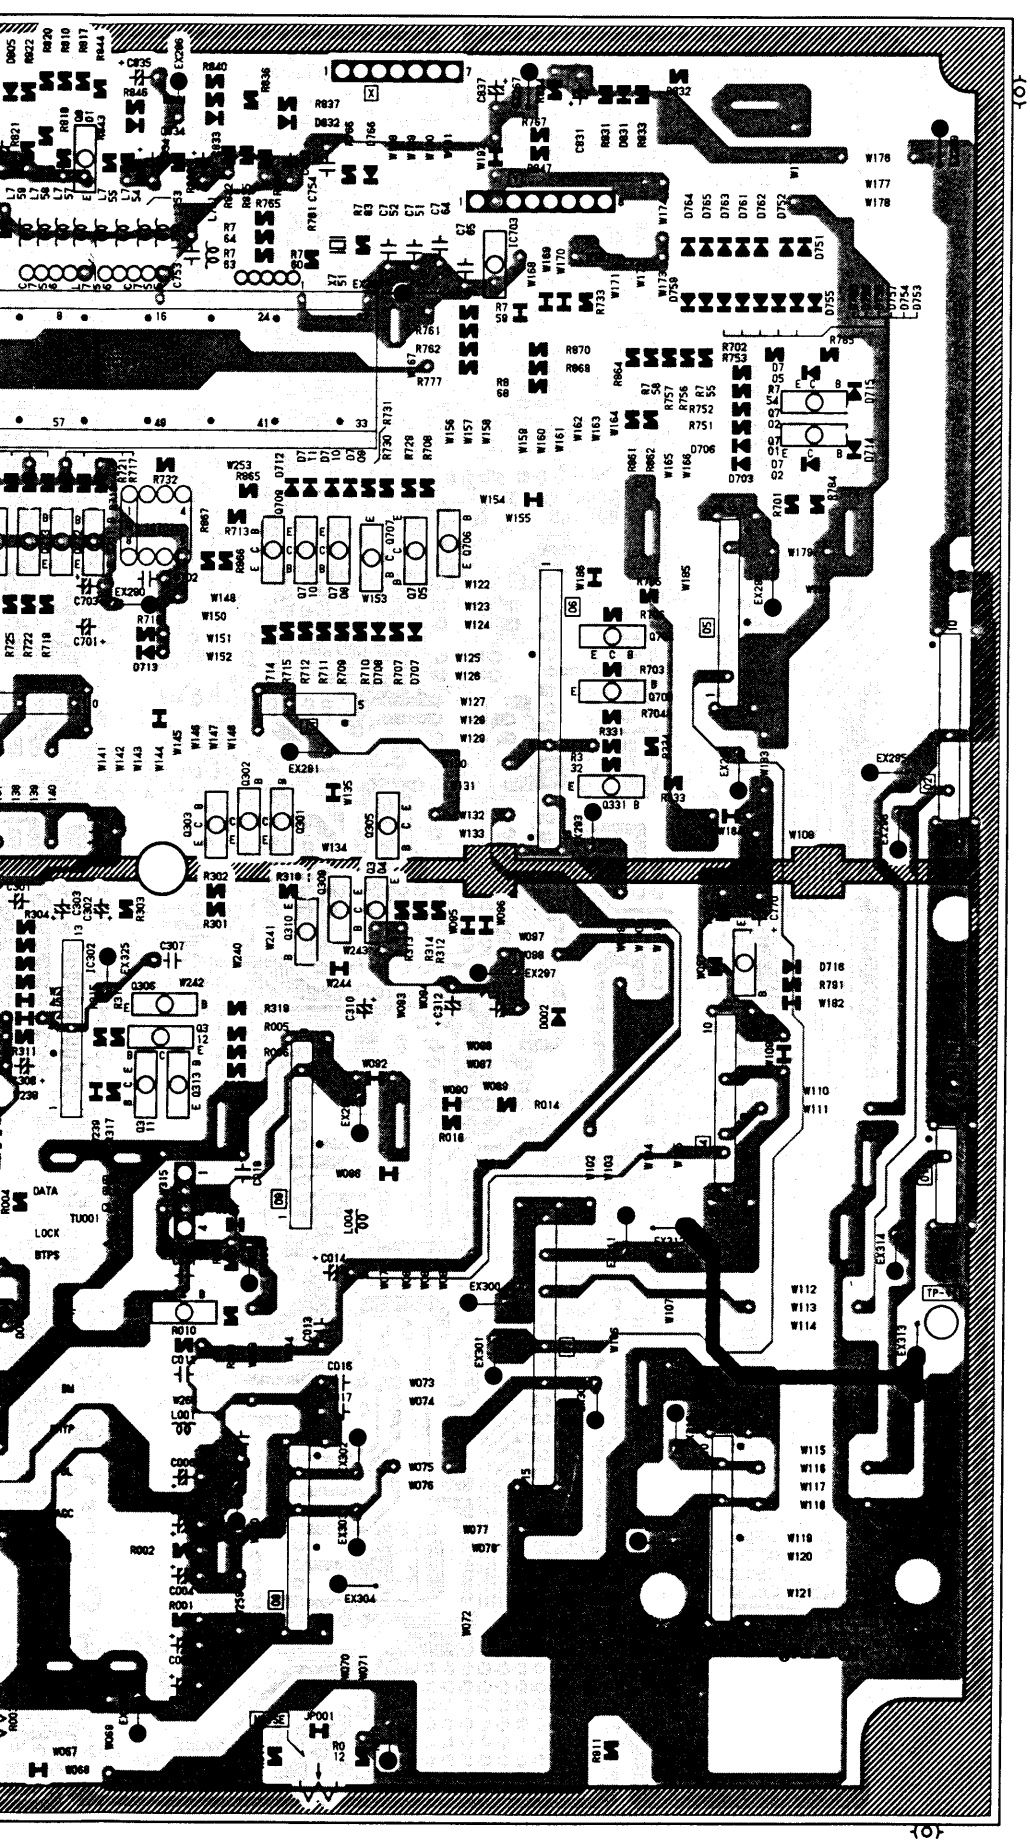

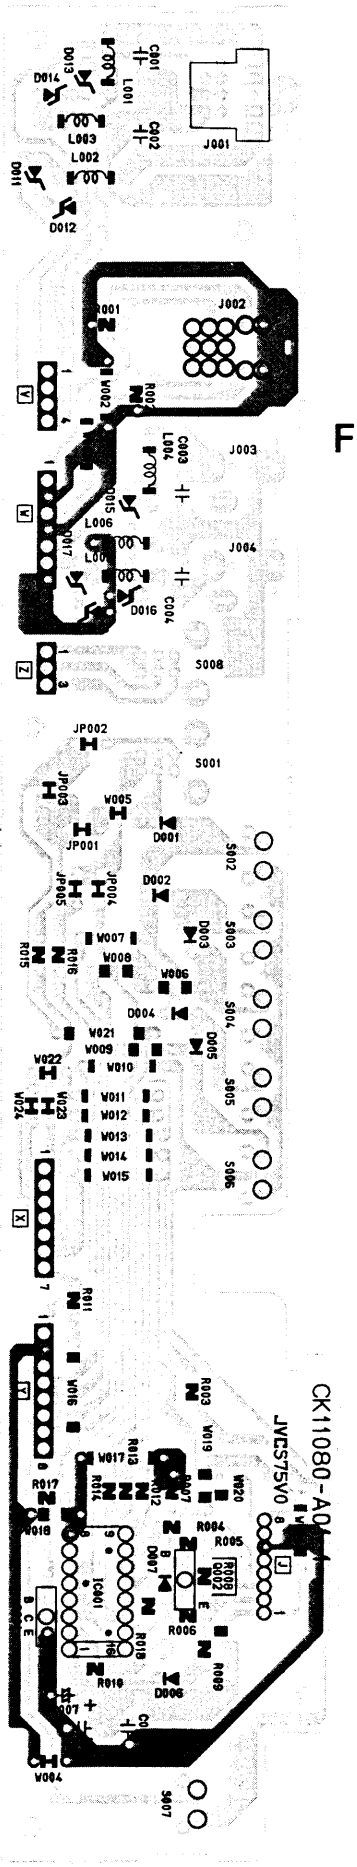

FRONT

CK11080-A0

JVCS75V0

■ VIDEO/CHROMA PCB PATTERN

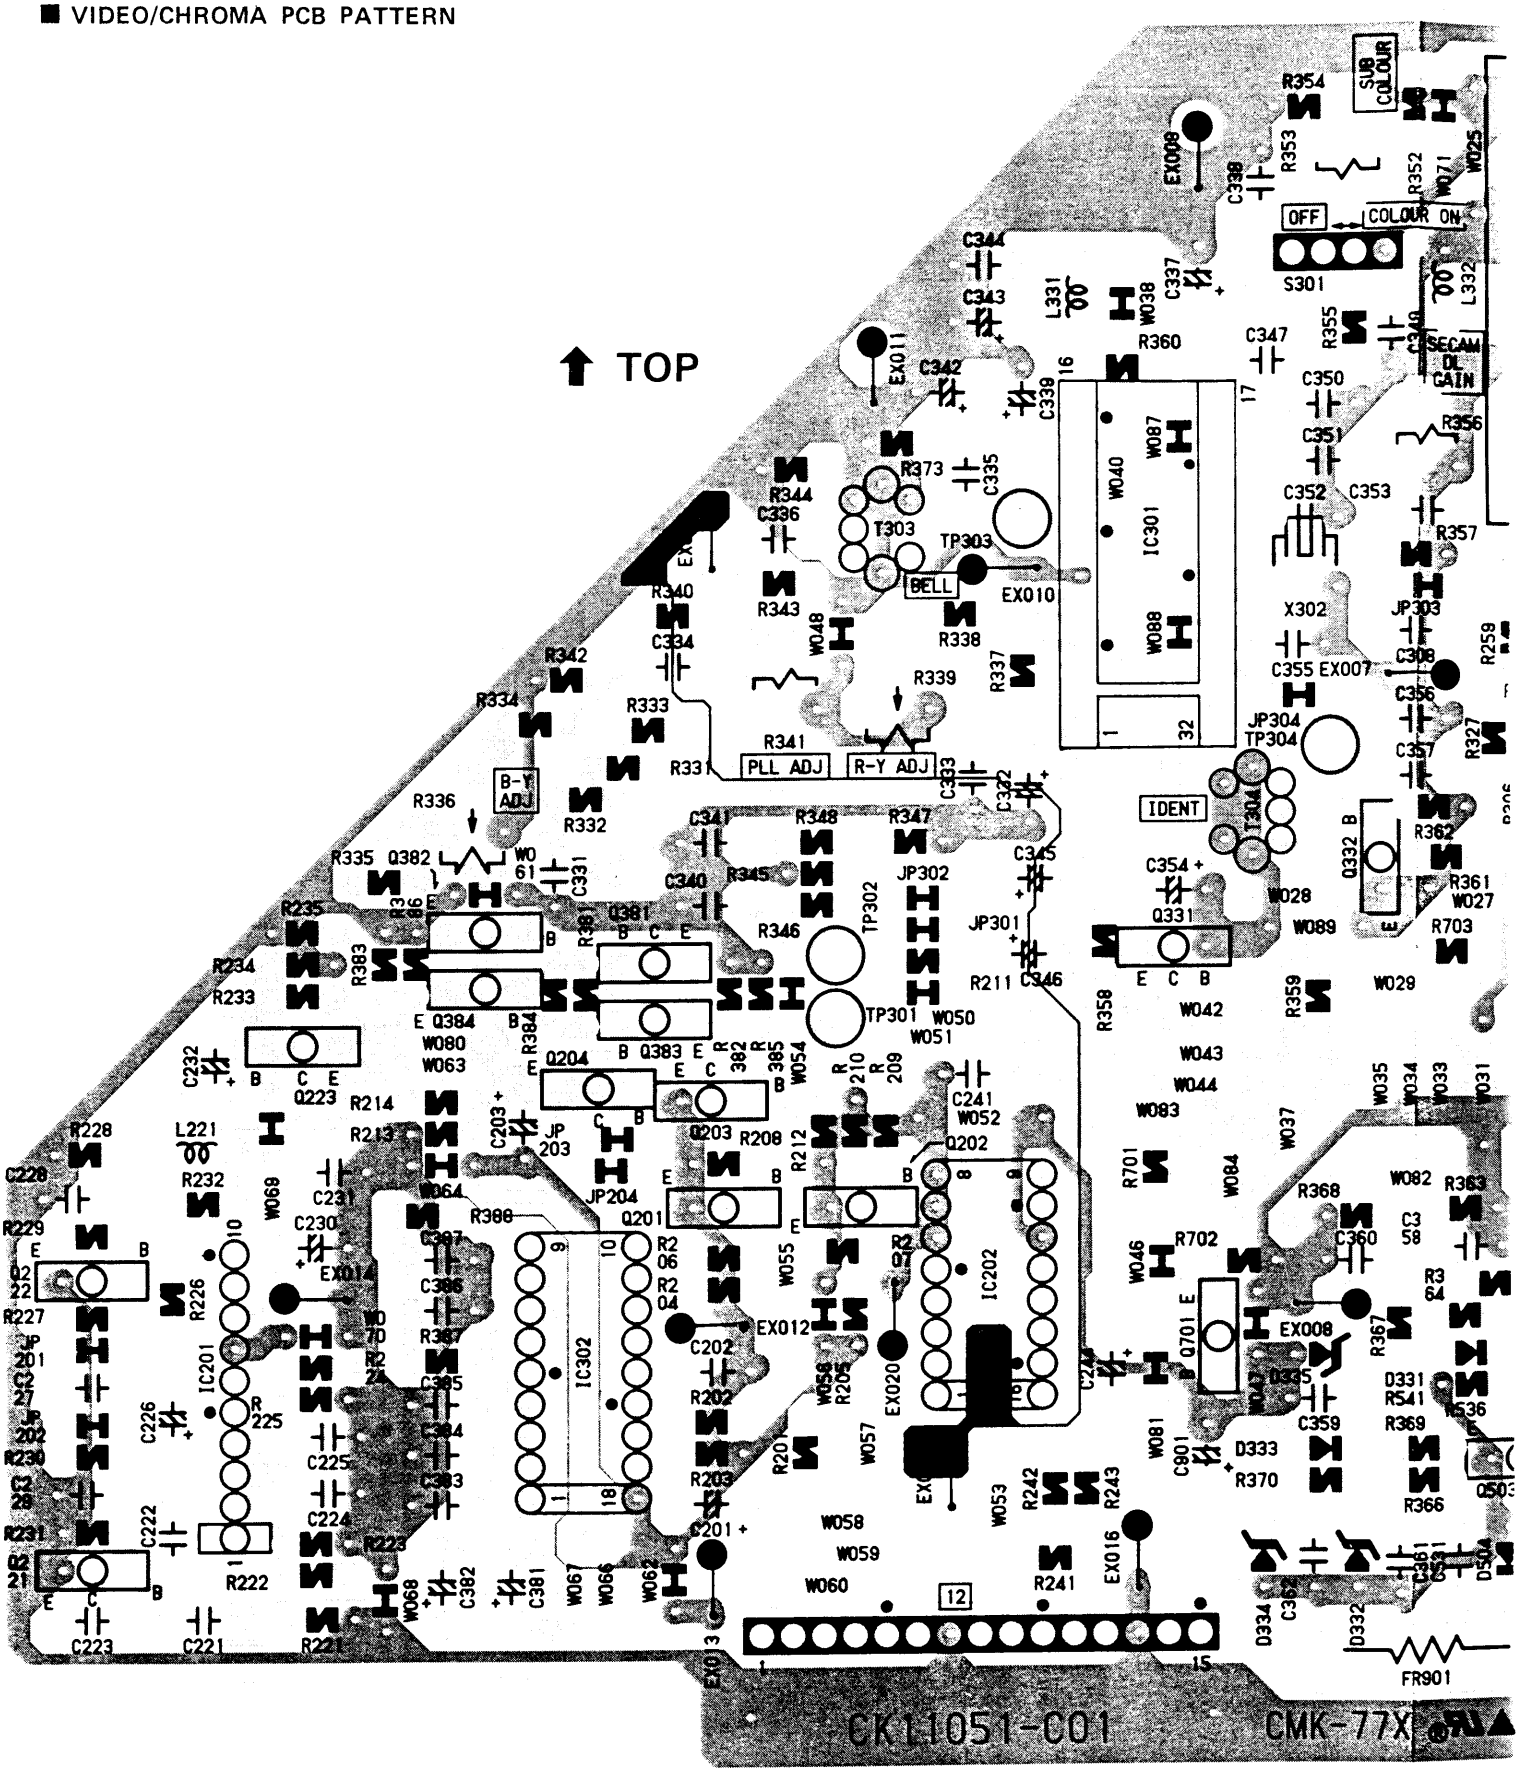

For Service Manuals
MAURITRON SERVICES
8 Cherry Tree Road, Chinnor
Oxfordshire, OX9 4QY.
Tel (01844) 351694
Fax (01844) 352554
email:- mauritron@dial.pipex.com

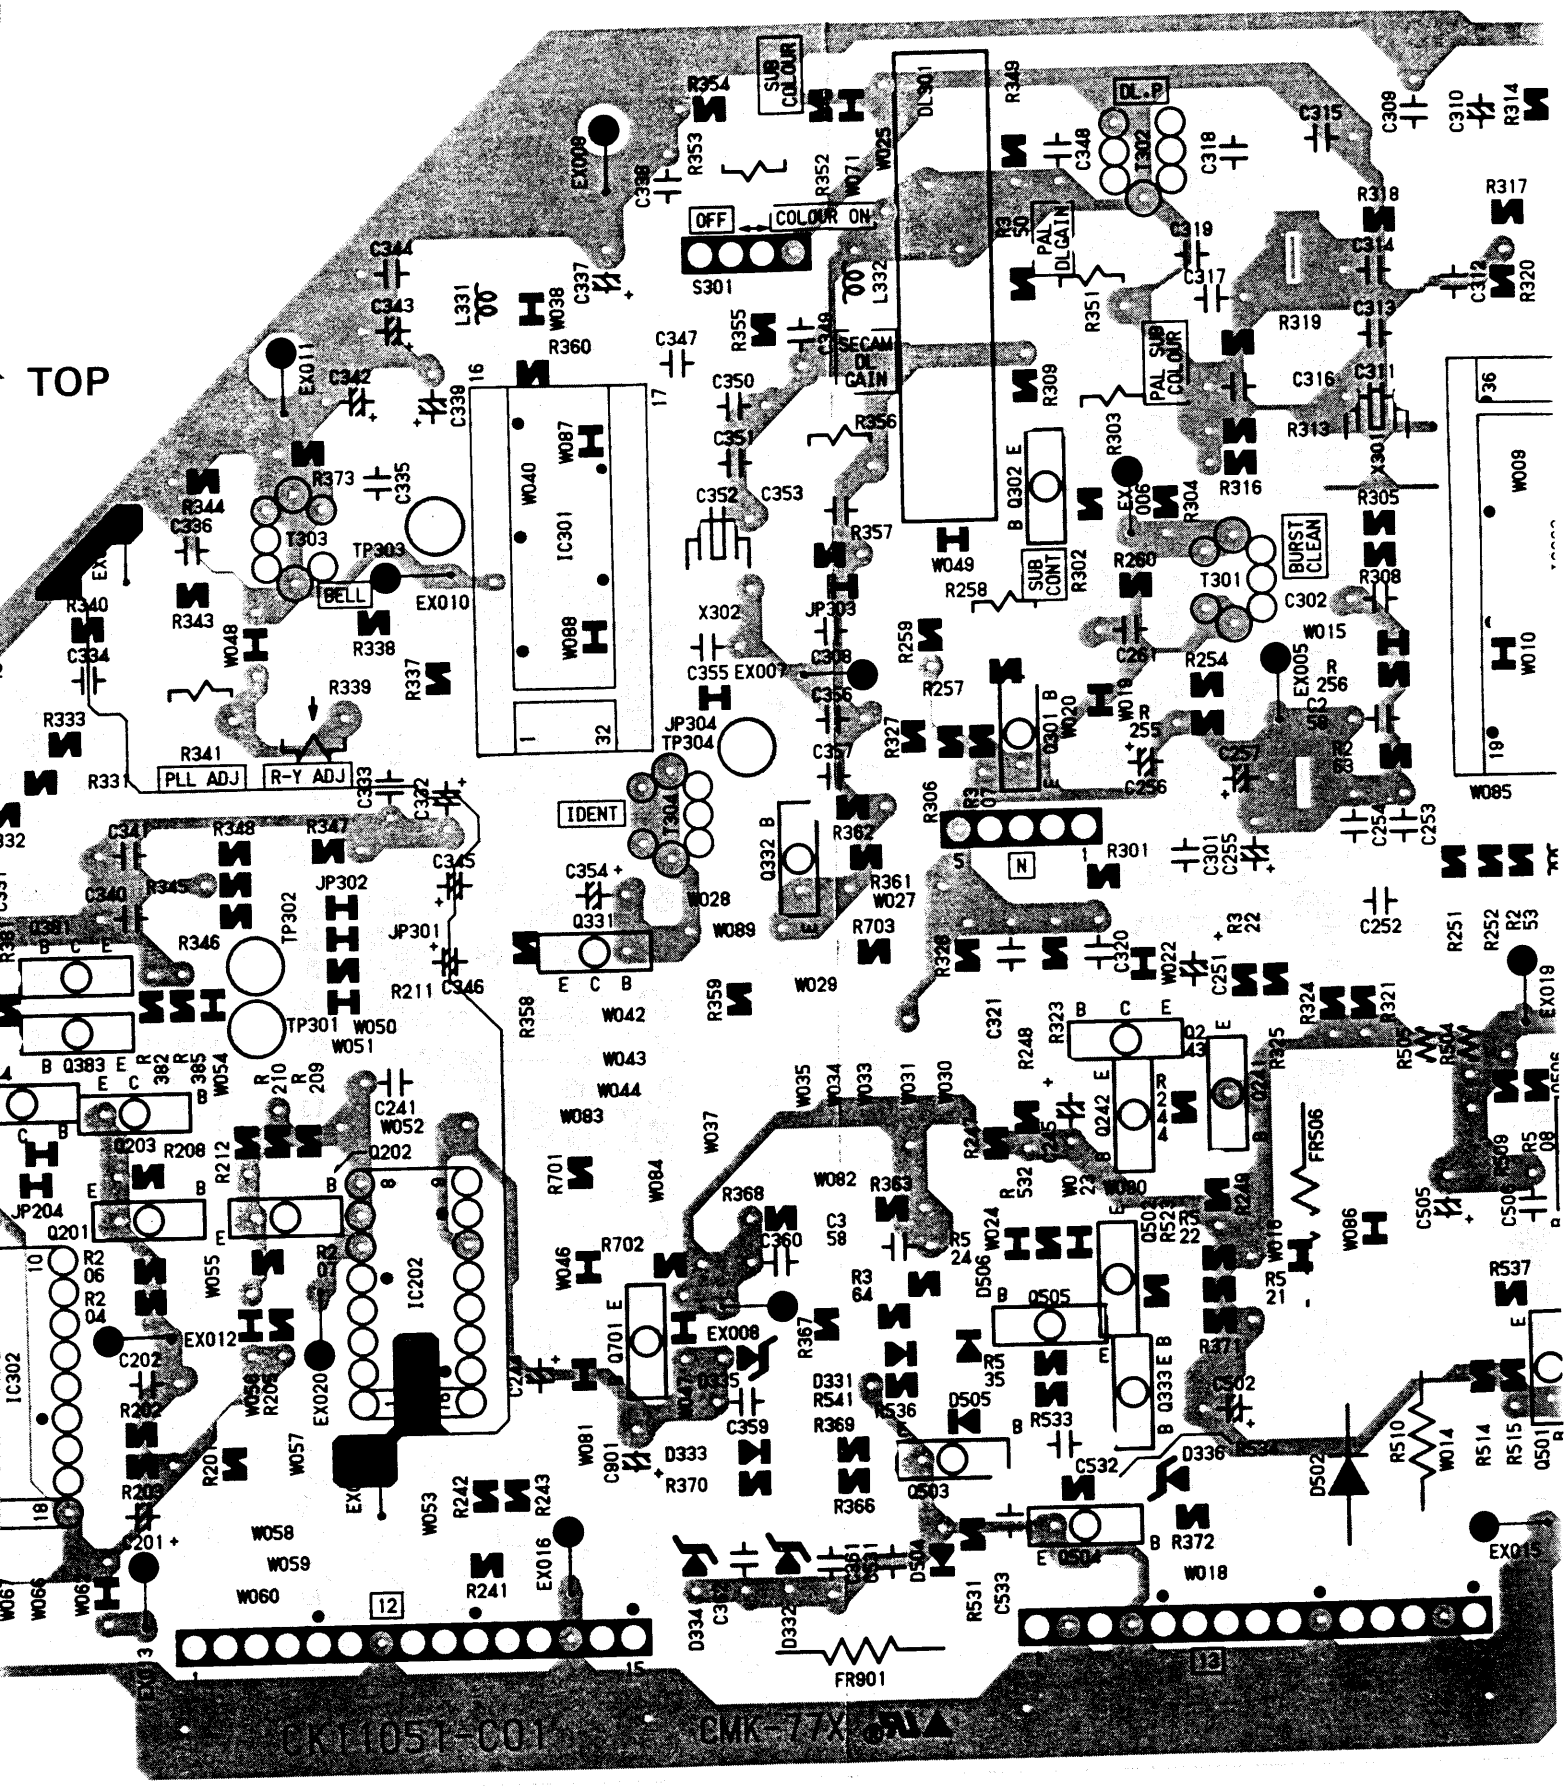
TOP
SUB COLOUR
OFF
COLOUR ON
S301
DL.P
PAL DL GAIN
SECAM DL GAIN
PAL SUB COLOUR
SUB CONT
BURST CLEAN
BELL
PLL ADJ
R-Y ADJ
IDENT
IC301
IC202
IC302
CKL1051-C01
CMK-77X

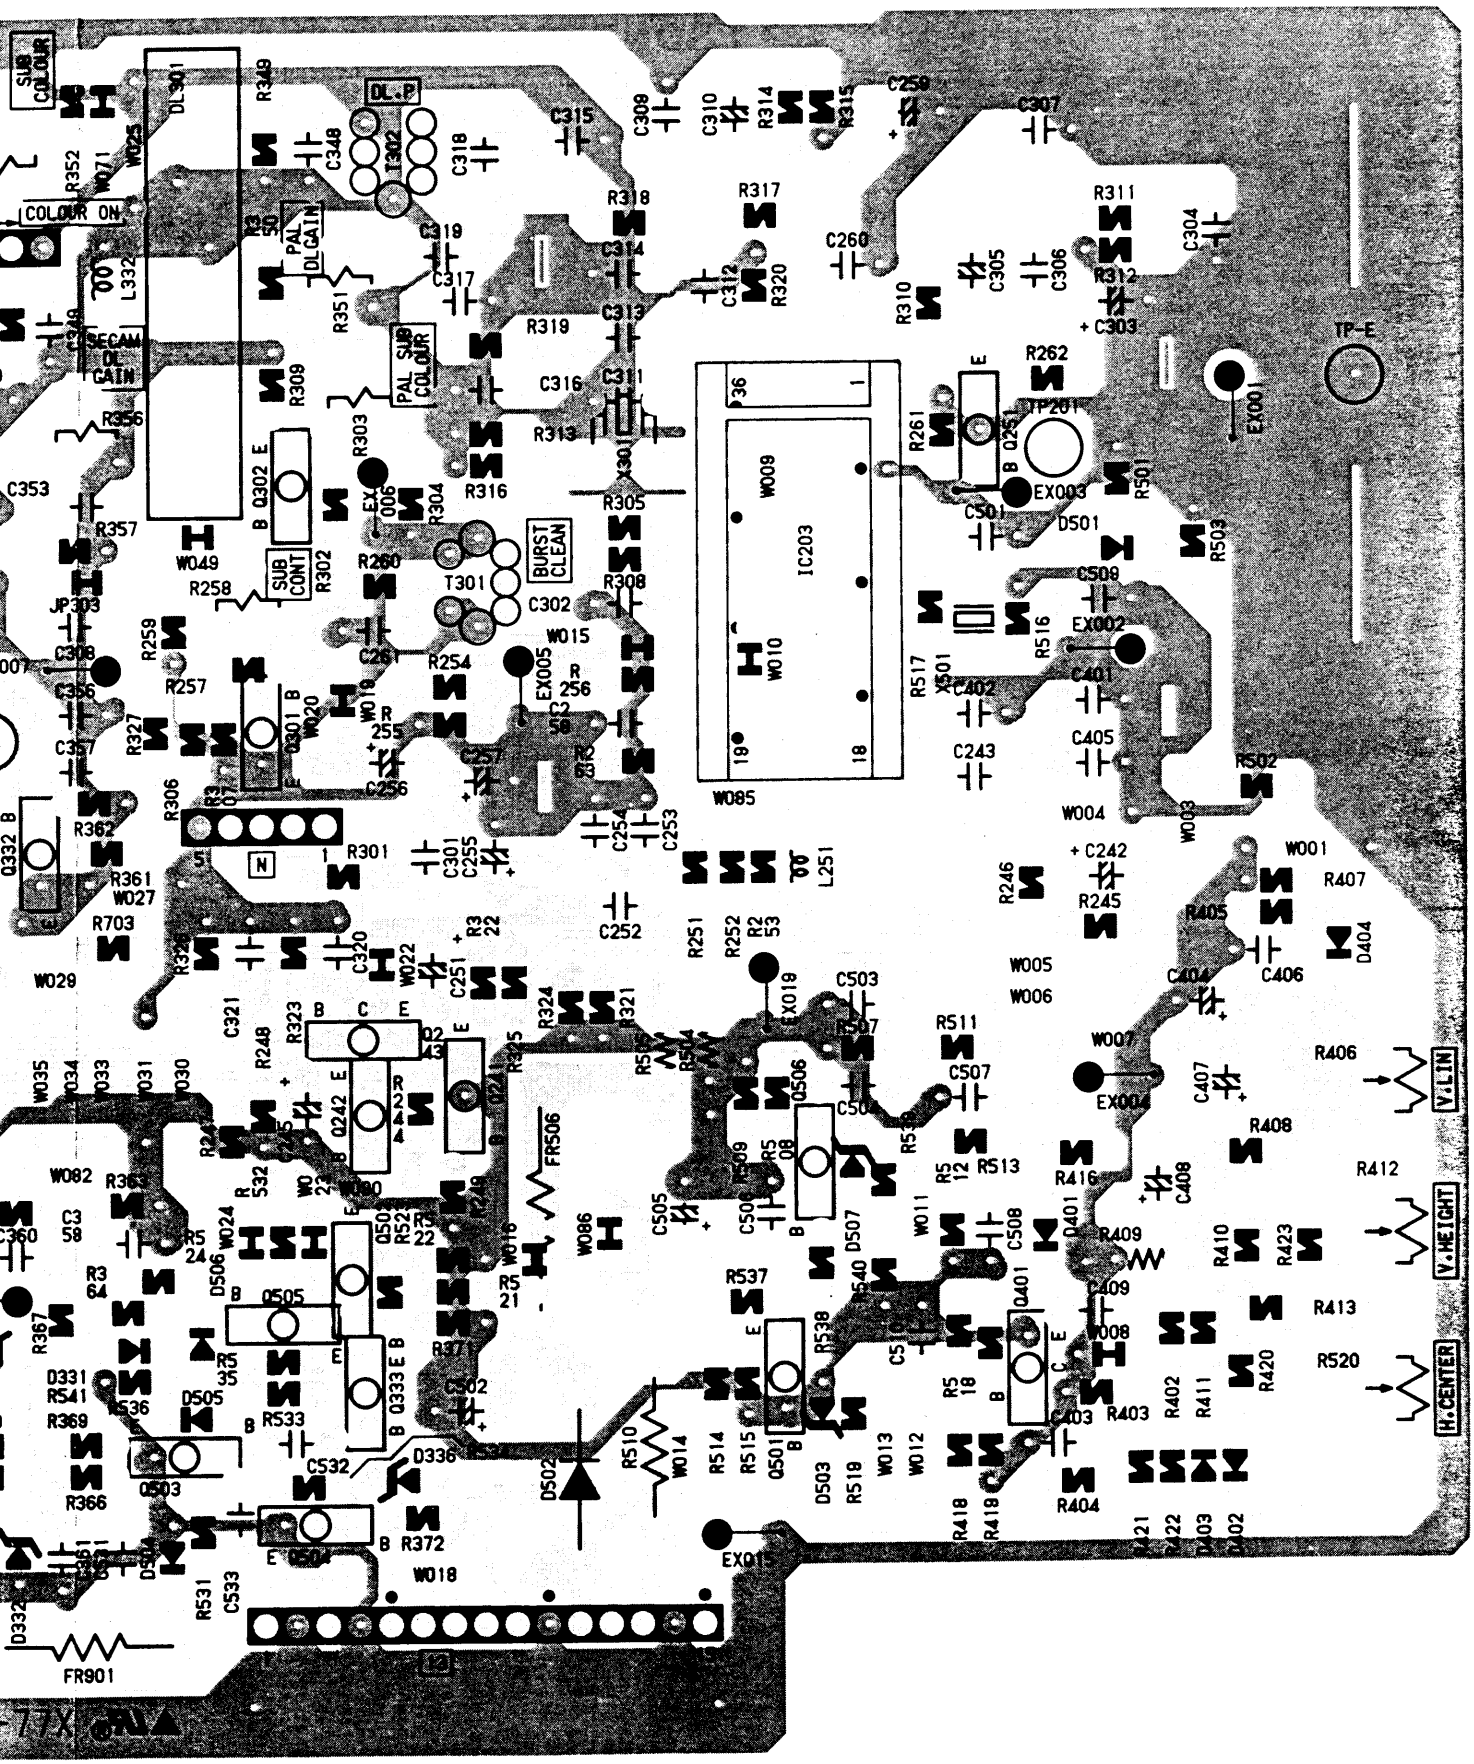
SUB COLOUR
COLOUR ON
SECAM DL GAIN
PAL DL GAIN
PAL SUB COLOUR
SUB CONT
BURST CLEAN
DL.P
IC203
TP-E
TP201
EX001
EX002
EX003
EX004
EX005
EX006
EX015
EX018
V.LIN
V.HEIGHT
H.CENTER
FR506
FR901

VIDEO/CHROMA PCB SCHEMATIC DIAGRAM

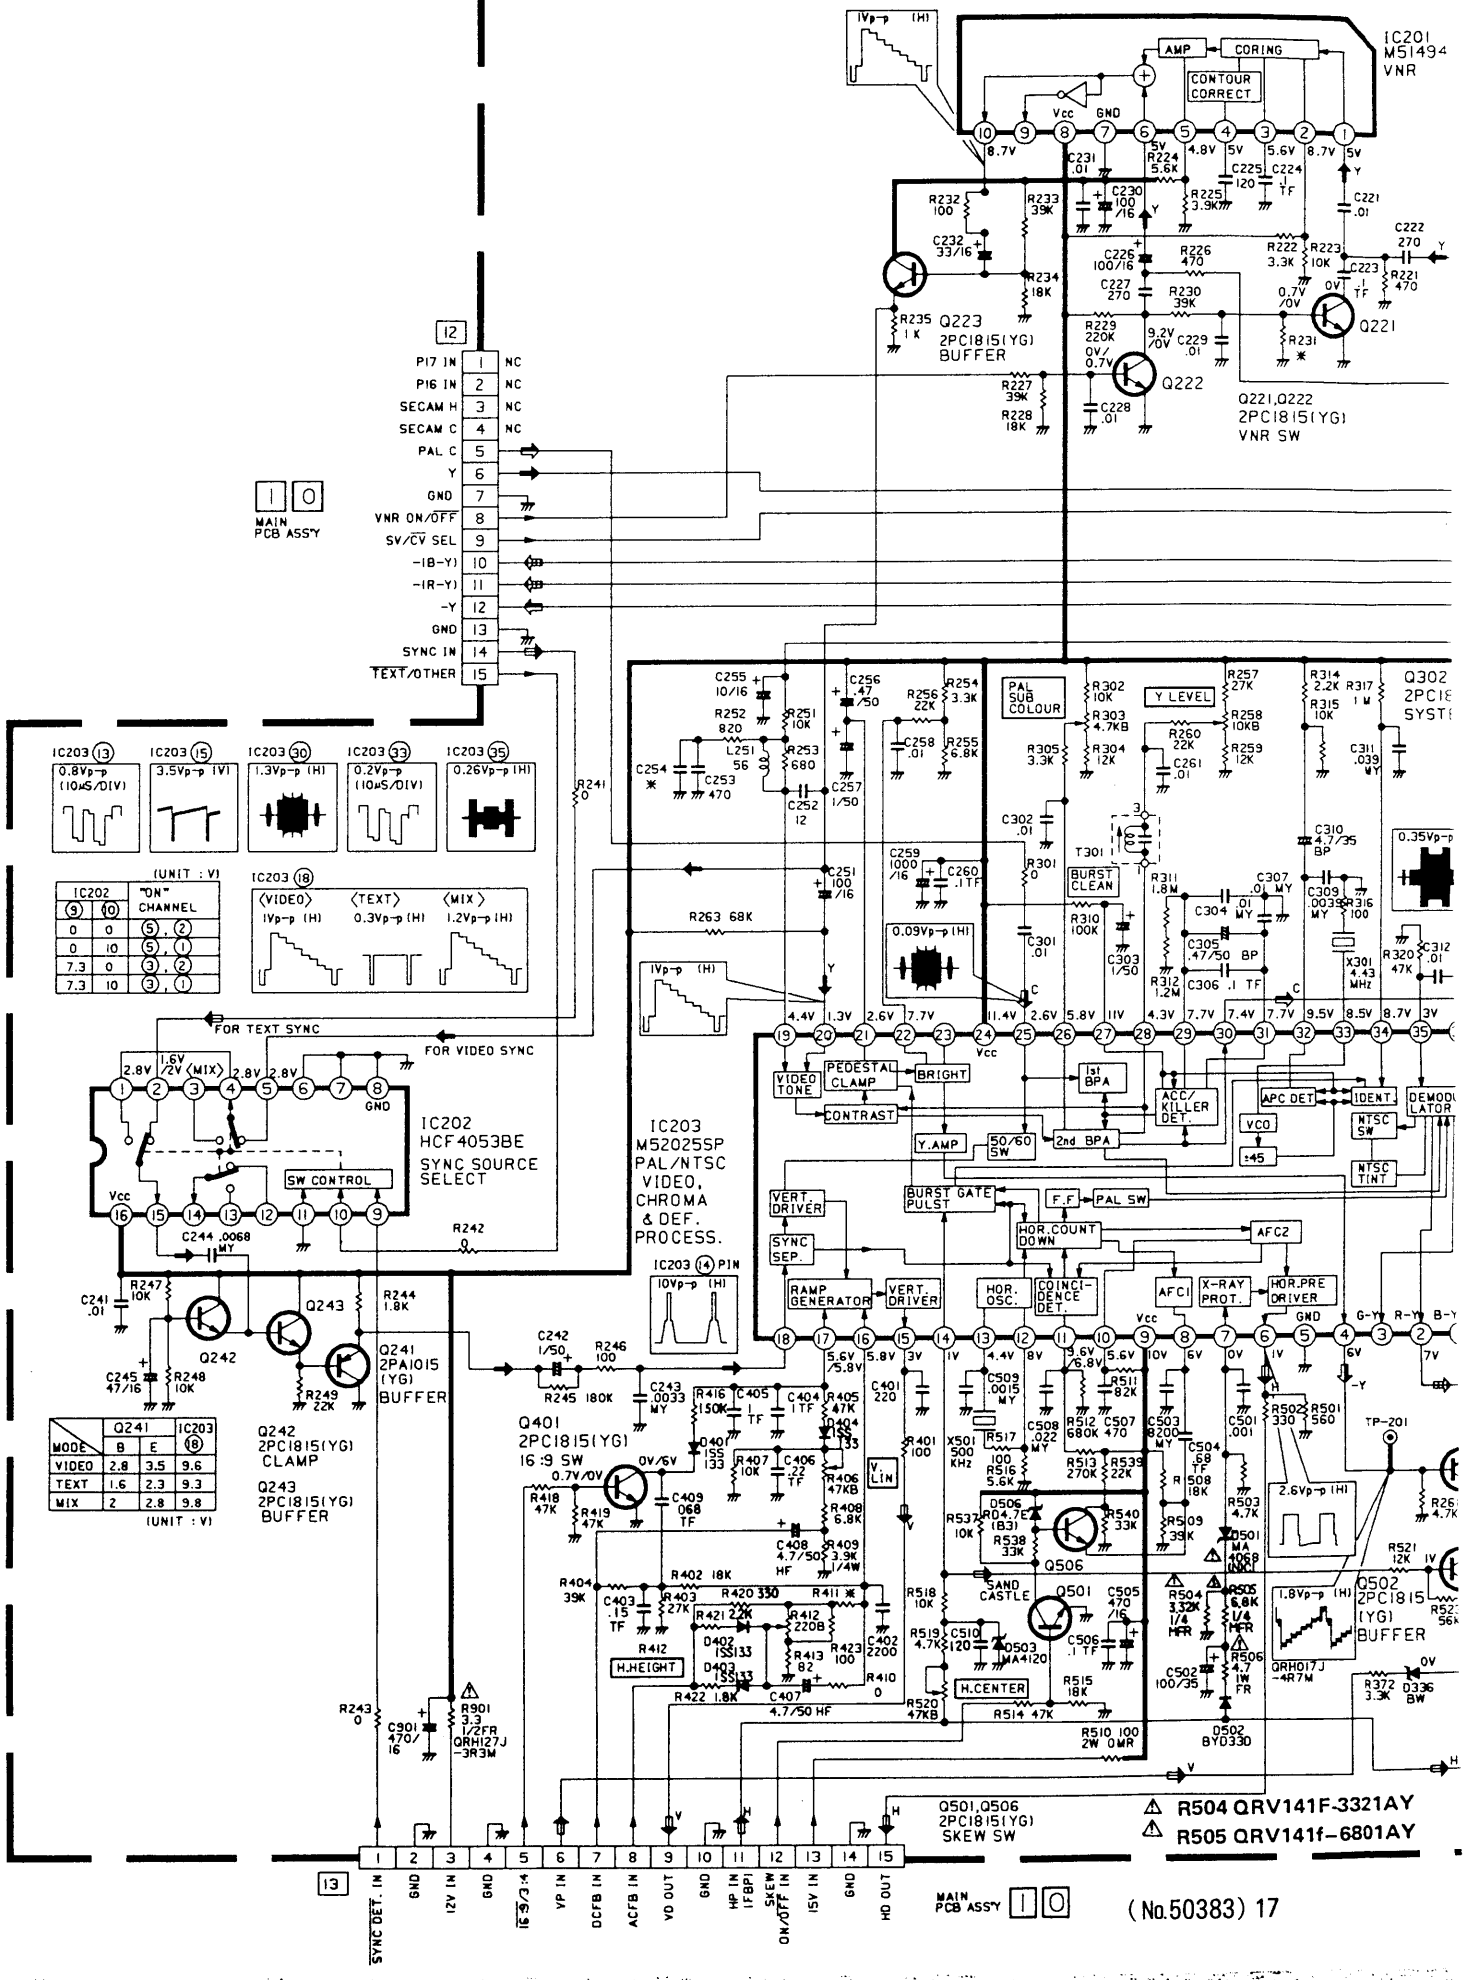

DIAGRAM

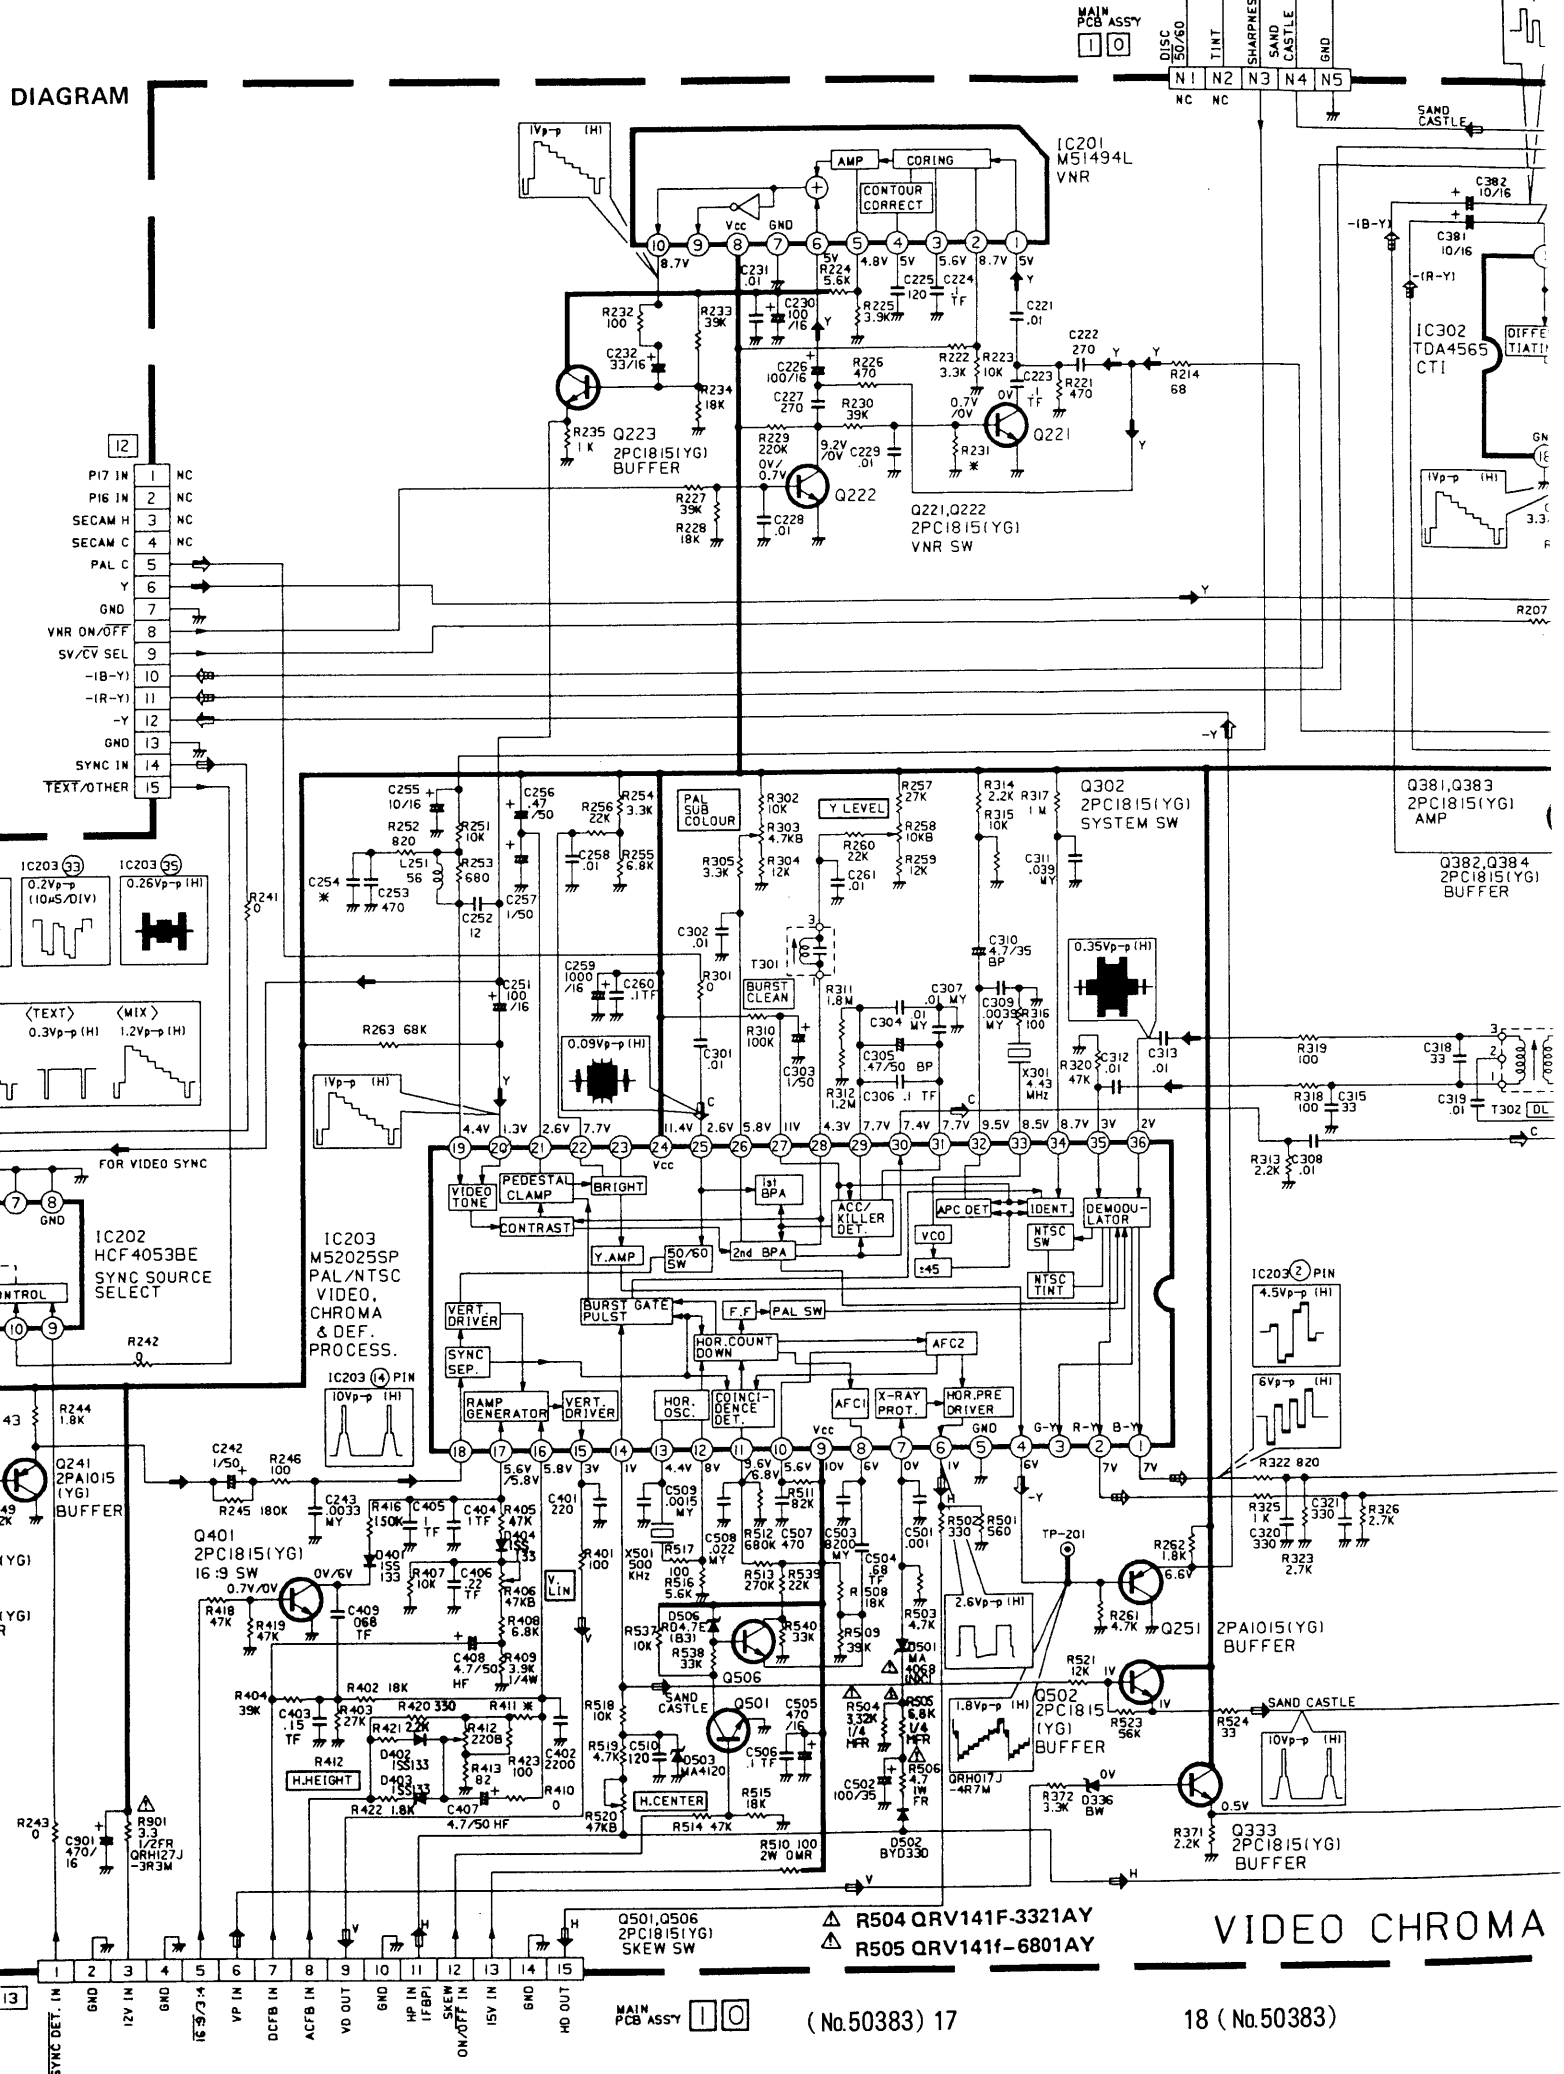

VIDEO CHROMA

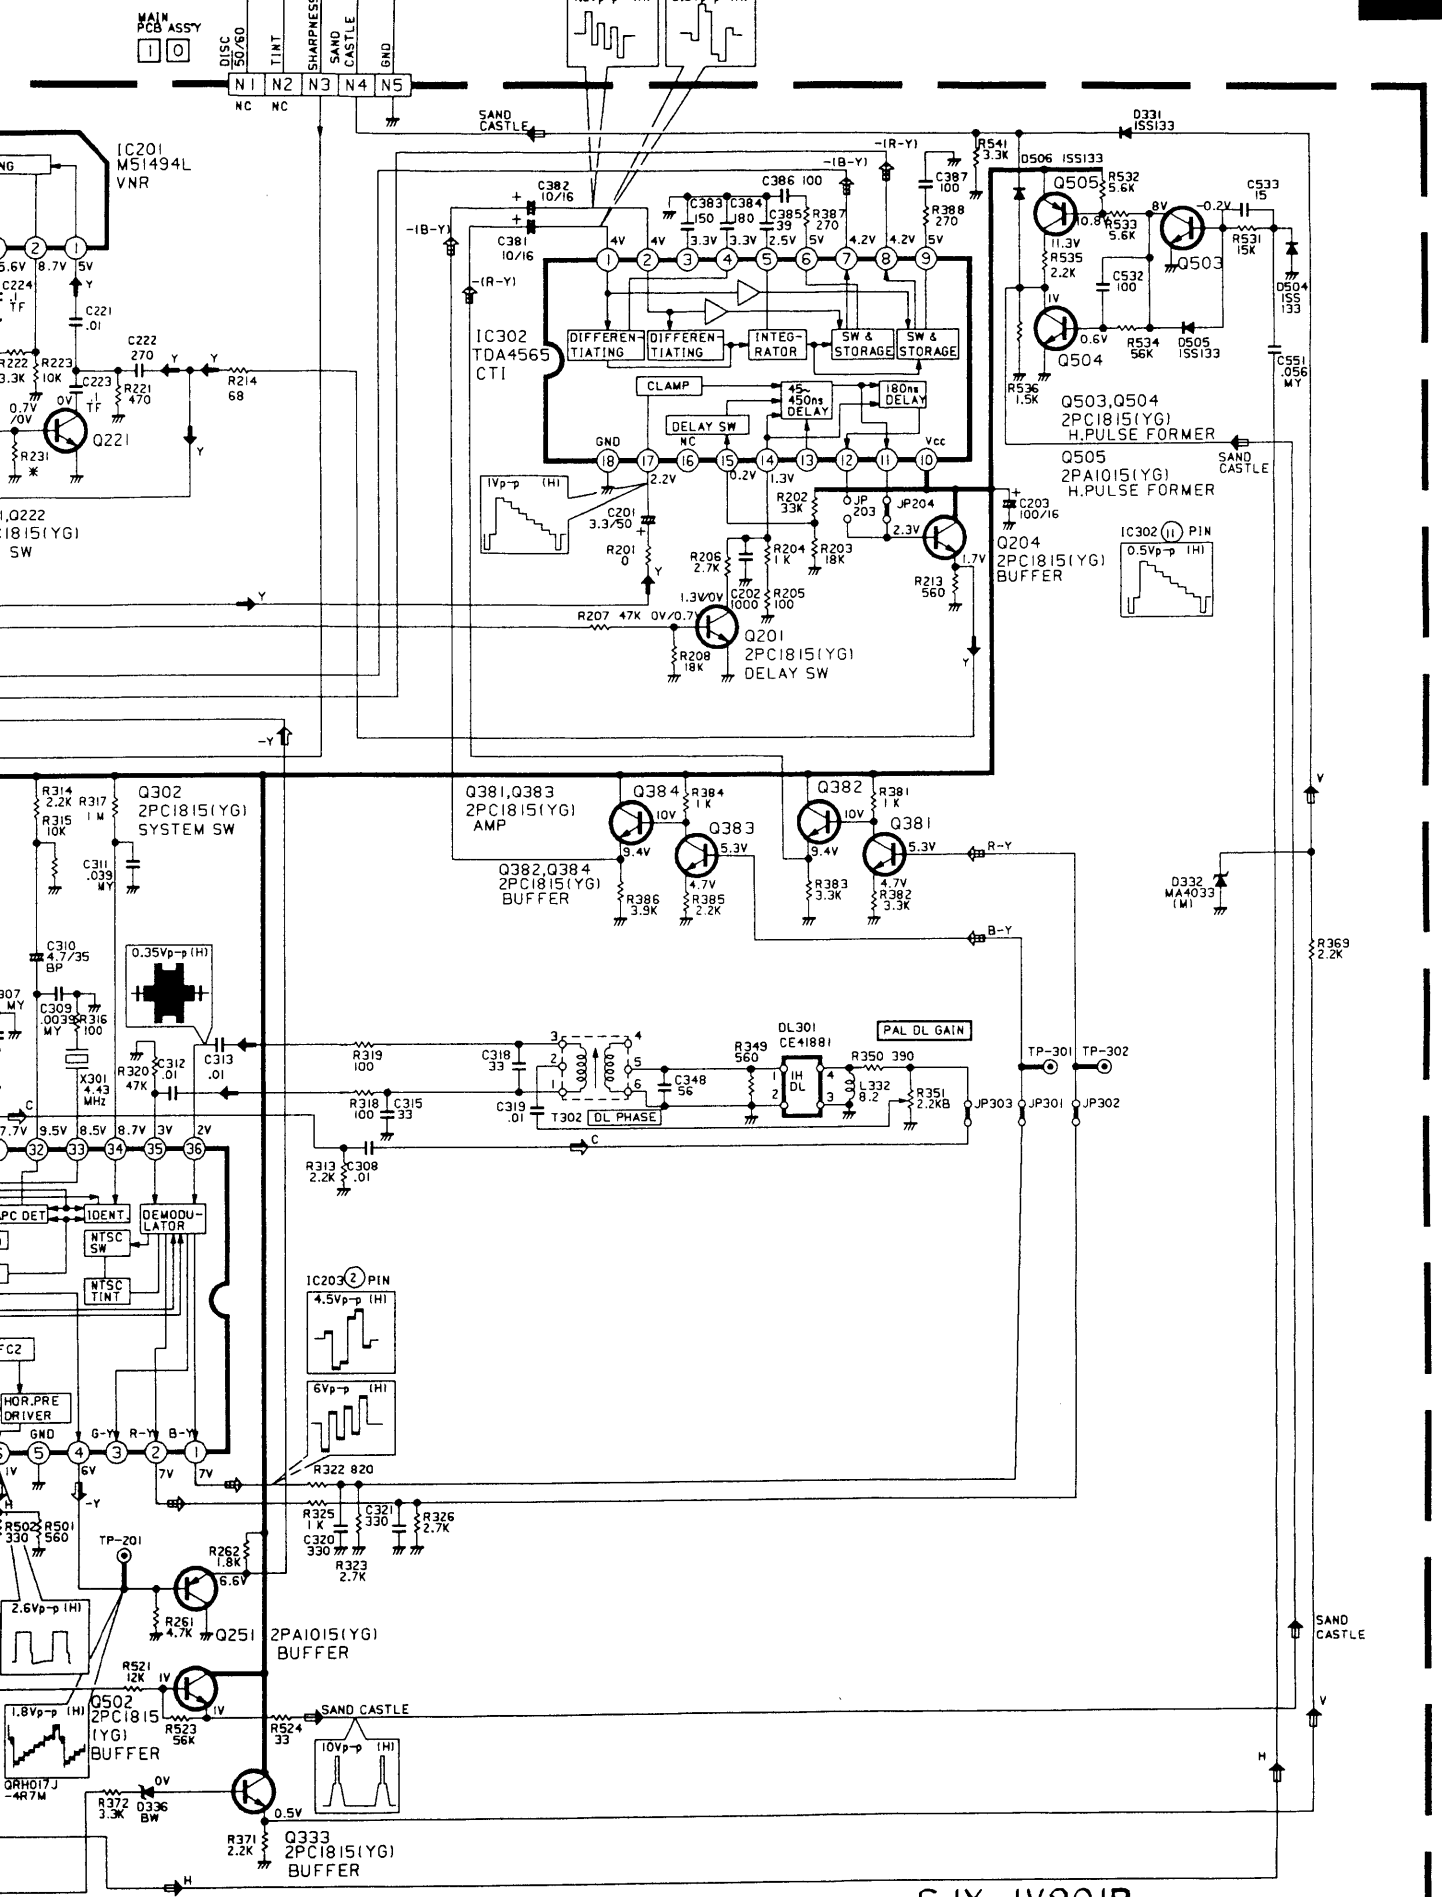
MAIN PCB ASSY
DISC 50/60
TINT
SHARPNESS
SAND CASTLE
GND
N1 N2 N3 N4 N5
NC NC
SAND CASTLE
IC201 M51494L VNR
IC302 TDA4565 CTI
DIFFEREN-TIATING
DIFFEREN-TIATING
INTEG-RATOR
SW & STORAGE
SW & STORAGE
CLAMP
45~450ns DELAY
180ns DELAY
DELAY SW
Q221
Q222 2PC1815(YG) SW
Q201 2PC1815(YG) DELAY SW
Q204 2PC1815(YG) BUFFER
Q503,Q504 2PC1815(YG) H.PULSE FORMER
Q505 2PA1015(YG) H.PULSE FORMER
Q302 2PC1815(YG) SYSTEM SW
Q381,Q383 2PC1815(YG) AMP
Q382,Q384 2PC1815(YG) BUFFER
Q384
Q383
Q382
Q381
D331 1SS133
D506 1SS133
D504 1SS133
D505 1SS133
D332 MA4033 (M)
DL301 CE41881
PAL DL GAIN
T302 DL PHASE
TP-301
TP-302
TP-201
JP303
JP301
JP302
JP203
JP204
IDENT
DEMODU-LATOR
NTSC SW
NTSC TINT
HOR.PRE DRIVER
Q251 2PA1015(YG) BUFFER
Q502 2PC1815 (YG) BUFFER
Q333 2PC1815(YG) BUFFER
SAND CASTLE
SAND CASTLE
SJX-IV901B
V141F-3321AY
V141f-6801AY
VIDEO CHROMA PCB ASS'Y
I V

■ AUDIO PCB BACK PATTERN

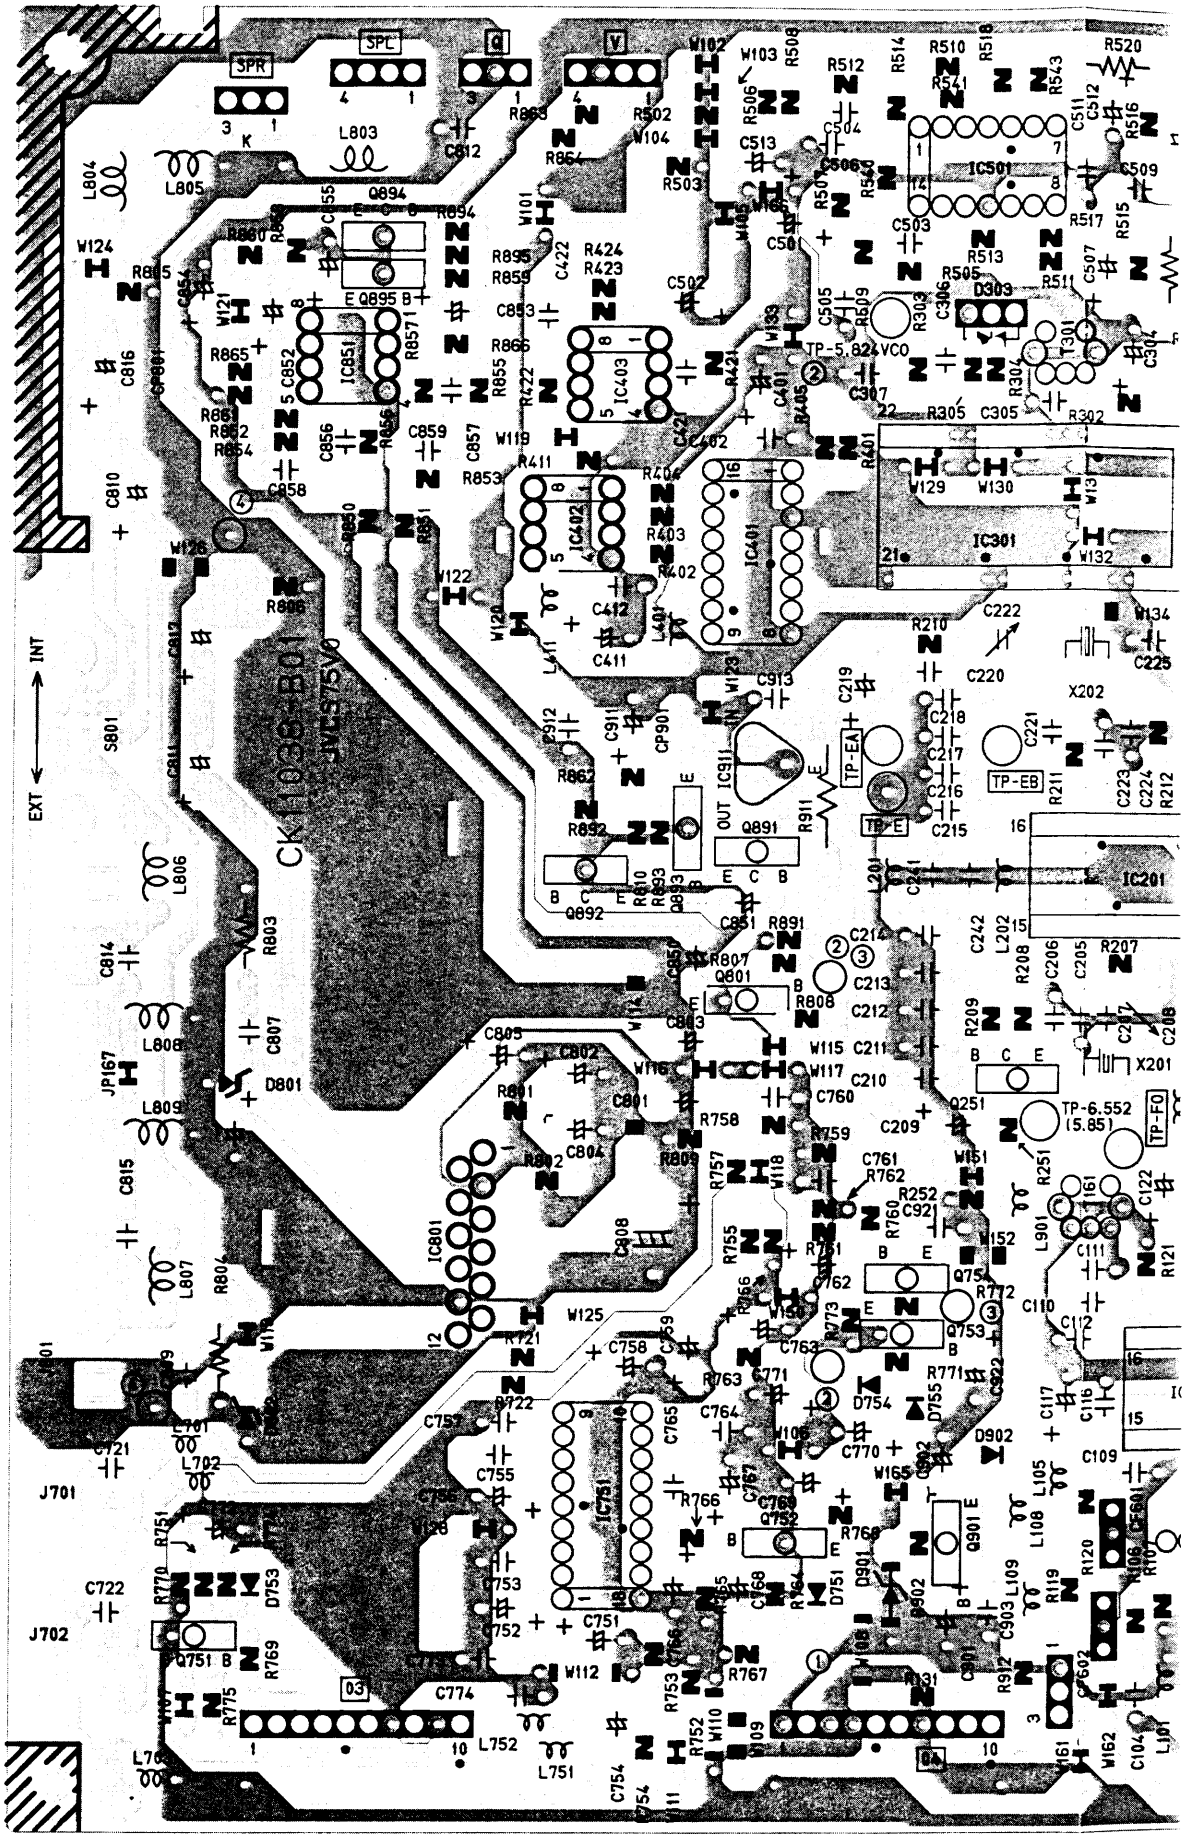

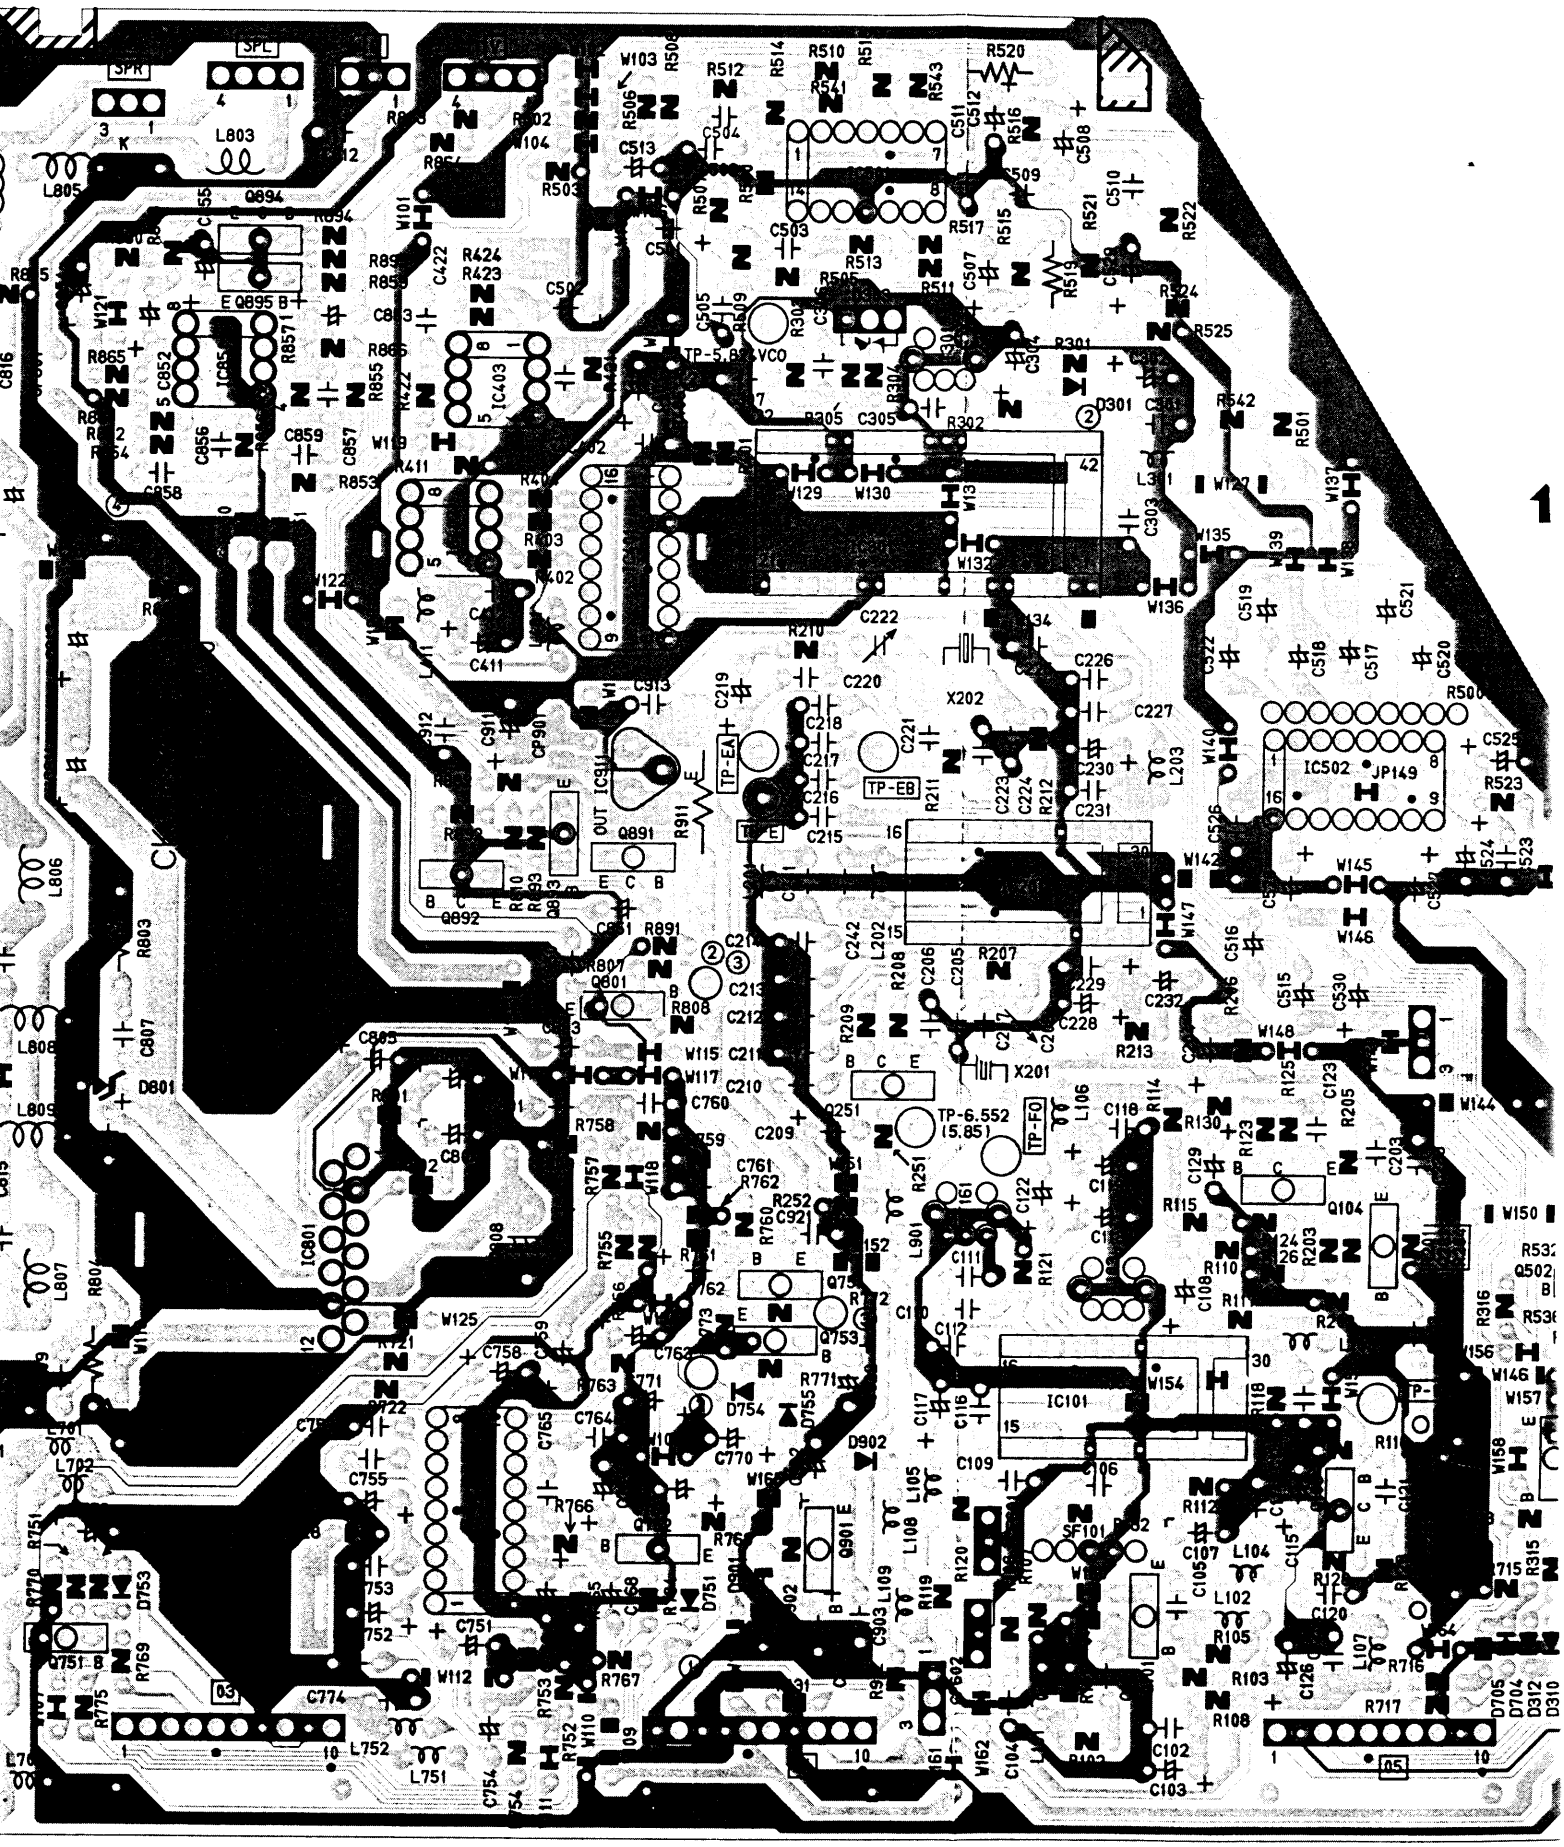
SPK
SPL
L803
L805
Q894
Q895
IC403
IC502
JP149
TP-5.85 VCO
TP-EA
TP-EB
TP-F0
TP-6.552
(5.85)
X201
X202
IC101
IC801
Q891
Q892
Q901
Q751
Q753
Q754
Q104
D801
D301
D902
D754
D755
D753
SF101
L751
L752
L701
L702
L806
L807
L808
L809
L804
L102
L104
L105
L106
L107
L108
L203
L301
L303
L501
L502
L503
L504
L505
L506
L507
L508
L509
L510
L511
L512
L513
L514
L515
L516
L517
L518
L519
L520
L521
L522
L523
L524
L525
L526
L527
L528
L529
L530
L531
L532
L533
L534
L535
L536
L537
L538
L539
L540
L541
L542
L543

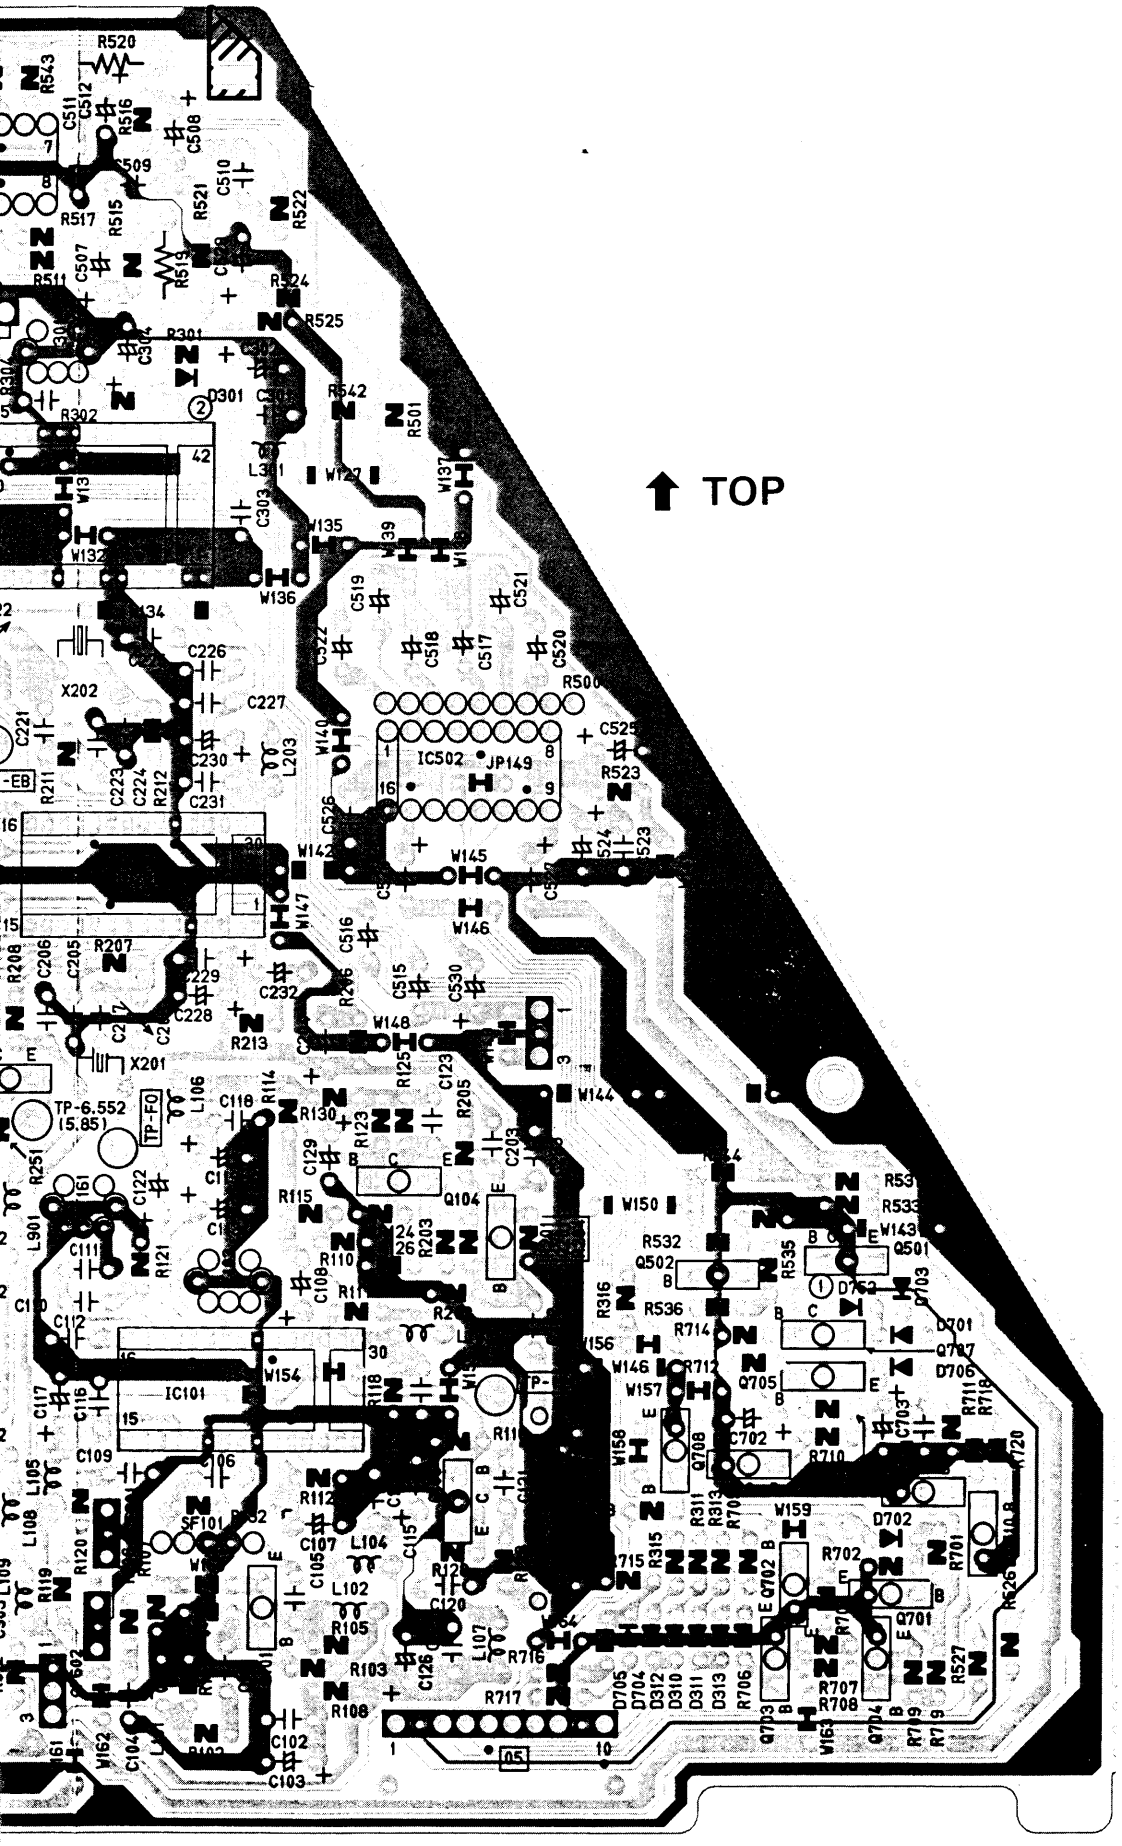
TOP
IC502
JP149
IC101
X202
X201
TP-6.552
(5.85)
TP-FO
Q104
Q501
Q502
Q701
Q702
Q703
Q704
Q705
Q708
D301
D701
D702
D705
D704
D312
D310
D311
D313
R520
R543
R512
R516
R509
R517
R515
R521
R522
R511
R519
R524
R525
R301
R302
R542
R501
C226
C227
C230
C231
C223
C224
R212
R211
L203
C221
C525
R523
C526
C524
C523
C516
C515
C530
C232
C228
C229
R207
R213
R125
C123
R205
W144
W145
W146
W147
W148
W142
W140
W150
W143
W154
W156
W157
W158
W159
W146
C118
L106
R114
R130
R123
C129
C203
R115
R203
R110
C108
R316
R536
R532
R535
R714
R712
R710
C702
C703
R711
R718
R720
R311
R313
R707
R708
R706
R716
R717
C102
C103
C104
C107
L104
L102
R105
R103
R108
C126
C120
C121
C115
R112
C105
L107
SF101
L105
L108
L109
R120
R119
C109
C116
C117
C122
C111
C112
L901
R121
R251
C206
C205
R208
C227
C519
C521
C522
C518
C517
C520
R500
W135
W136
W137
W139
W132
W134
W127
W13
L301
C303
C304
C302
R304
R303
R301
C301
C511
C512
C508
C509
C510
C507
R511
R519
R524
R525
R542
R501
R543
R516
R515
R517
R521
R522
C528
C527
C529
C531
C532
C533
C534
C535
C536
C537
C538
C539
C540
C541
C542
C543
C544
C545
C546
C547
C548
C549
C550
C551
C552
C553
C554
C555
C556
C557
C558
C559
C560
C561
C562
C563
C564
C565
C566
C567
C568
C569
C570
C571
C572
C573
C574
C575
C576
C577
C578
C579
C580
C581
C582
C583
C584
C585
C586
C587
C588
C589
C590
C591
C592
C593
C594
C595
C596
C597
C598
C599
C600
C601
C602
C603
C604
C605
C606
C607
C608
C609
C610
C611
C612
C613
C614
C615
C616
C617
C618
C619
C620
C621
C622
C623
C624
C625
C626
C627
C628
C629
C630
C631
C632
C633
C634
C635
C636
C637
C638
C639
C640
C641
C642
C643
C644
C645
C646
C647
C648
C649
C650
C651
C652
C653
C654
C655
C656
C657
C658
C659
C660
C661
C662
C663
C664
C665
C666
C667
C668
C669
C670
C671
C672
C673
C674
C675
C676
C677
C678
C679
C680
C681
C682
C683
C684
C685
C686
C687
C688
C689
C690
C691
C692
C693
C694
C695
C696
C697
C698
C699
C700
C701
C702
C703
C704
C705
C706
C707
C708
C709
C710
C711
C712
C713
C714
C715
C716
C717
C718
C719
C720
C721
C722
C723
C724
C725
C726
C727
C728
C729
C730
C731
C732
C733
C734
C735
C736
C737
C738
C739
C740
C741
C742
C743
C744
C745
C746
C747
C748
C749
C750
C751
C752
C753
C754
C755
C756
C757
C758
C759
C760
C761
C762
C763
C764
C765
C766
C767
C768
C769
C770
C771
C772
C773
C774
C775
C776
C777
C778
C779
C780
C781
C782
C783
C784
C785
C786
C787
C788
C789
C790
C791
C792
C793
C794
C795
C796
C797
C798
C799
C800
C801
C802
C803
C804
C805
C806
C807
C808
C809
C810
C811
C812
C813
C814
C815
C816
C817
C818
C819
C820
C821
C822
C823
C824
C825
C826
C827
C828
C829
C830
C831
C832
C833
C834
C835
C836
C837
C838
C839
C840
C841
C842
C843
C844
C845
C846
C847
C848
C849
C850
C851
C852
C853
C854
C855
C856
C857
C858
C859
C860
C861
C862
C863
C864
C865
C866
C867
C868
C869
C870
C871
C872
C873
C874
C875
C876
C877
C878
C879
C880
C881
C882
C883
C884
C885
C886
C887
C888
C889
C890
C891
C892
C893
C894
C895
C896
C897
C898
C899
C900
C901
C902
C903
C904
C905
C906
C907
C908
C909
C910
C911
C912
C913
C914
C915
C916
C917
C918
C919
C920
C921
C922
C923
C924
C925
C926
C927
C928
C929
C930
C931
C932
C933
C934
C935
C936
C937
C938
C939
C940
C941
C942
C943
C944
C945
C946
C947
C948
C949
C950
C951
C952
C953
C954
C955
C956
C957
C958
C959
C960
C961
C962
C963
C964
C965
C966
C967
C968
C969
C970
C971
C972
C973
C974
C975
C976
C977
C978
C979
C980
C981
C982
C983
C984
C985
C986
C987
C988
C989
C990
C991
C992
C993
C994
C995
C996
C997
C998
C999
C1000

■ AUDIO PCB SCHEMATIC DIAGRAM

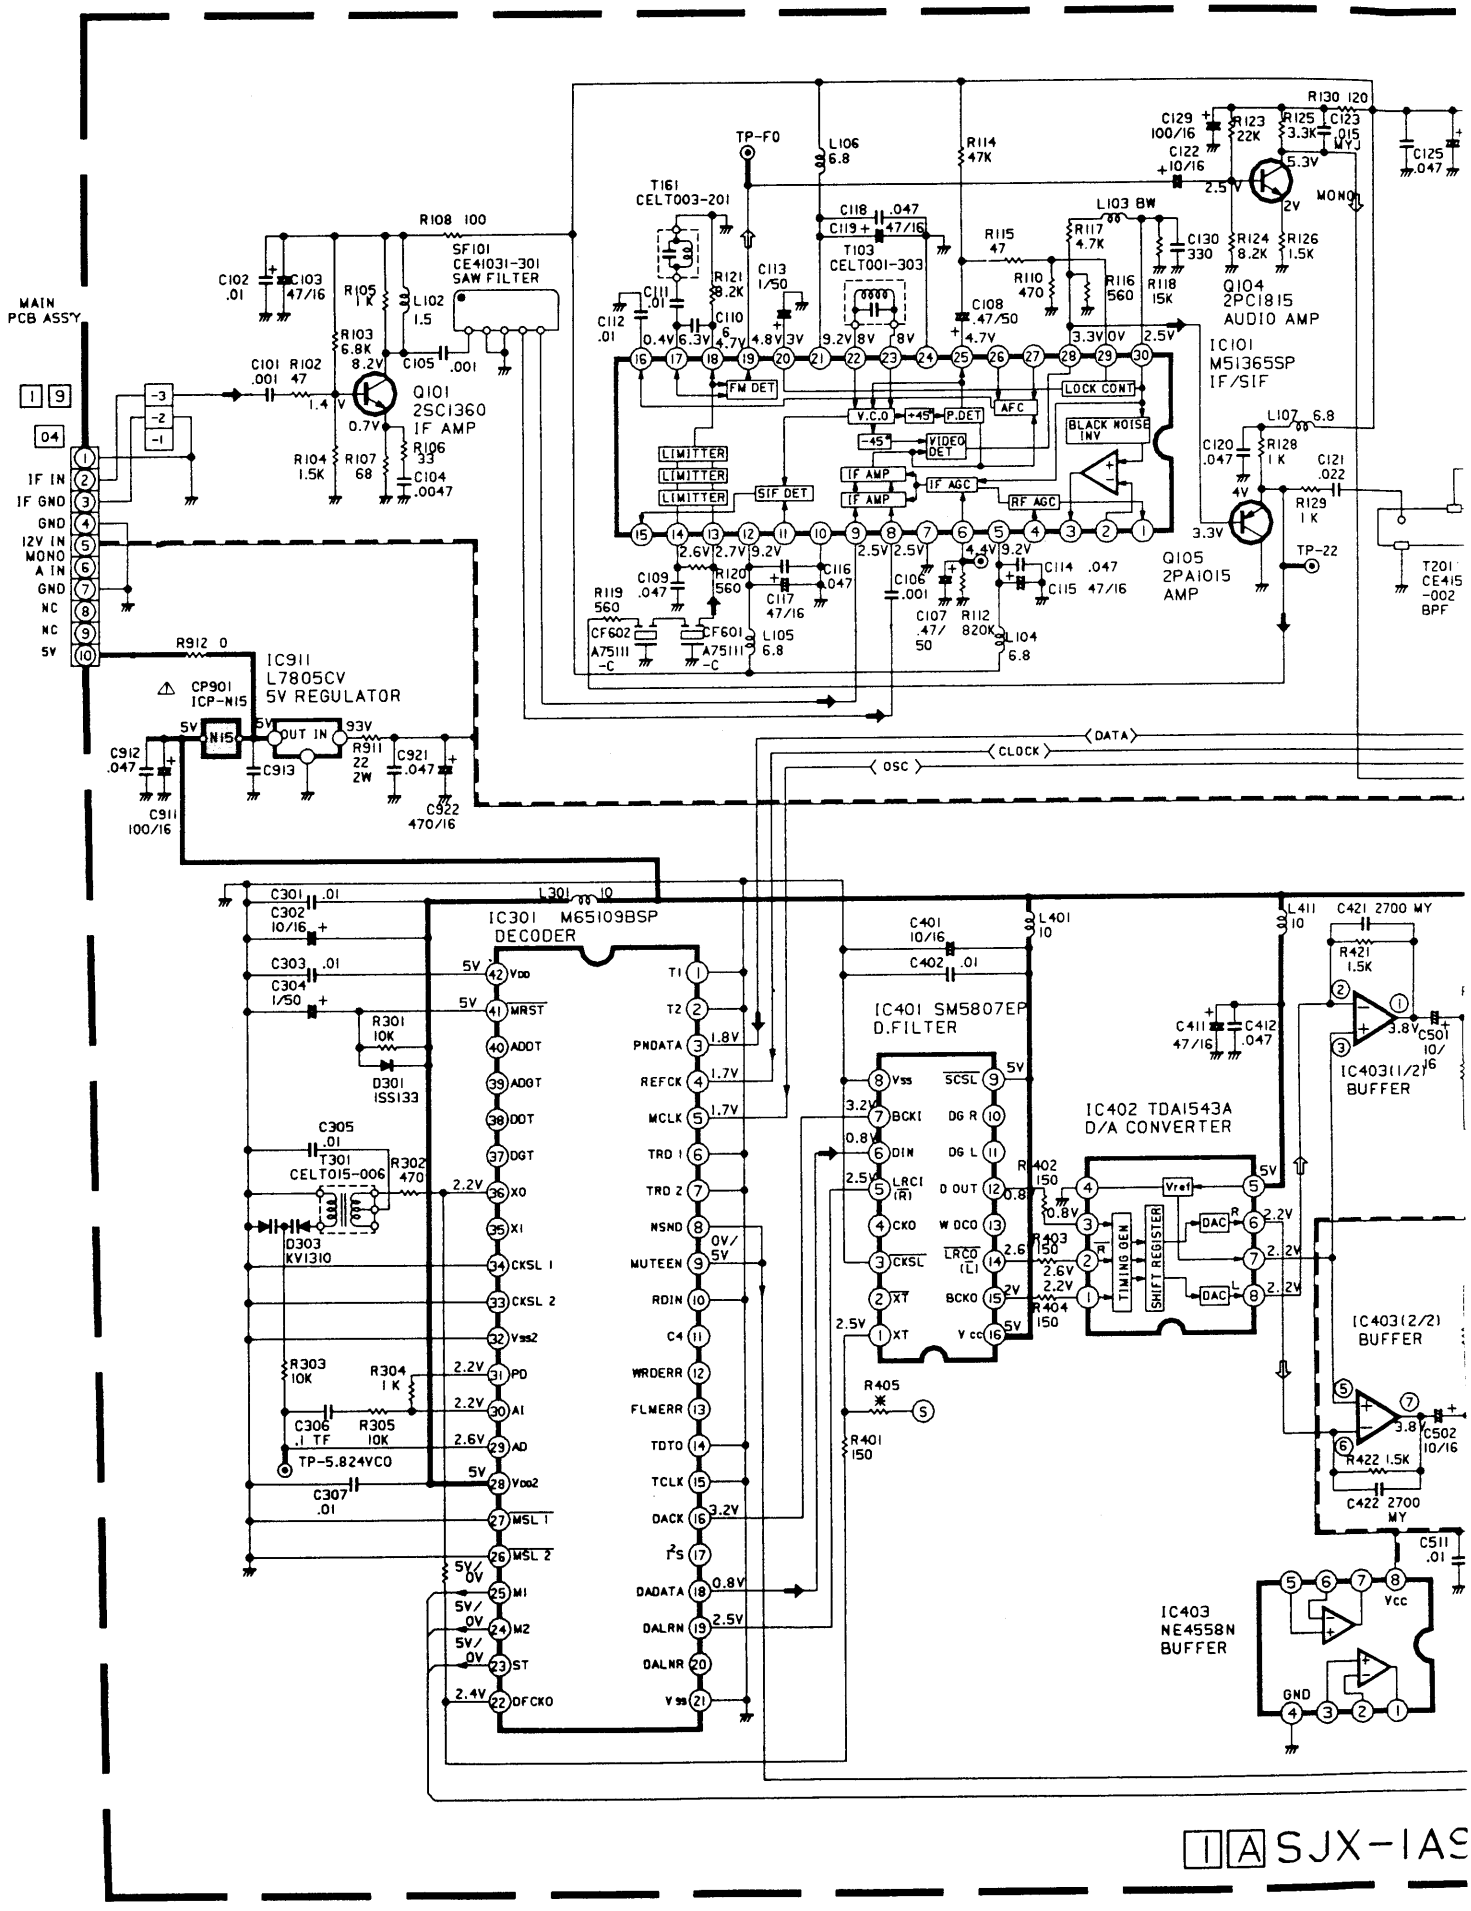

IA SJX-IAS

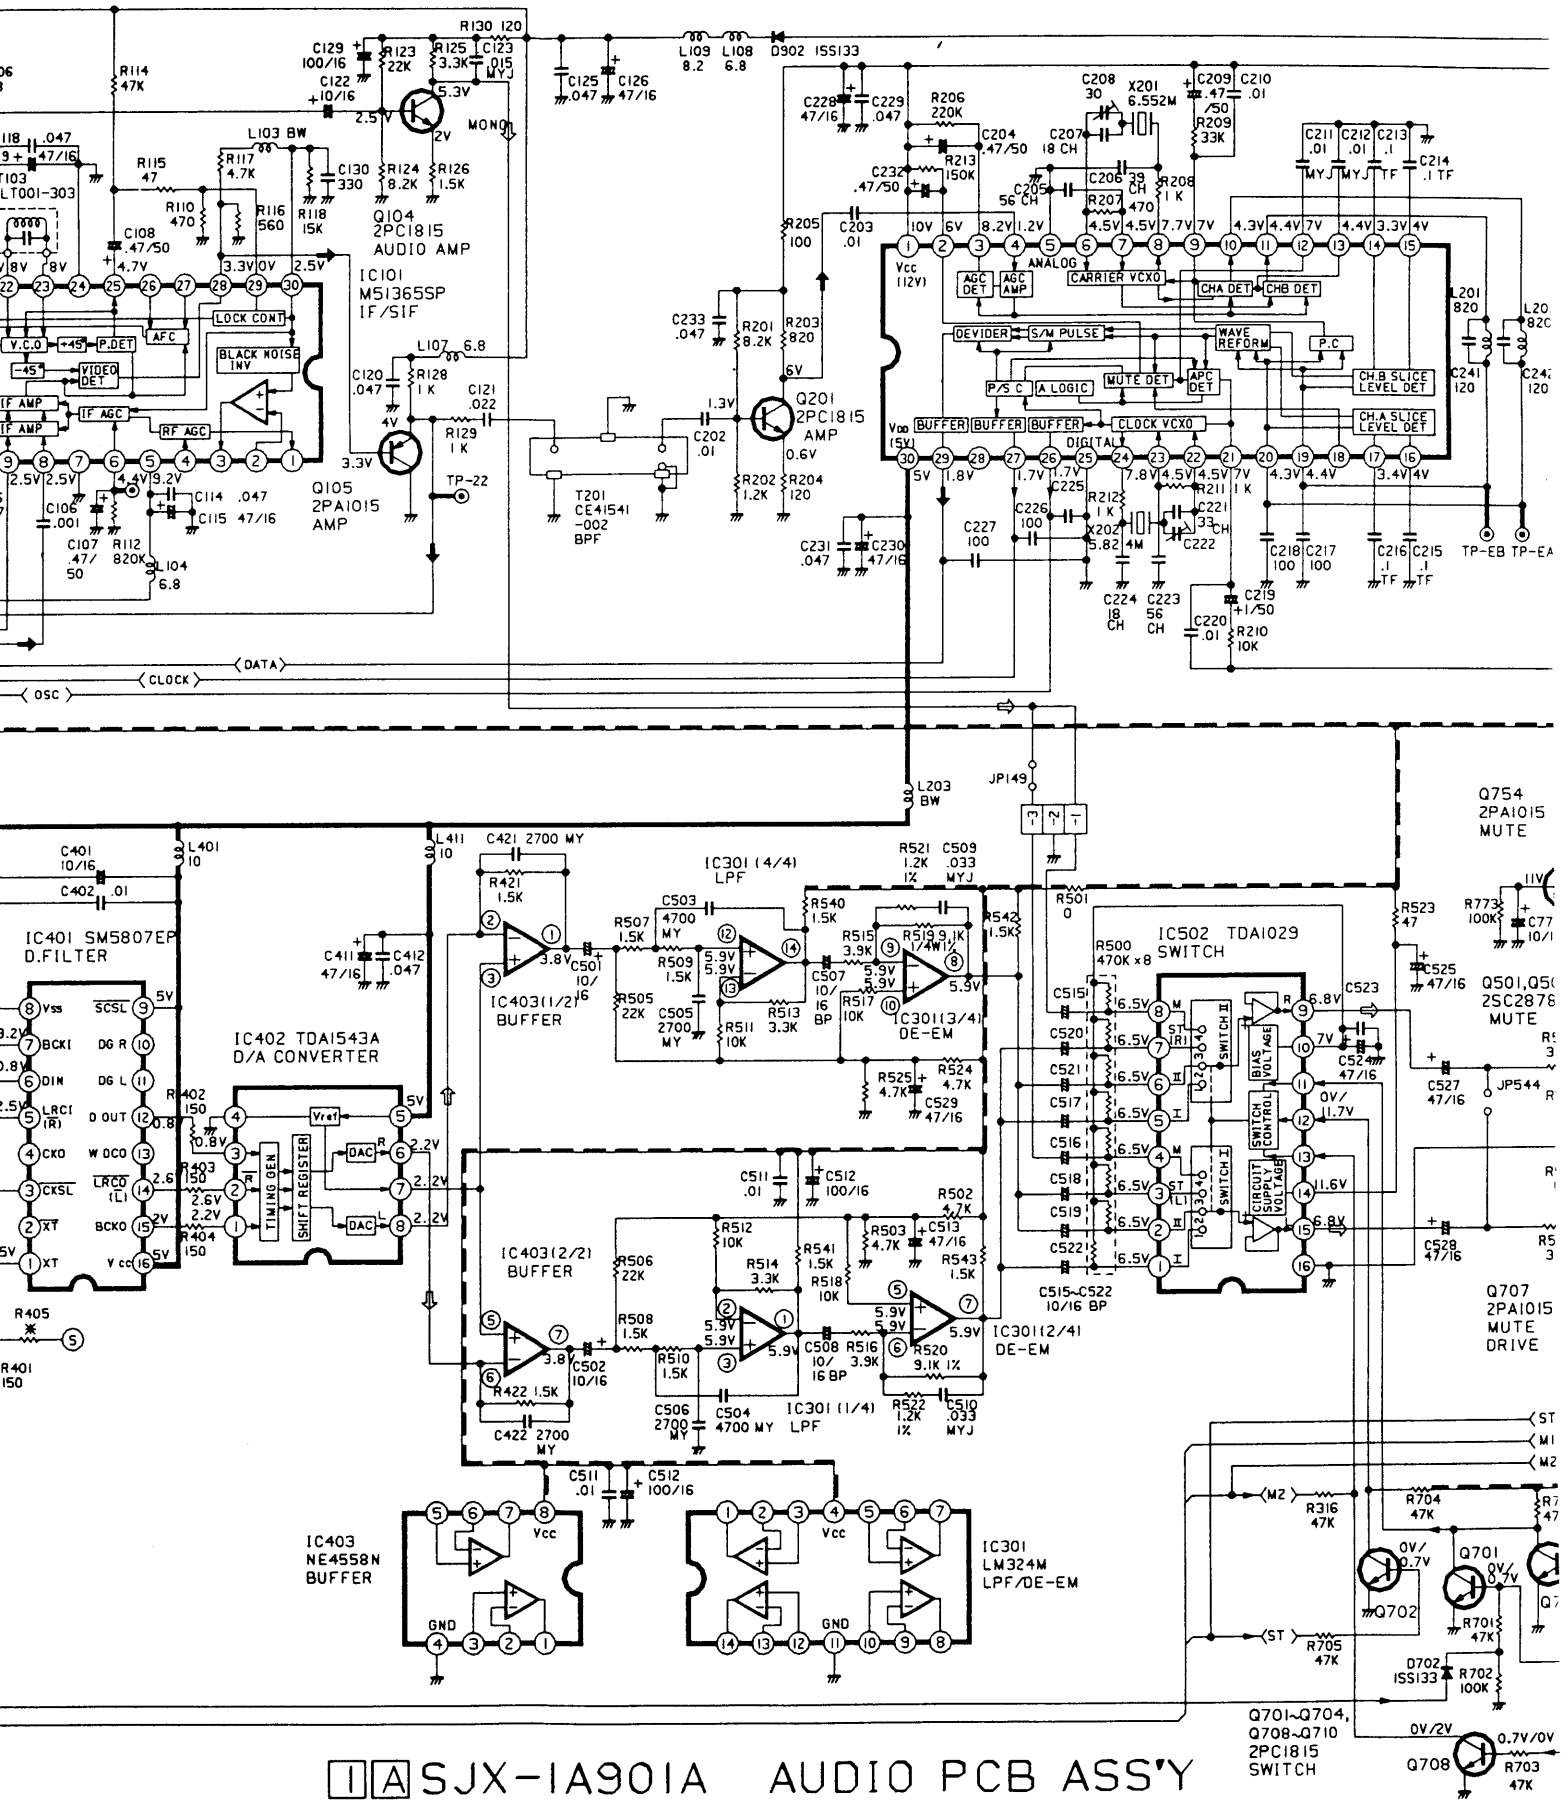

1A SJX-1A901A AUDIO PCB ASS'Y

For Service Manuals
MAURITRON SERVICES
8 Cherry Tree Road, Chinnor
Oxfordshire, OX9 4QY.
Tel (01844) 351694
Fax (01844) 352554
email:- mauritron@dial.pipex.com

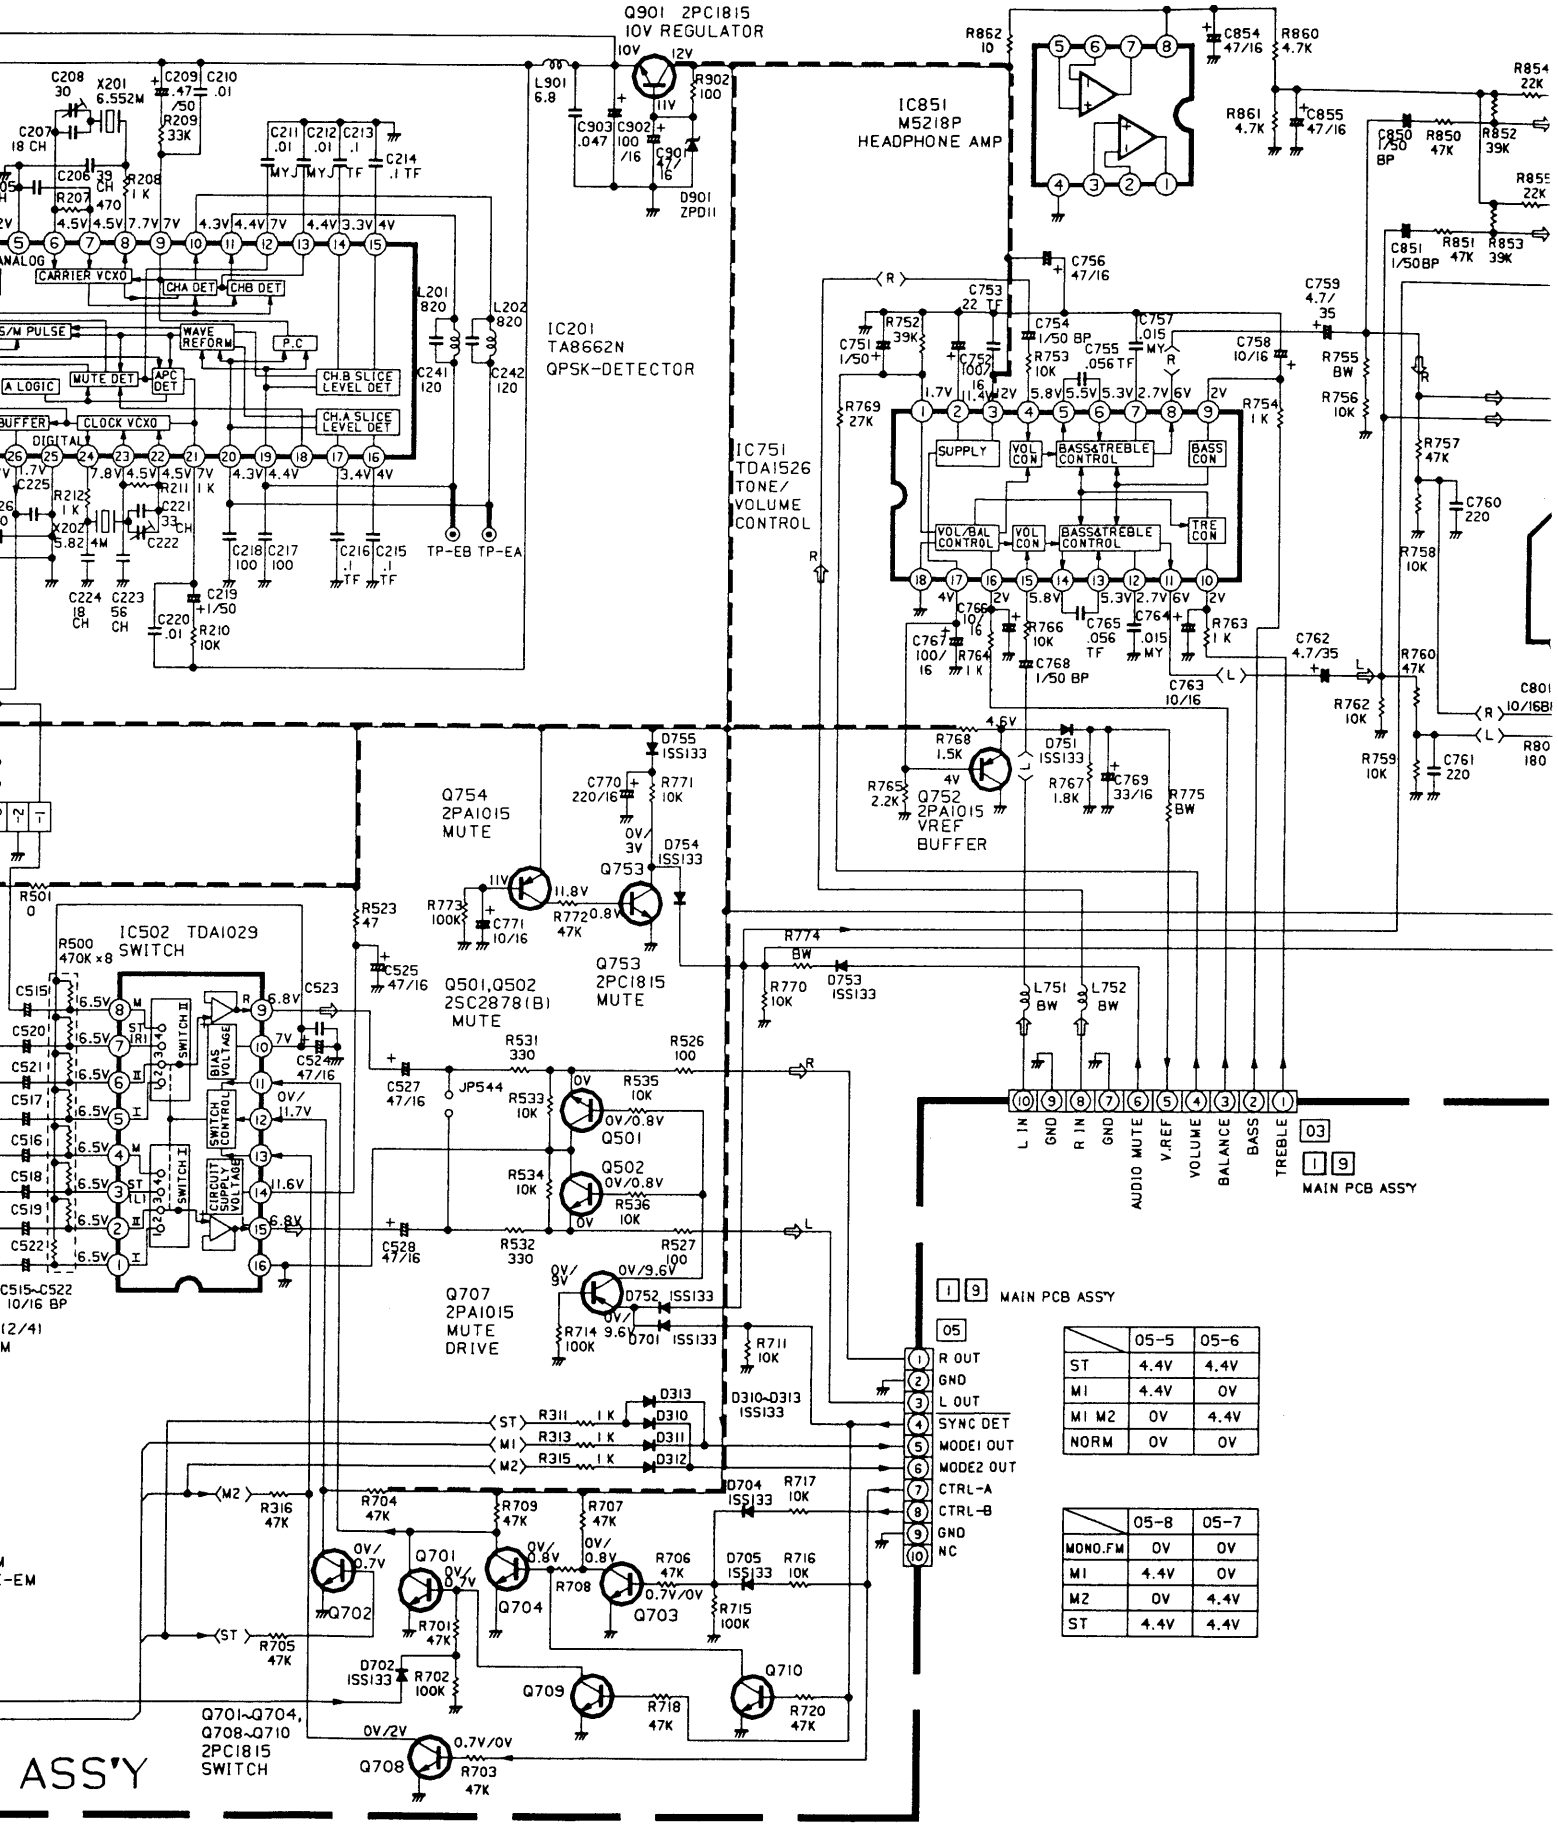

	05-5	05-6
ST	4.4V	4.4V
M1	4.4V	0V
M1 M2	0V	4.4V
NORM	0V	0V

	05-8	05-7
MONO.FM	0V	0V
M1	4.4V	0V
M2	0V	4.4V
ST	4.4V	4.4V

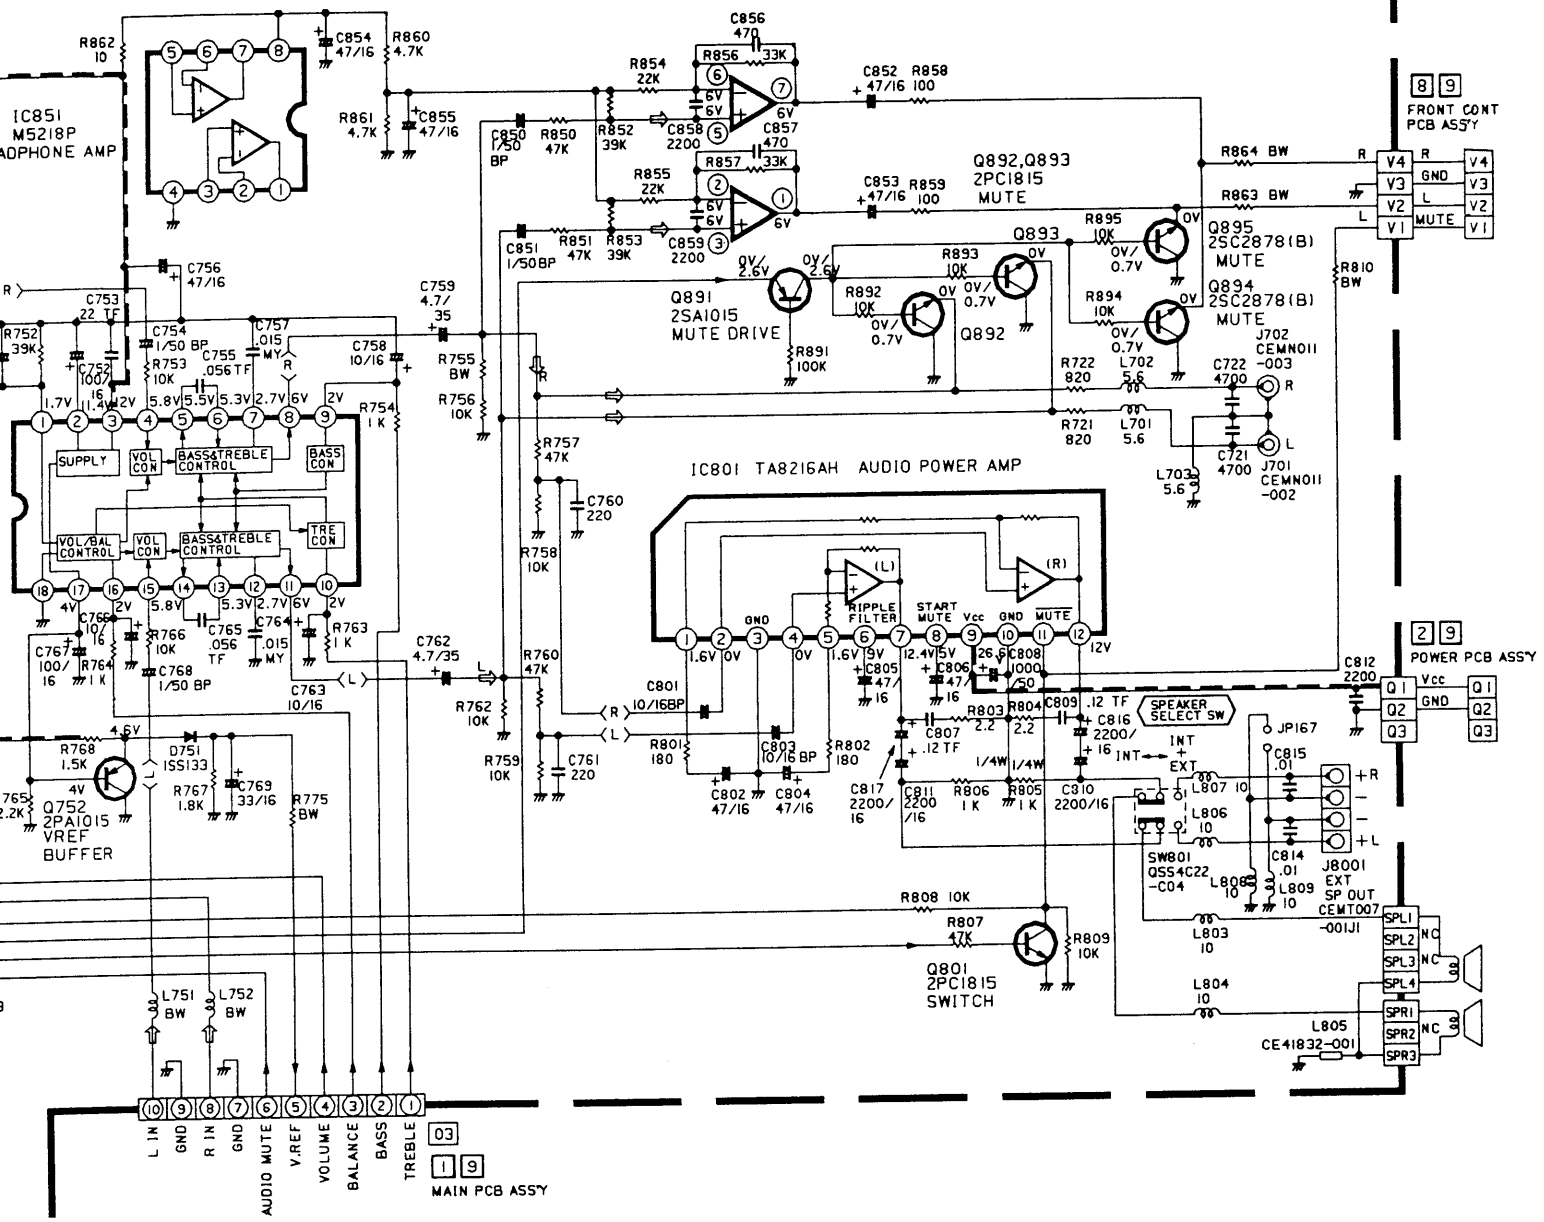

[1][9] MAIN PCB ASSY

[05]

1	R OUT
2	GND
3	L OUT
4	SYNC DET
5	MODE1 OUT
6	MODE2 OUT
7	CTRL-A
8	CTRL-B
9	GND
10	NC

	05-5	05-6
ST	4.4V	4.4V
M1	4.4V	0V
M1 M2	0V	4.4V
NORM	0V	0V

	05-8	05-7
MONO.FM	0V	0V
M1	4.4V	0V
M2	0V	4.4V
ST	4.4V	4.4V

■ TELETEXT PCB SCHEMATIC DIAGRAM AND BACK PATTERN

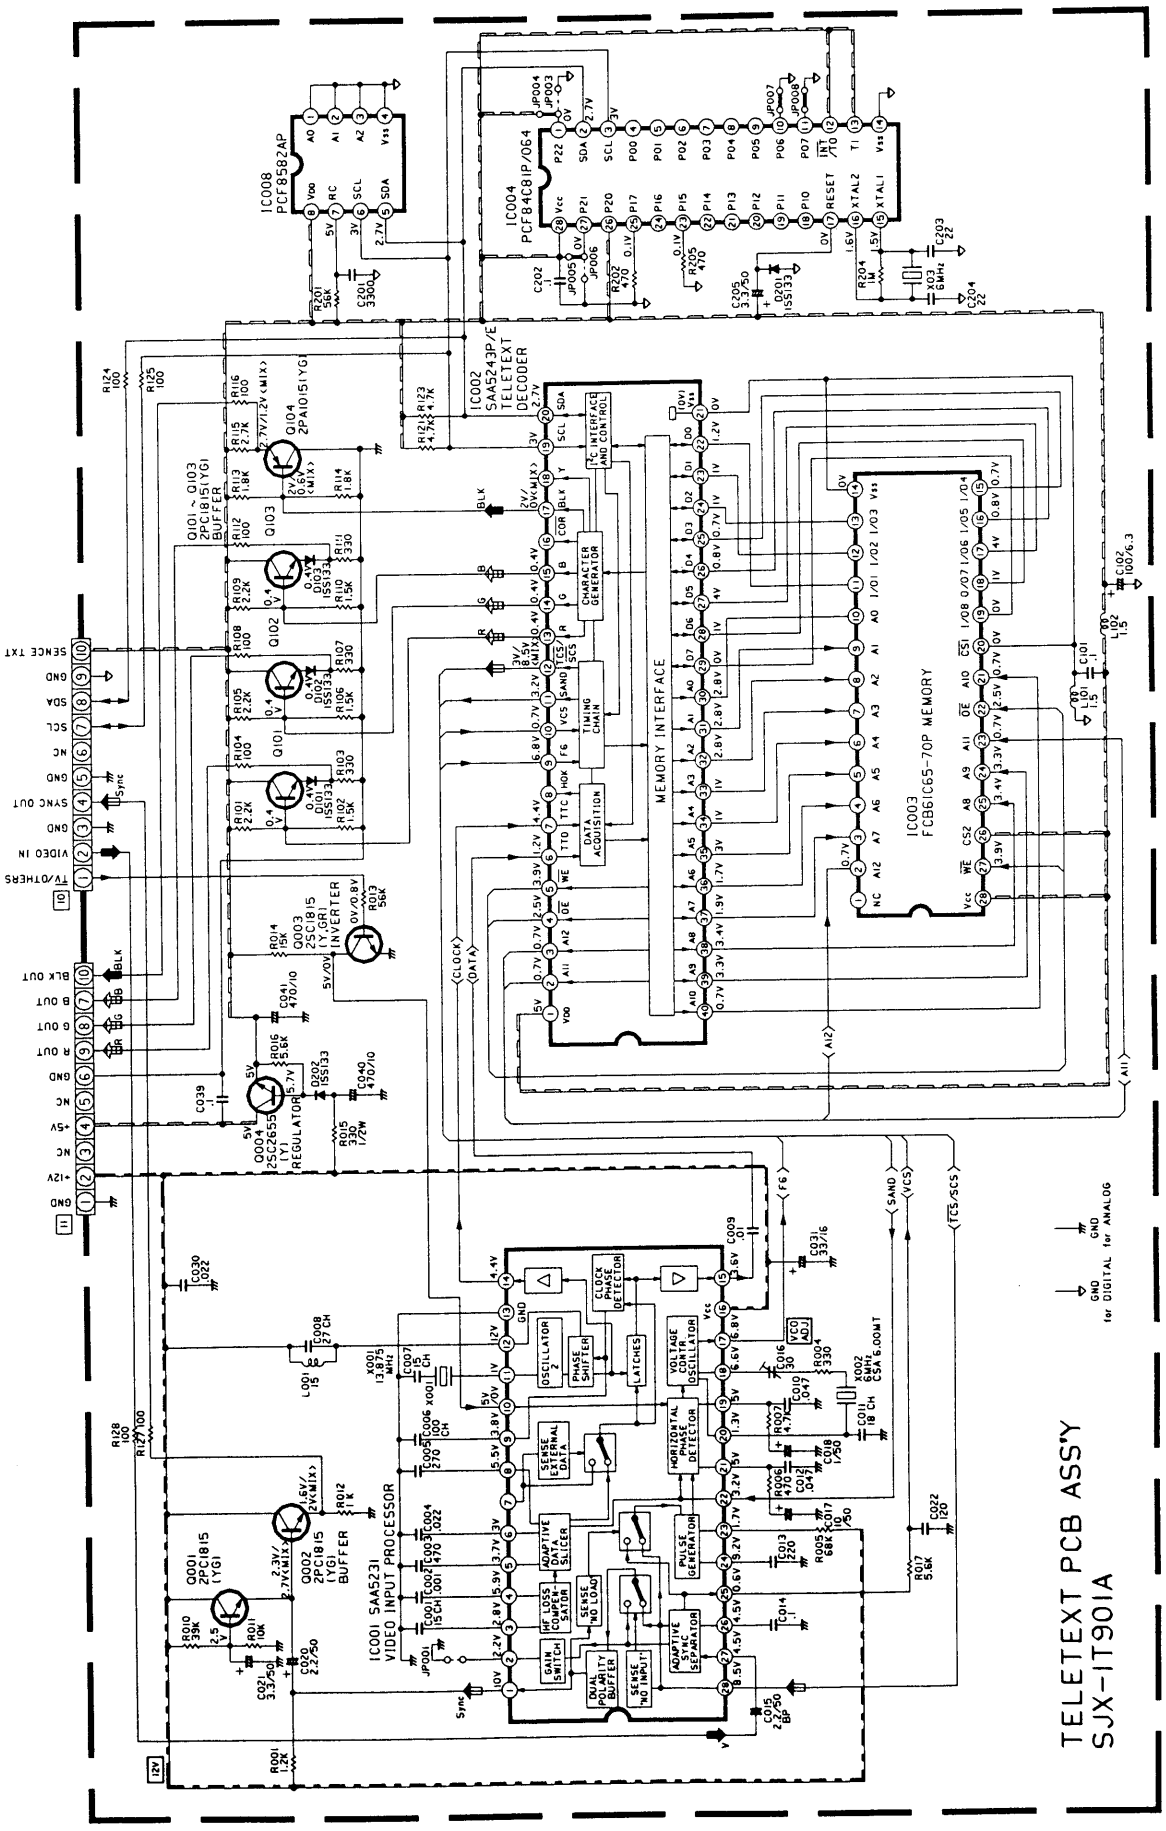

TOP

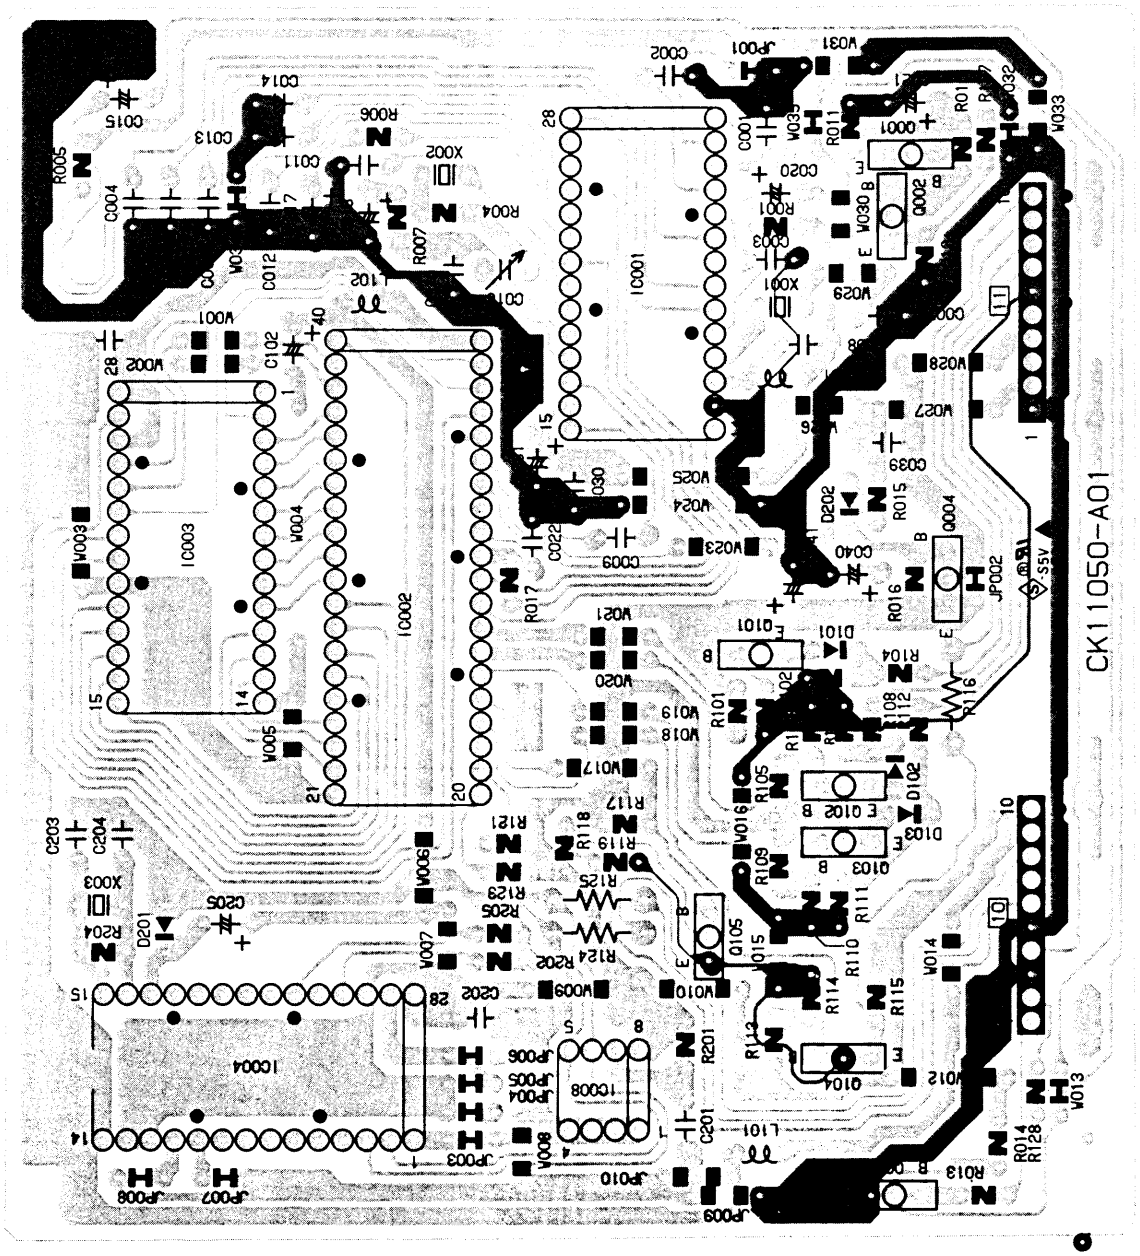

■ VIF PCB SCHEMATIC DIAGRAM AND BACK PATTERN

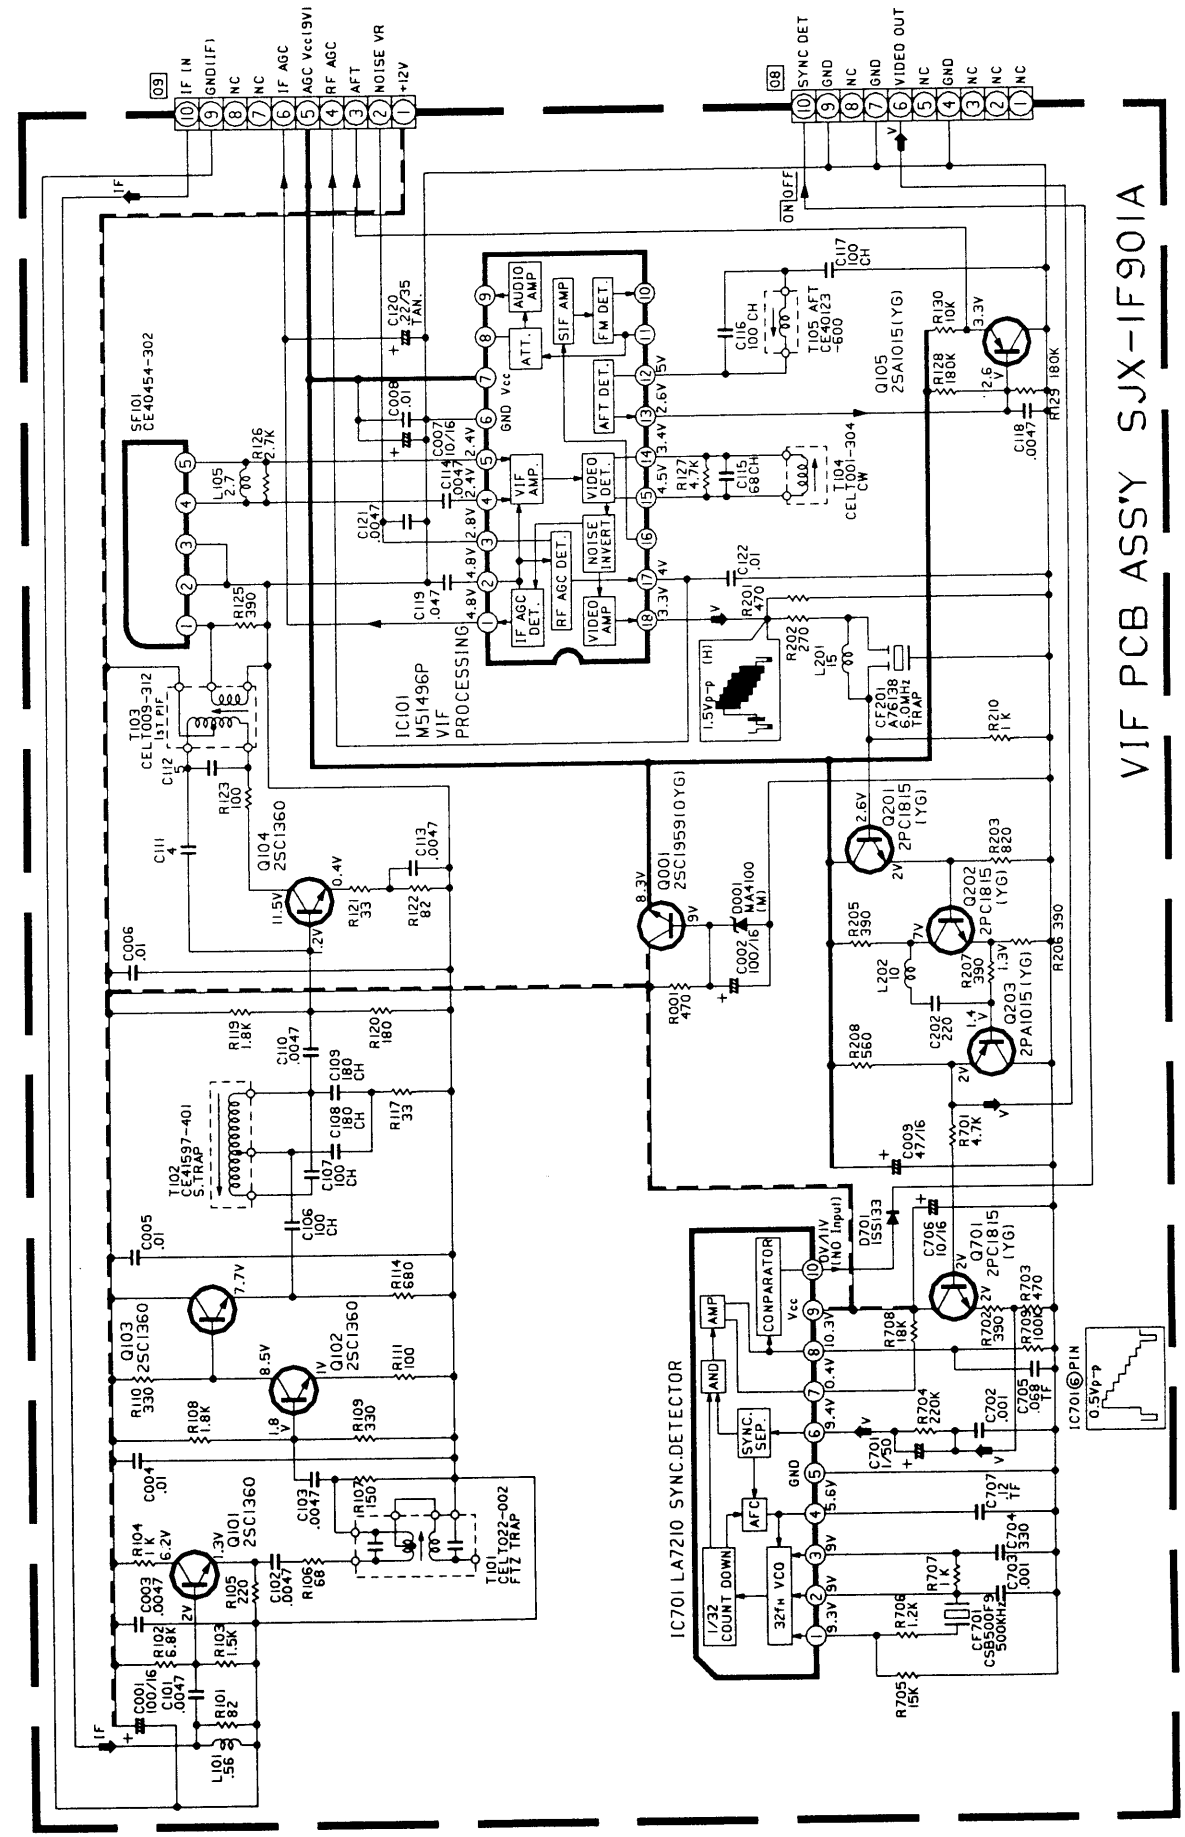

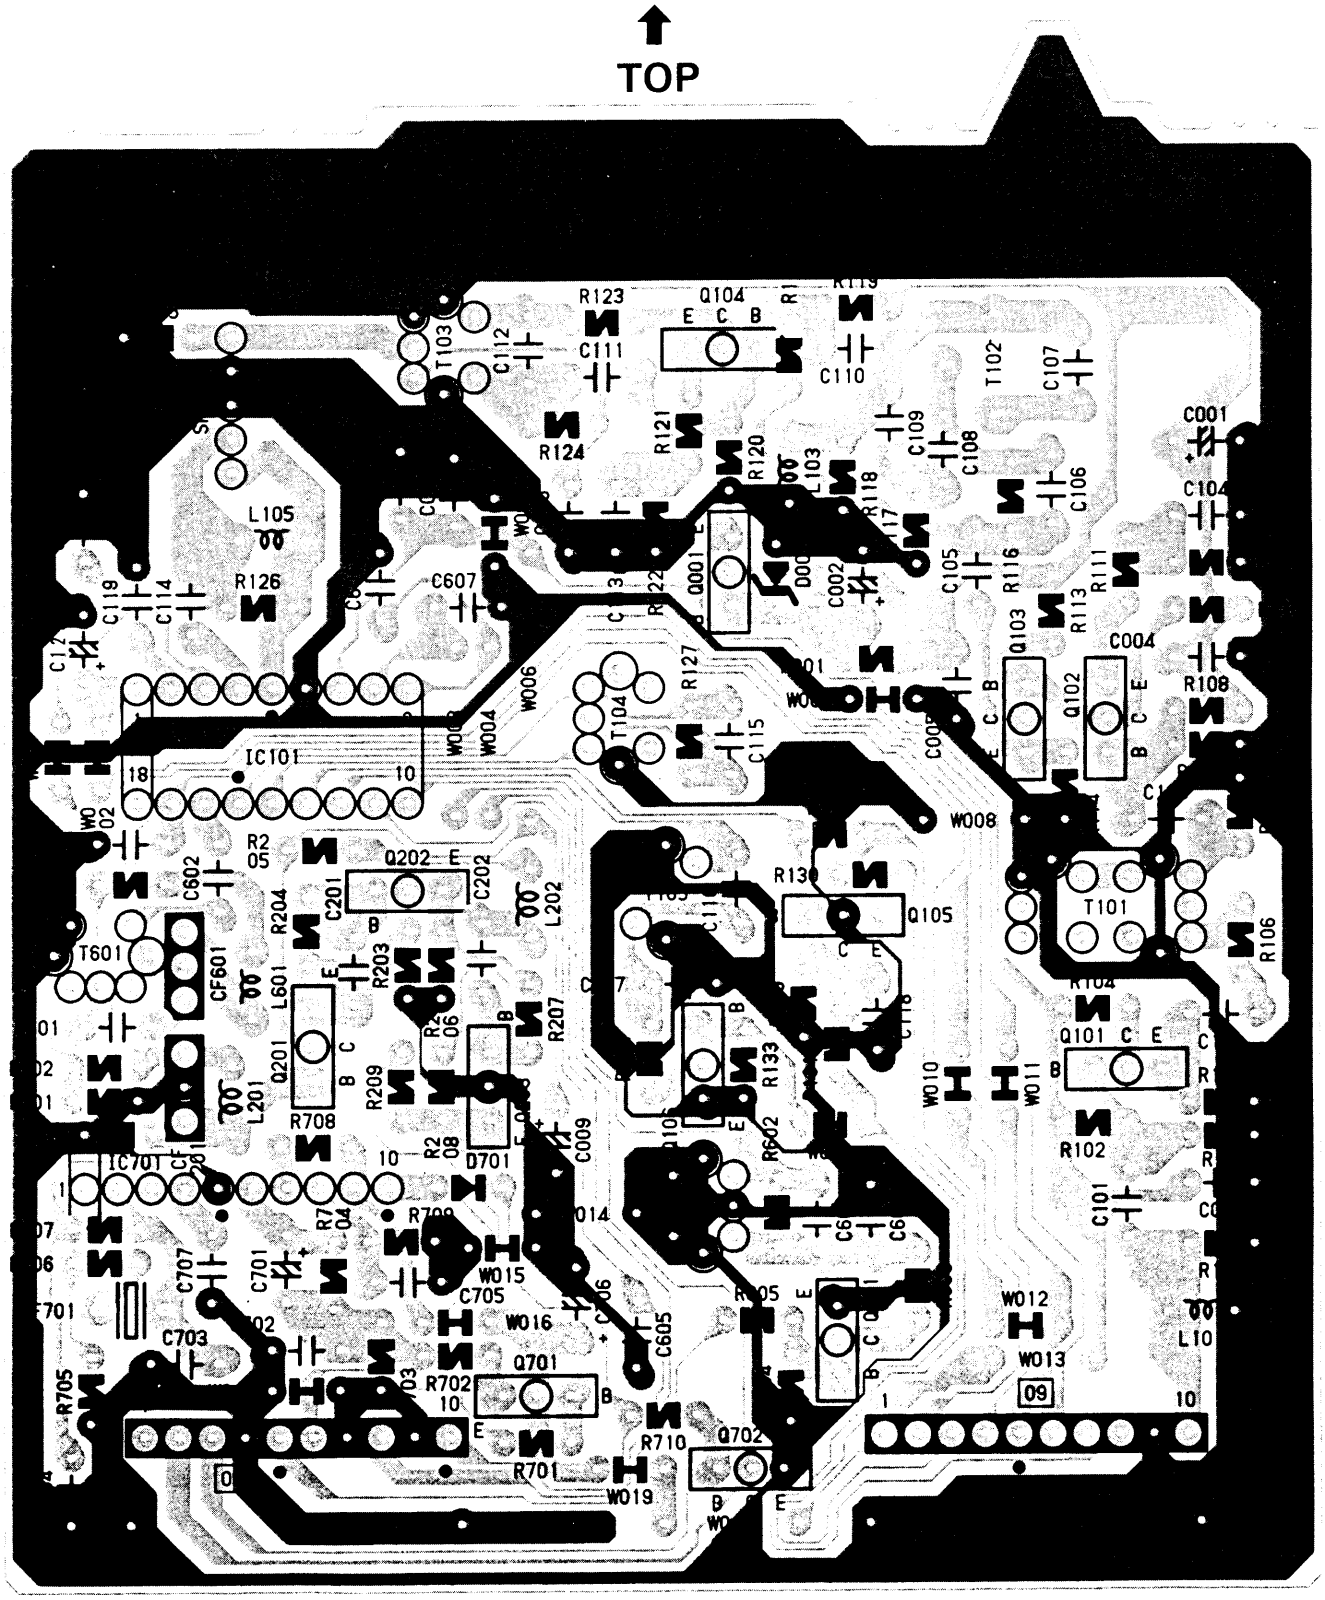
TOP
R123
Q104
E C B
C111
C110
T103
C112
T102
C107
C001
R124
R121
R120
L103
C109
C108
C106
C104
L105
R126
C607
Q001
C002
C105
R116
R111
Q103
R113
C004
R127
T104
C115
Q102
R108
IC101
18
10
WO02
WO04
WO06
WO08
C602
R205
Q202 E
C201
C202
L202
R130
Q105
T101
R106
T601
CF601
L601
R204
R203
Q201
B C E
L201
R207
R206
R209
R708
D701
R133
R602
R104
Q101 C E
R102
C101
IC701
R704
R709
C707
C701
WO15
C705
WO16
C703
C606
C605
R705
Q701
R702
R710
Q702
R701
WO19
WO12
WO13
09
L10

■ AV SELECTOR PCB BACK PATTERN

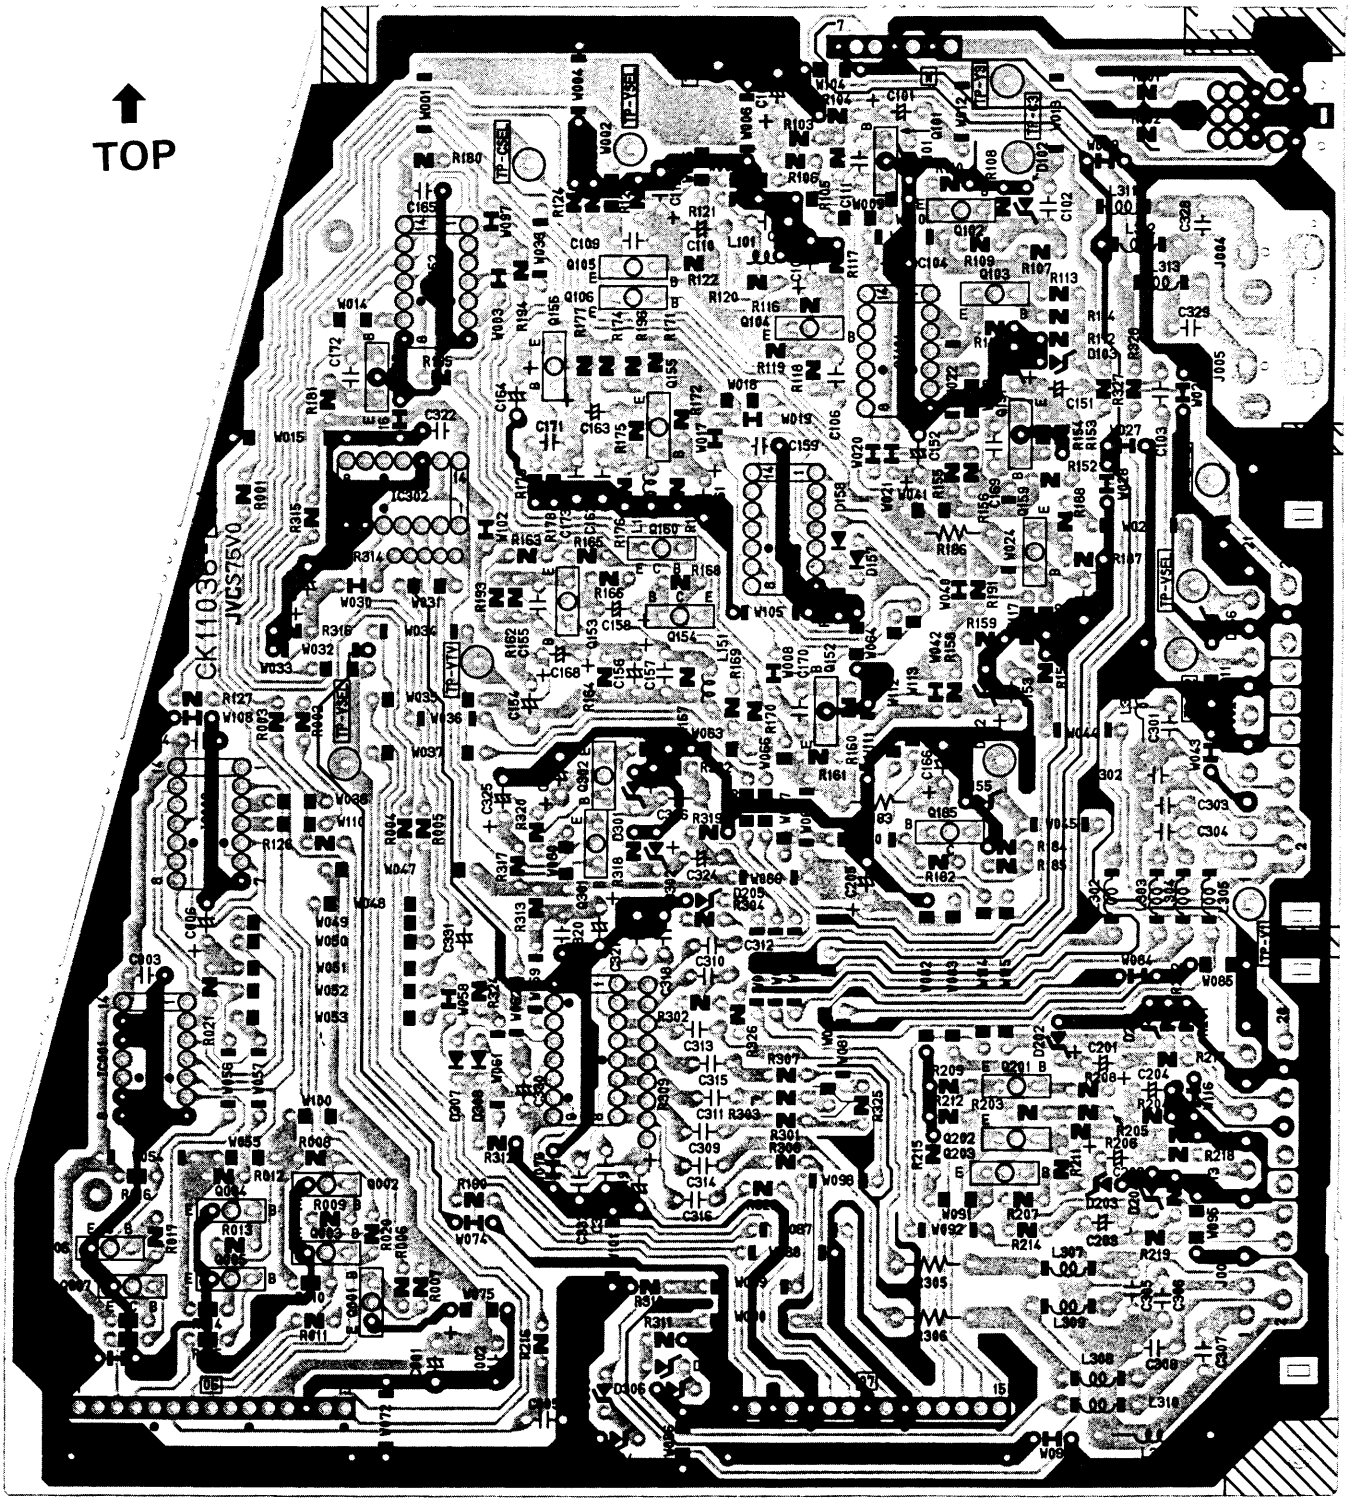

■ AV SELECTOR PCB SCHEMATIC DIAGRAM

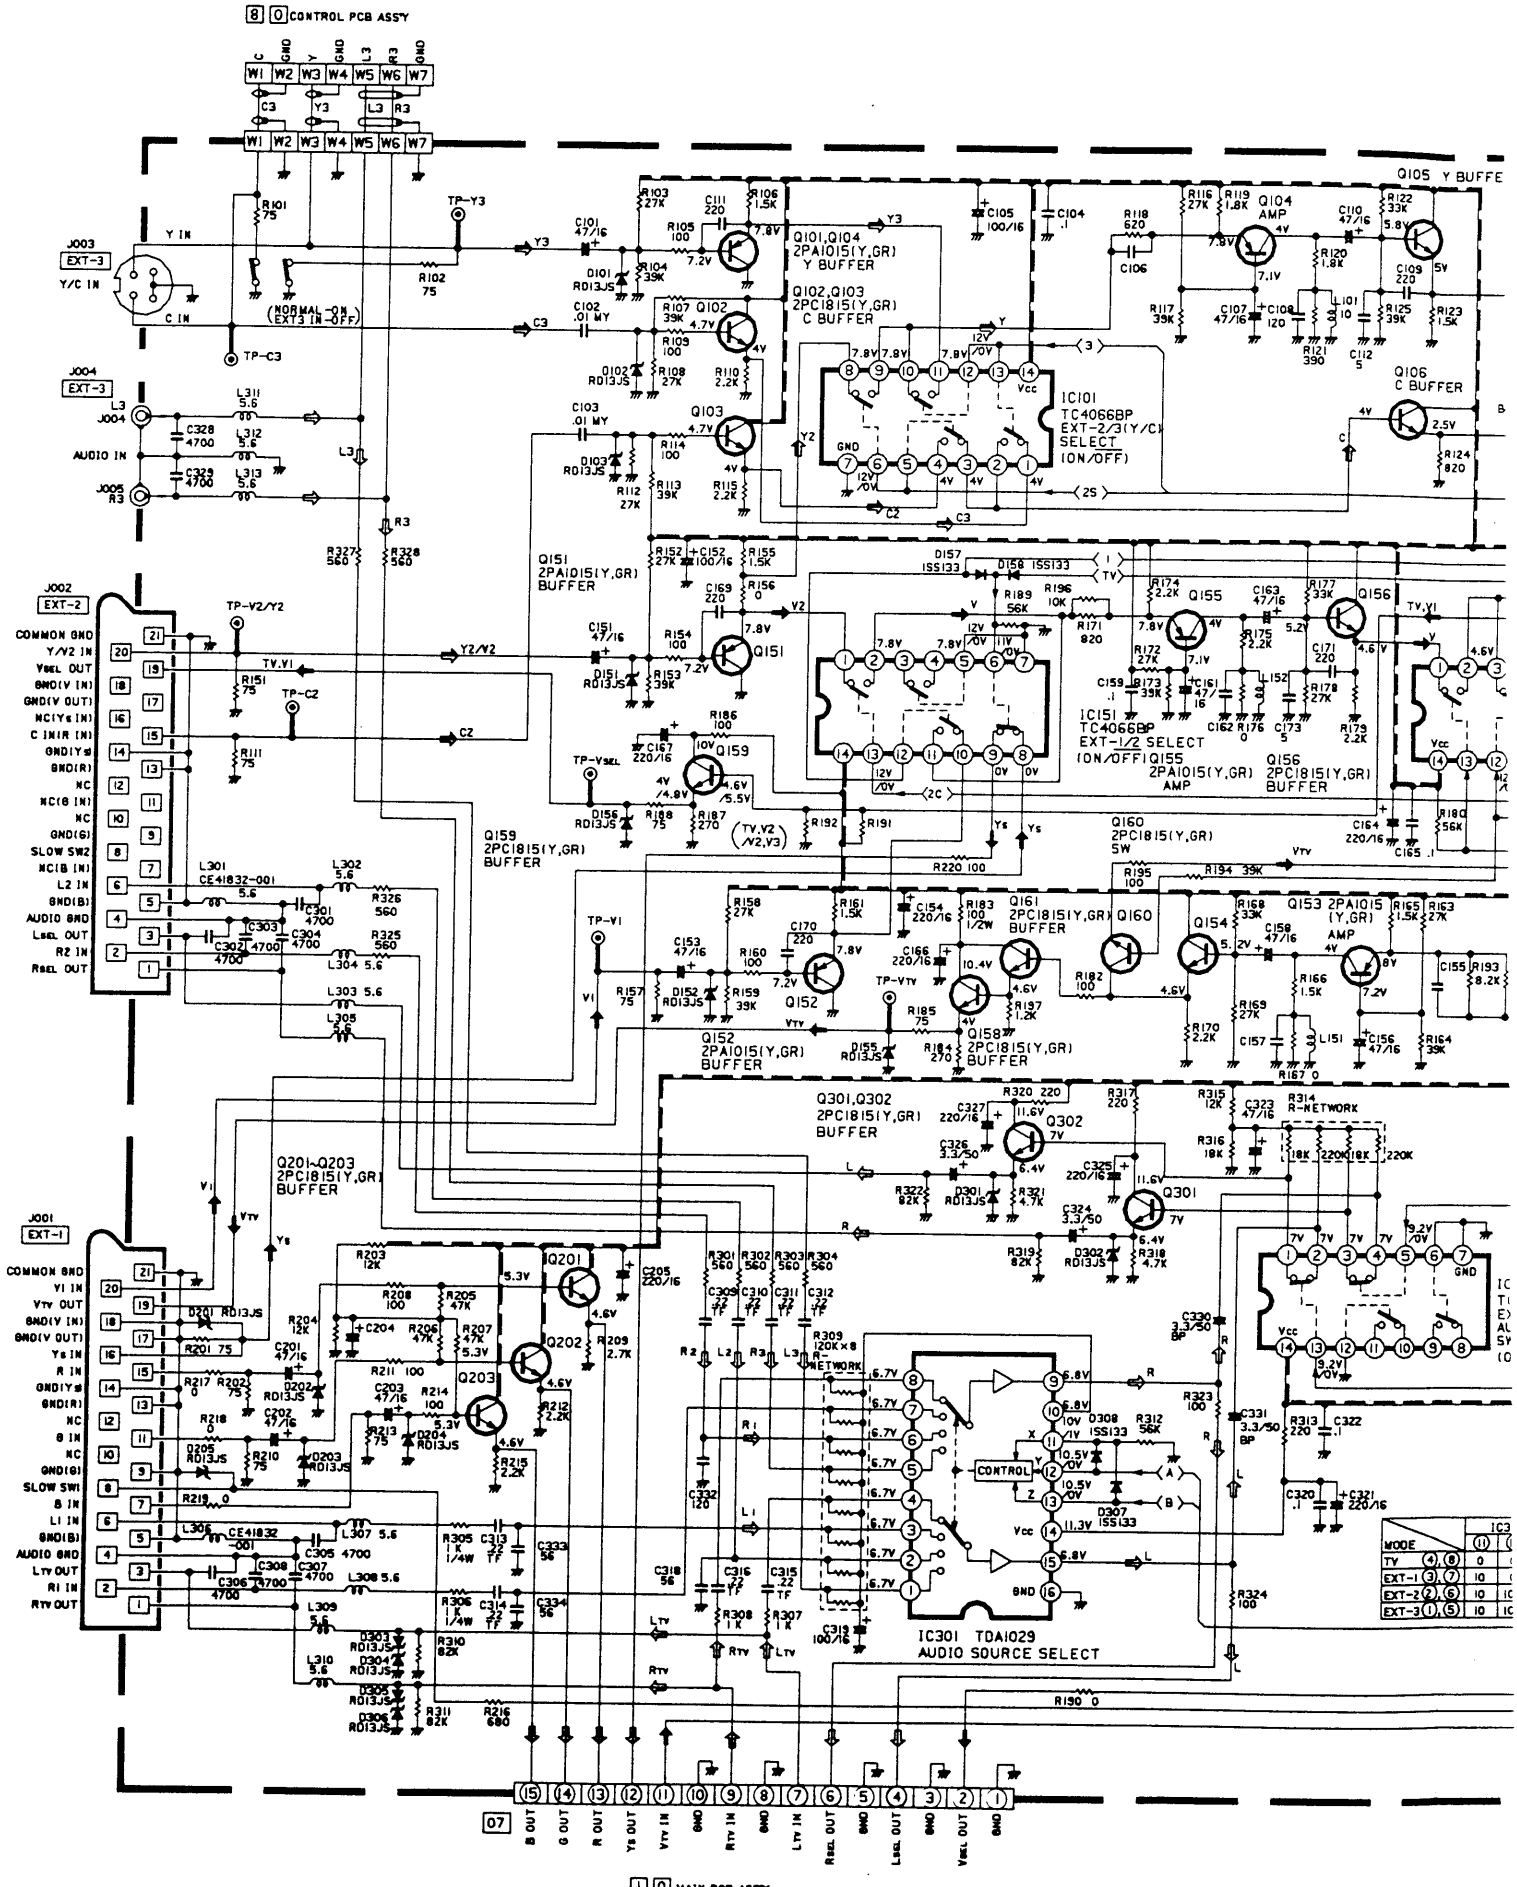

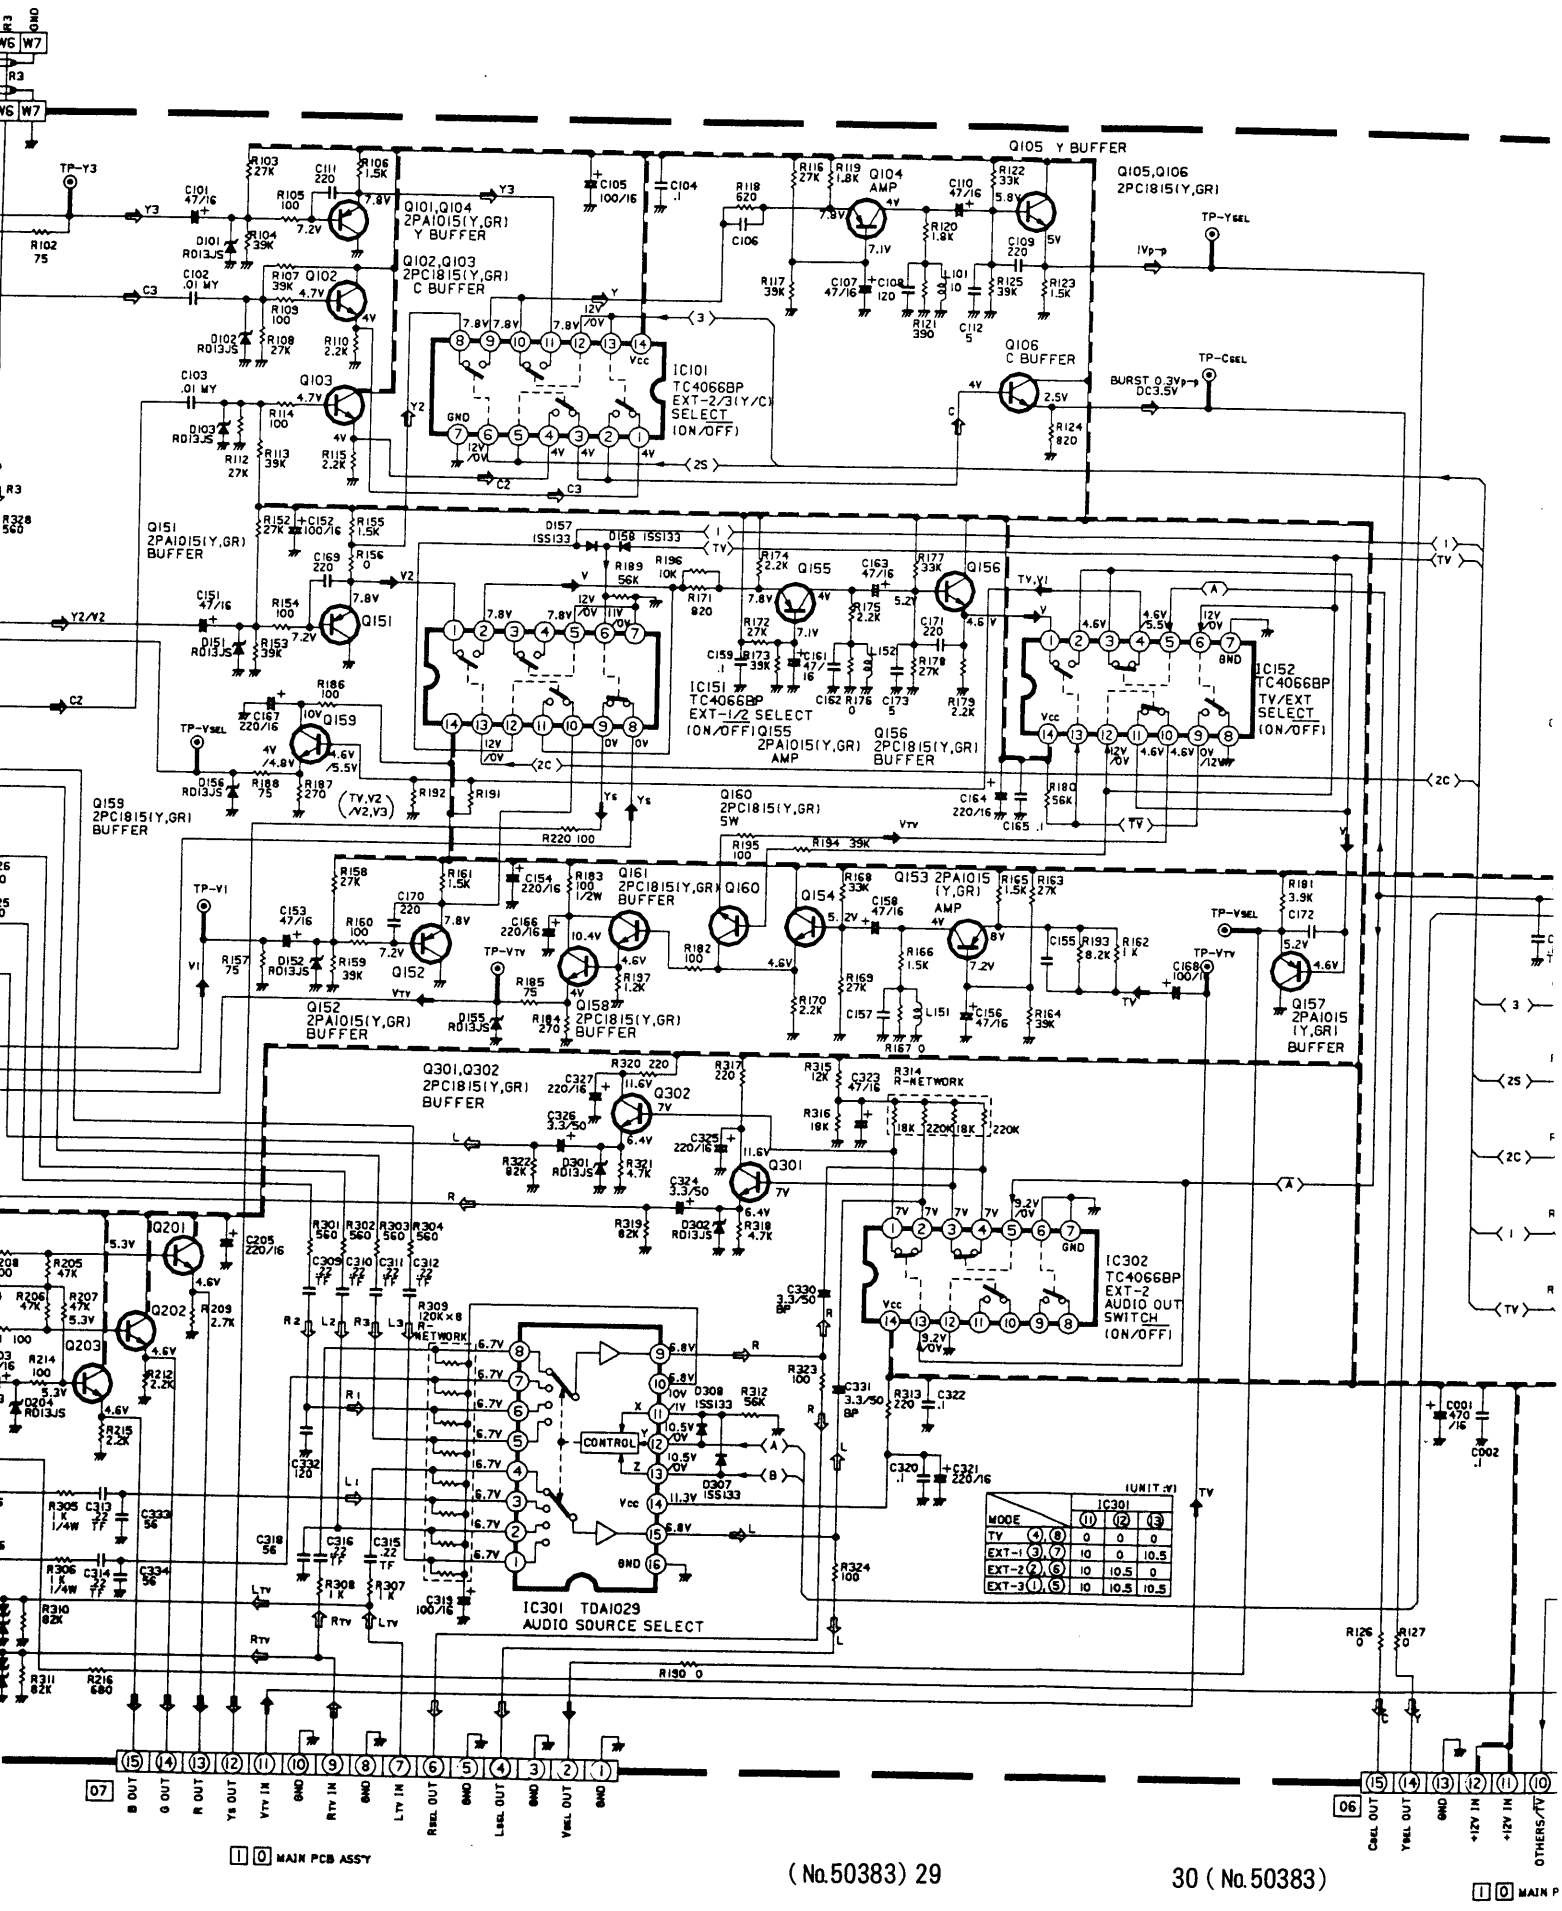
Q105 Y BUFFER
Q105,Q106
2PC1815(Y,GR)
Q101,Q104
2PA1015(Y,GR)
Y BUFFER
Q102,Q103
2PC1815(Y,GR)
C BUFFER
Q104
AMP
Q106
C BUFFER
IC101
TC4066BP
EXT-2/3(Y/C)
SELECT
(ON/OFF)
Q151
2PA1015(Y,GR)
BUFFER
Q155
Q156
2PC1815(Y,GR)
BUFFER
IC151
TC4066BP
EXT-1/2 SELECT
(ON/OFF)
Q155
2PA1015(Y,GR)
AMP
IC152
TC4066BP
TV/EXT
SELECT
(ON/OFF)
Q159
2PC1815(Y,GR)
BUFFER
Q160
2PC1815(Y,GR)
SW
Q161
2PC1815(Y,GR)
BUFFER
Q153 2PA1015
(Y,GR)
AMP
Q152
2PA1015(Y,GR)
BUFFER
Q158
2PC1815(Y,GR)
BUFFER
Q157
2PA1015
(Y,GR)
BUFFER
Q301,Q302
2PC1815(Y,GR)
BUFFER
Q201
Q202
Q203
IC302
TC4066BP
EXT-2
AUDIO OUT
SWITCH
(ON/OFF)
IC301 TDA1029
AUDIO SOURCE SELECT
CONTROL
R-NETWORK
IC301
MODE
TV
EXT-1
EXT-2
EXT-3
(UNIT:V)
TP-Y3
TP-YSEL
TP-CSEL
TP-V1
TP-VSEL
TP-VTV
BURST 0.3Vp-p
DC3.5V
1Vp-p
(TV,V2)
(V2,V3)
B OUT
G OUT
R OUT
YS OUT
VTV IN
GND
RTV IN
GND
LTV IN
RSEL OUT
GND
LSEL OUT
GND
VSEL OUT
GND
CSEL OUT
YSEL OUT
GND
+12V IN
+12V IN
OTHERS/TV
07
06
I0 MAIN PCB ASSY
I0 MAIN P

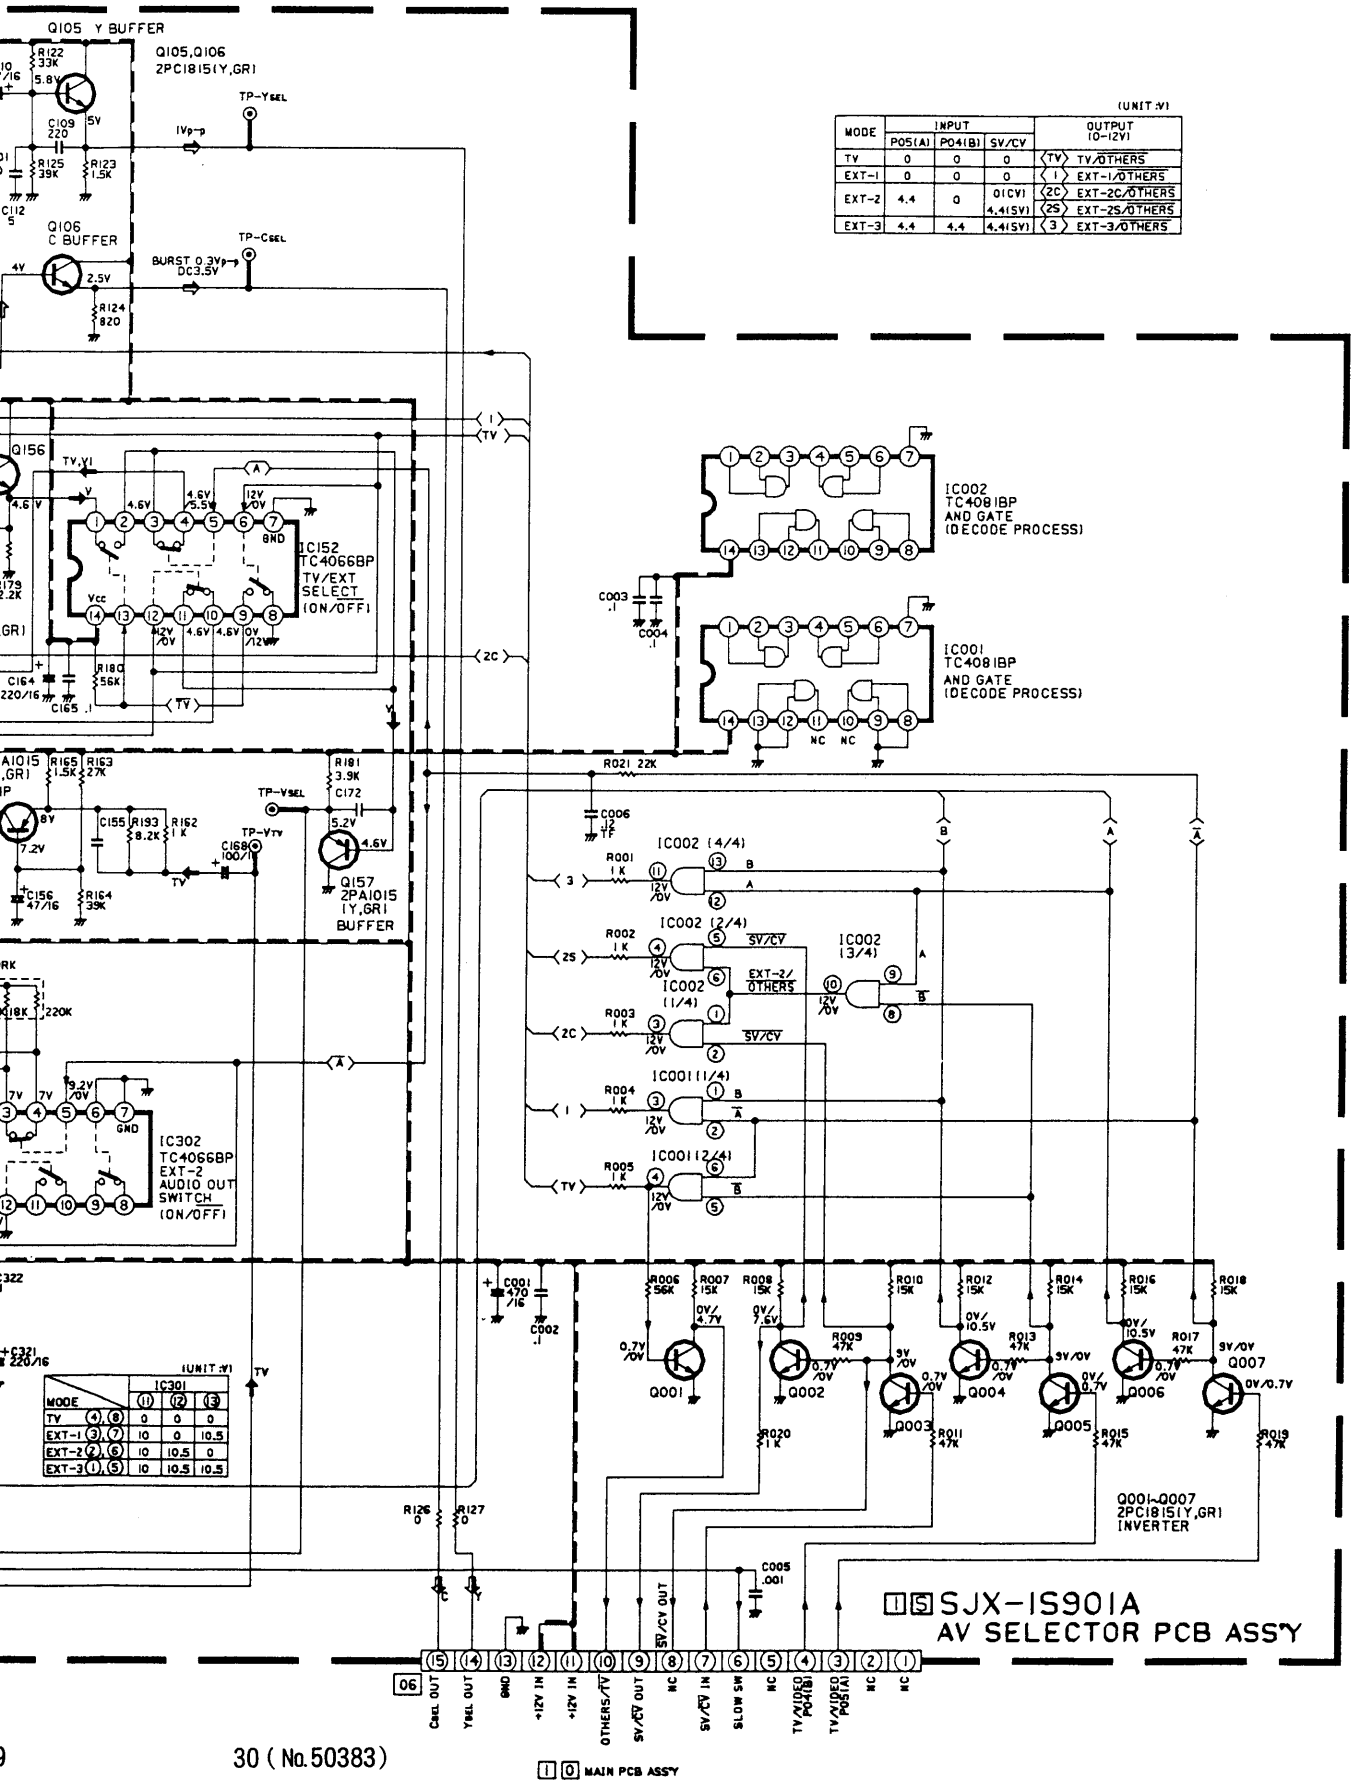

(UNIT:V)

MODE	INPUT			OUTPUT (0-12V)	
	P05(A)	P04(B)	SV/CV		
TV	0	0	0	⟨TV⟩	TV/OTHERS
EXT-1	0	0	0	⟨1⟩	EXT-1/OTHERS
EXT-2	4.4	0	0(CV) 4.4(SV)	⟨2C⟩ ⟨2S⟩	EXT-2C/OTHERS EXT-2S/OTHERS
EXT-3	4.4	4.4	4.4(SV)	⟨3⟩	EXT-3/OTHERS

(UNIT:V)

MODE	IC301 (11)	(12)	(13)
TV (4),(8)	0	0	0
EXT-1 (3),(7)	10	0	10.5
EXT-2 (2),(6)	10	10.5	0
EXT-3 (1),(5)	10	10.5	10.5

■ ASP PCB SCHEMATIC DIAGRAM AND BACK PATTERN

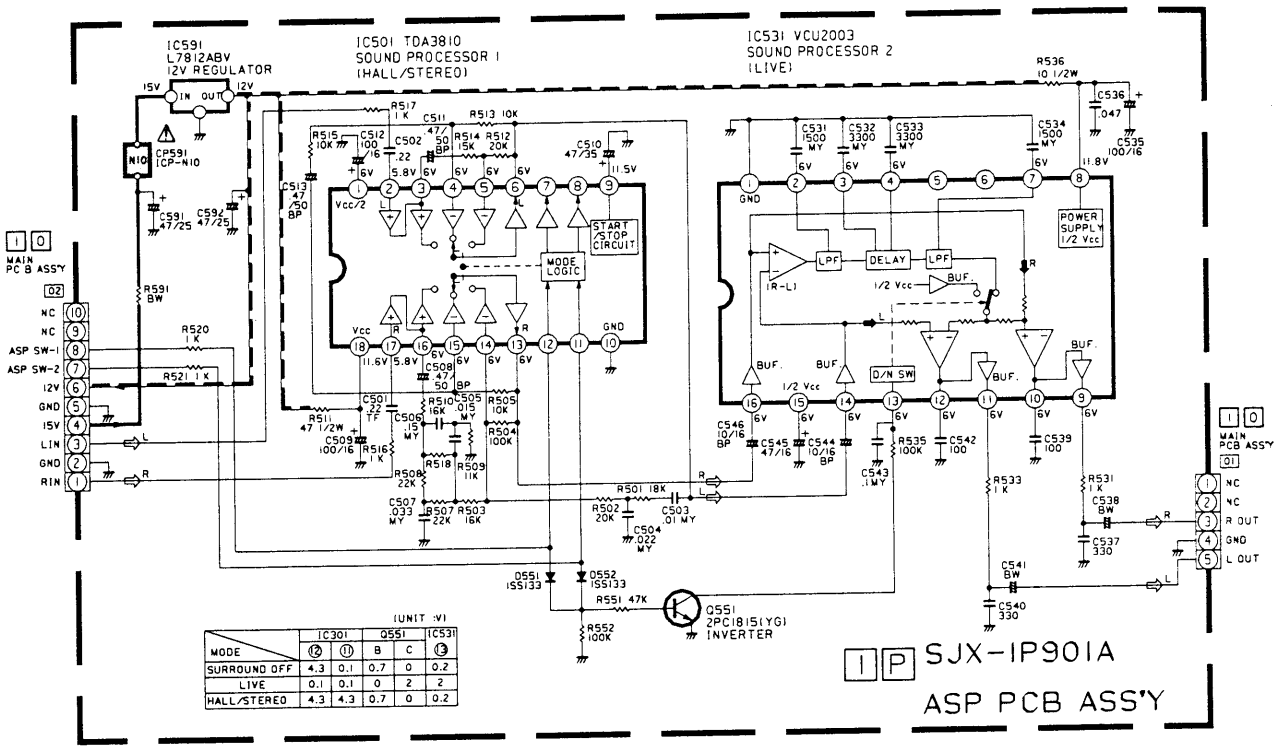

(UNIT :V)

MODE	IC301 ⑫	IC301 ⑪	Q551 B	Q551 C	IC531 ⑮
SURROUND OFF	4.3	0.1	0.7	0	0.2
LIVE	0.1	0.1	0	2	2
HALL/STEREO	4.3	4.3	0.7	0	0.2

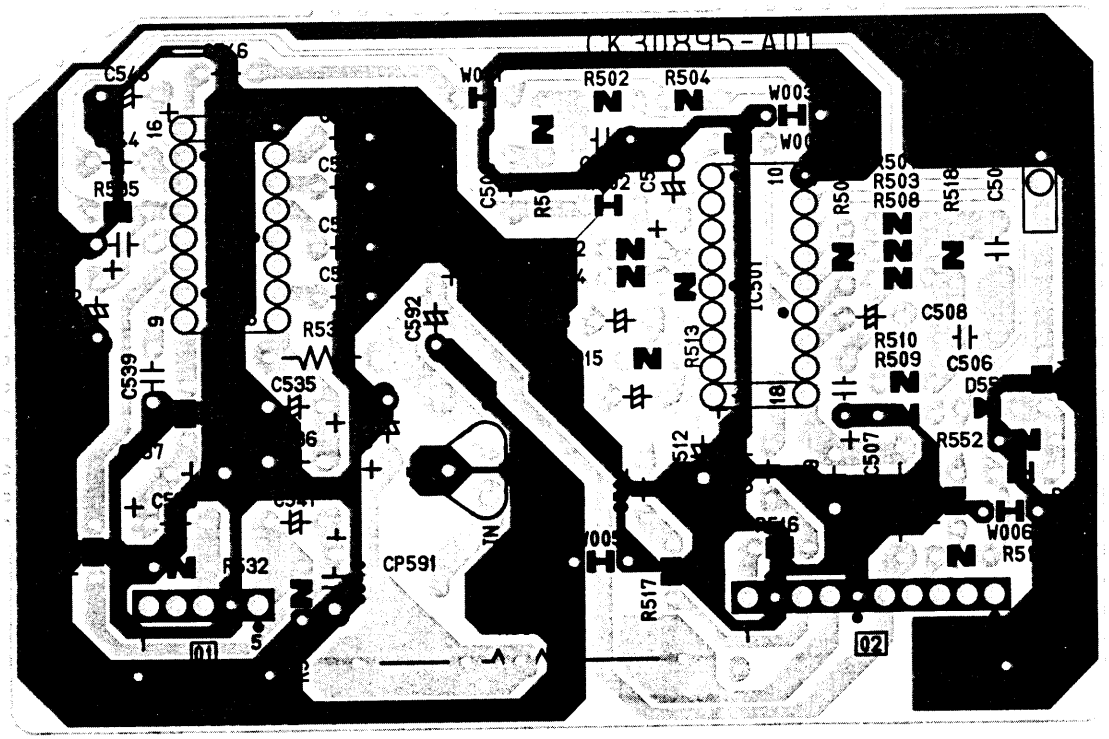

■ POWER PCB SCHEMATIC DIAGRAM AND BACK PATTERN

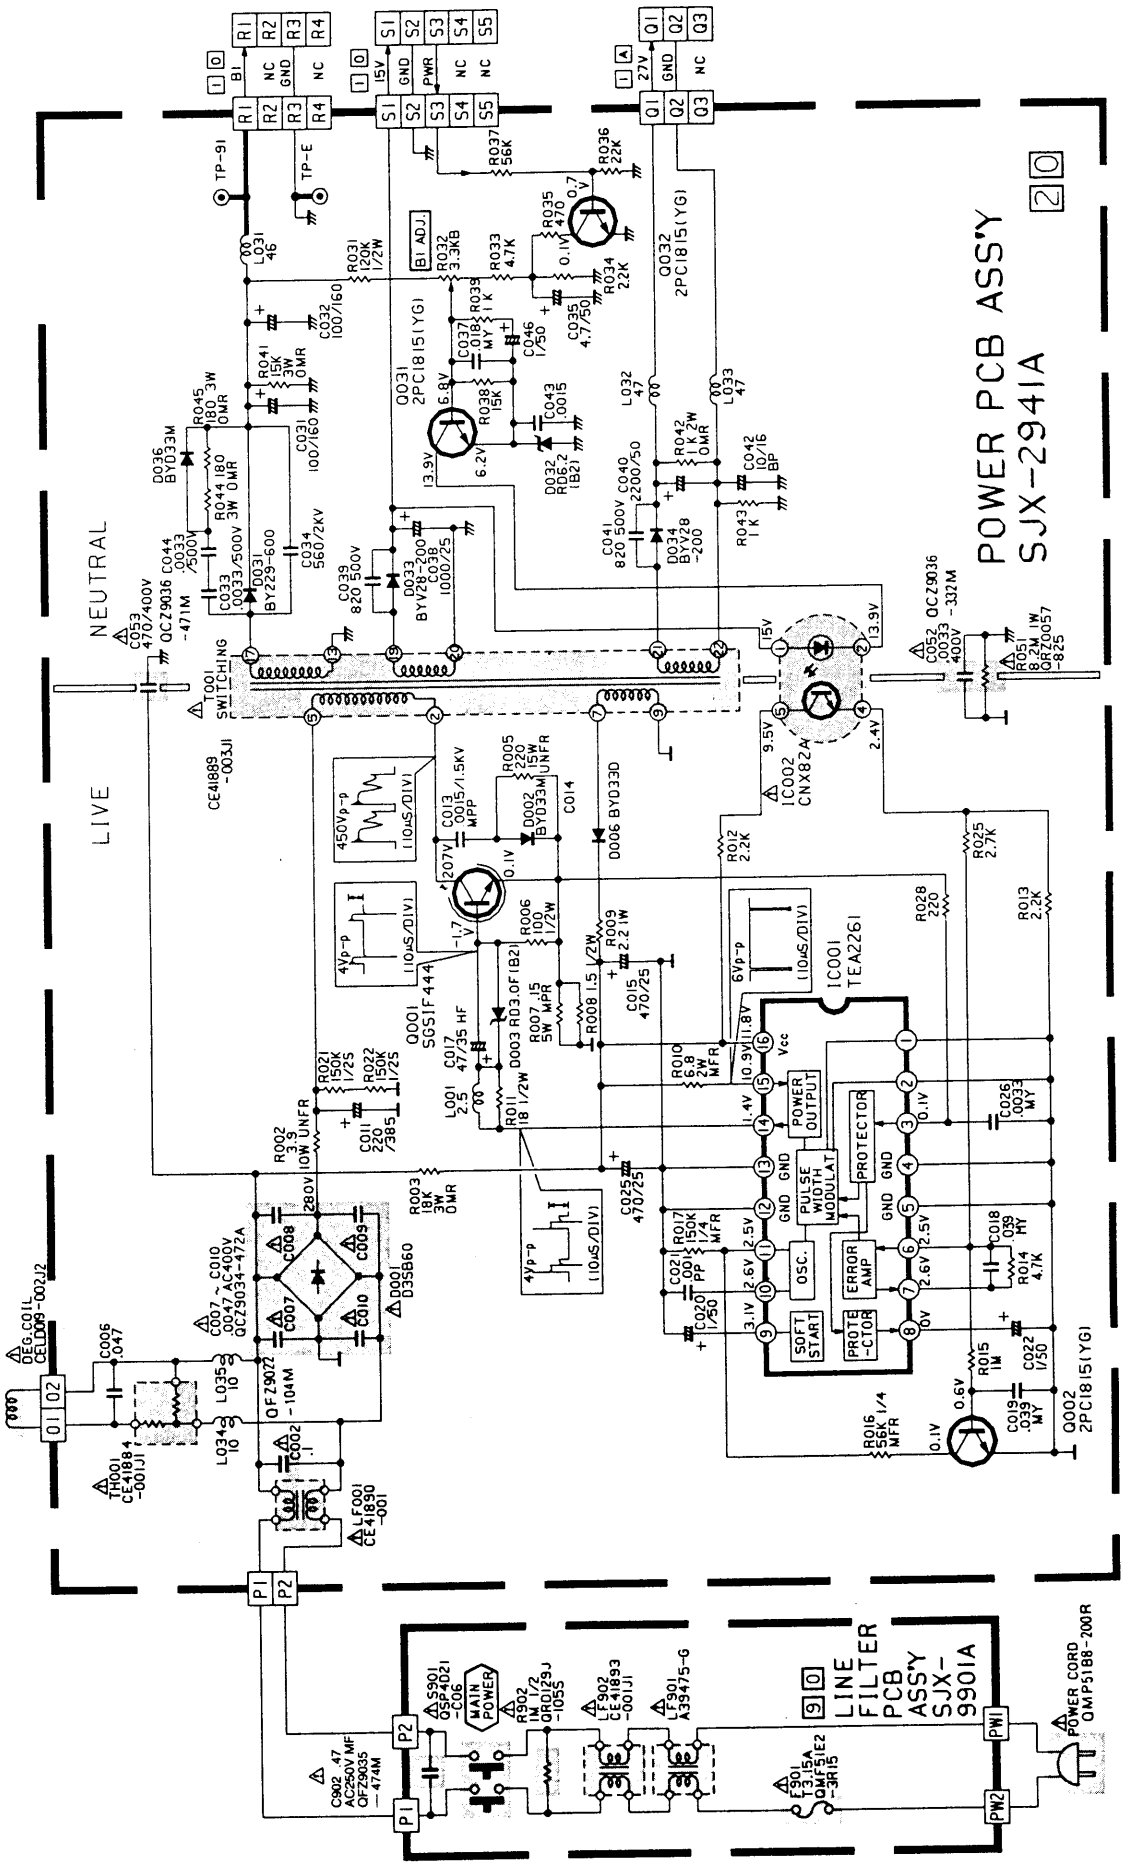

For Service Manuals
MAURITRON SERVICES
8 Cherry Tree Road, Chinnor
Oxfordshire, OX9 4QY.
Tel (01844) 351694
Fax (01844) 352554
email:- mauritron@dial.pipex.com

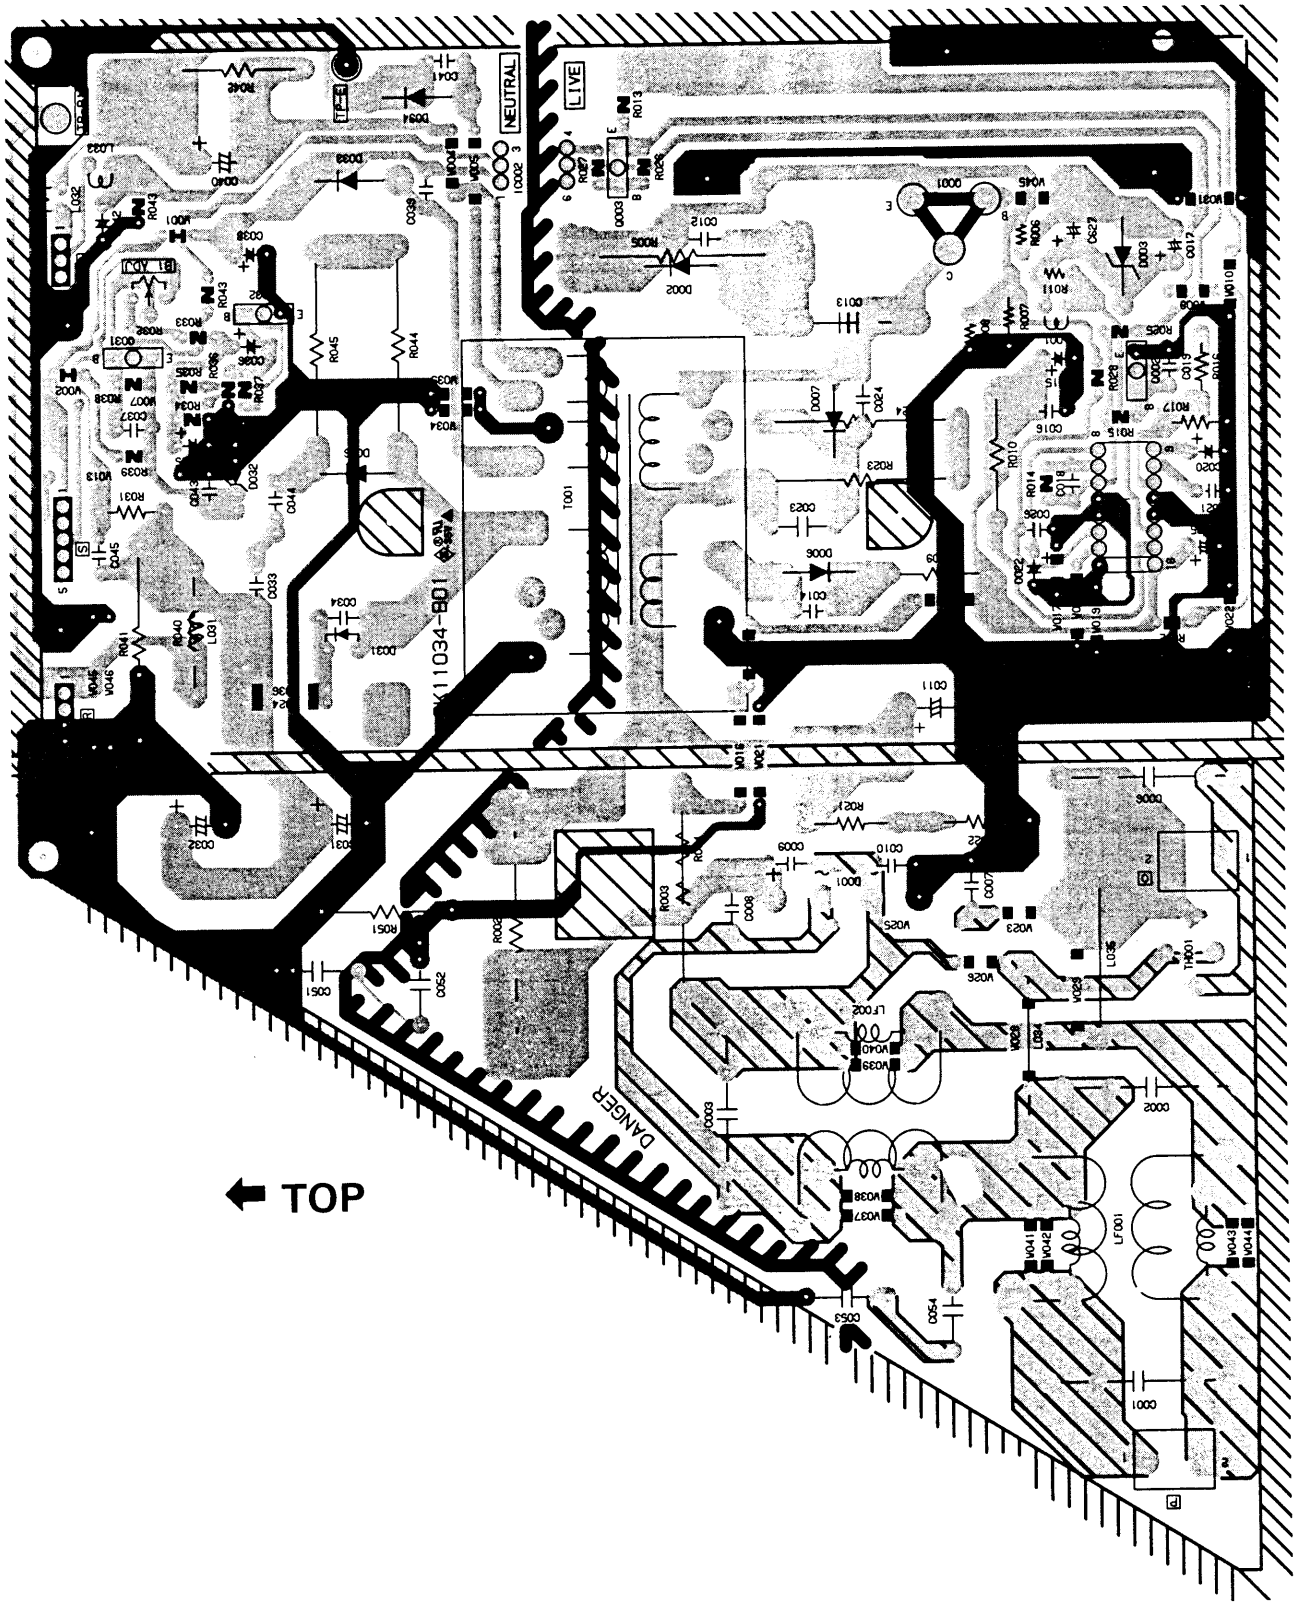
K11034-B01
NEUTRAL
LIVE
DANGER
TOP

■ LINE FILTER PCB BACK PATTERN

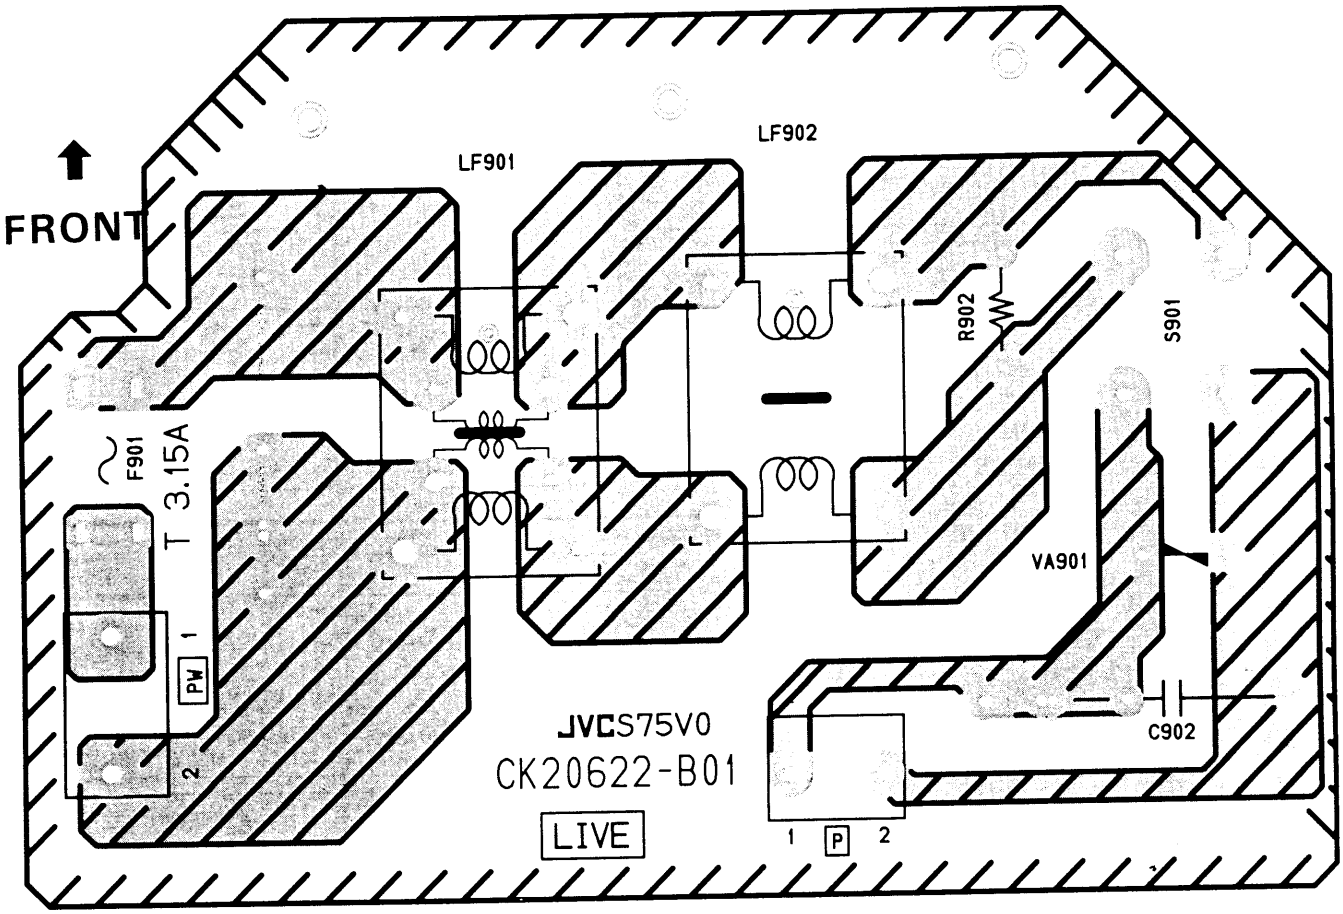

■ REMOTE CONTROL TRANSMITTER SCHEMATIC DIAGRAM